


ELECTRIC AND 4 CYCLE GASOLINE POWERED TRUCK

SERVICE PARTS MANUAL

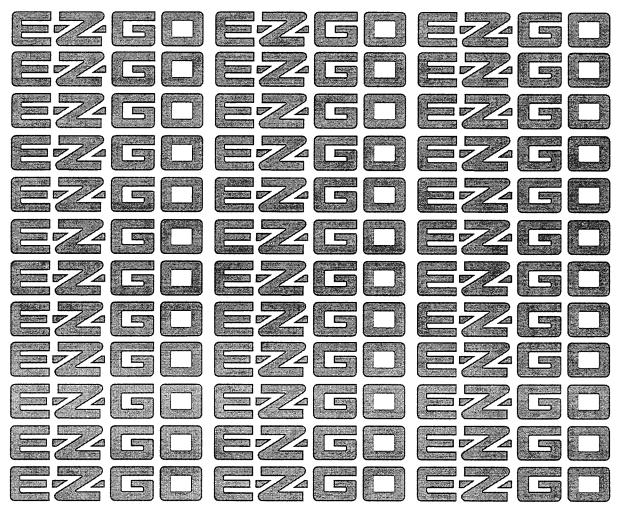

MODEL YEARS: 95/96

MANUAL NO. 28269-G01

ISSUED: 05/30/95

SERVICE PARTS MANUAL

ELECTRIC AND GASOLINE POWERED TRUCK

TRUCKS

XI - 500

XT - 500

GXI - 804 TUFF 1

GXT - 804 TUFF 1

CUSTOMER SERVICE DEPARTMENT PHONE 1-800-227-7029 FAX 1-800-752-6175 E-Z-GO DIVISION OF TEXTRON, INC., P.O.BOX 388, AUGUSTA, GEORGIA 30903-0388, 1-800-241-5855

LIMITED WARRANTY

WARRANTY

TO OBTAIN A COPY OF THE LIMITED WARRANTY THAT IS APPLICABLE TO THE VEHICLE, CALL OR WRITE THE LOCAL DISTRIBUTOR, BRANCH OR E-Z-GO WARRANTY DEPARTMENT WITH VEHICLE SERIAL NUMBER AND MANUFACTURE CODE.

THE USE OF NON E-Z-GO PARTS MAY VOID THE WARRANTY.

OVERFILLING OF BATTERIES MAY VOID THE WARRANTY.

TAMPERING WITH OR ADJUSTING OF GOVERNOR TO PERMIT THE VEHICLE TO OPERATE AT ABOVE FACTORY SETTINGS (15 MPH) WILL VOID YOUR VEHICLE WARRANTY.



ENGINE EXHAUST FROM THIS PRODUCT CONTAINS CHEMICALS KNOWN, IN CERTAIN QUANTITIES, TO CAUSE CANCER, BIRTH DEFECTS, OR OTHER REPRODUCTIVE HARM.

SECTIONS	**************	***************************************	Page No.
How to use the E-Z-GO Service Manu			
California Emissions Warrantry State			
Illustrated Parts Breakdow	n:		
	ELECTRIC	GASOLINE	ELECTRIC/GASOLINE
	TRUCK	TRUCK	TRUCK
Illustration	Page No.	Page No.	Page No.
ACCELERATOR LINKAGE	A-1	А-3	
 Accelerator Pedal 			
 Accelerator Rod 			
BATTERY CHARGER, TOTAL CHAR 36 VOLT (UL) CSA	GE® III, B-1		
 Onboard 			
 Portable 			
BODY AND ASSOCIATED PARTS	••••••	***************************************	C-1
 Bagwell 			
 Battery Racks 			
 Center Console 			
 Floorboard 			
 Direction Selector Indicator 			
 Hip Handhold 			
 Seat Wrap 			
 Vinyl Bumper Body Trim 			
BRAKE LINKAGES	***************************************	***************************************	D-1
 Brake Linkage 			
 Brake Pedal 			
 Compensating Link 			
CARBURETOR		E-1	
• Jets			
 Choke Valve 			
CLUTCHES		F-1	
 Drive Belt 			
 Drive Clutch 			
 Driven Clutch 			
DIRECTION SELECTOR	H-1	H-5	
 Contact Board 			

Illustrated Parts Breakde	own:		
	ELECTRIC	GASOLINE	ELECTRIC/GASOLINE
	TRUCK	TRUCK	TRUCK
Illustration	Page No.	Page No.	Page No.
ELECTRICAL SYSTEM		J-1	
Battery			
 Coil and Bracket 			
 Fuse Holder 			
 Ignition Switch 			
 Ignitor Unit 			
 Voltage Regulator 			
 Wiring Harness, Starter 	/Generator		
ENGINE AND MUFFLER		K-1	
 Air Cleaner 			
 Engine 			
 Muffler 			
 Oil Filter 			
 Spark Plug 			
 Spark Plug Wire 			
ENGINE/STARTER MOUNTING.		L-1	
 Starter/Generator Belt 			
 Engine Mounts 			
 Isolation Mounts 			
 Engine Guard 			
FILTERED AIR SYSTEM		M-1	
Air Filter			
FRESH AIR INTAKE SYSTEM		N-1	
 Air Intake Box 			·
Air Box Gasket			
Air Hose			
FRONT SHIELD			
FRONT SUSPENSION	***************************************	••••••••••••	R-1
 Front Axle 			
• Hub			
• Idler			
Leaf Springs			
• Spindle			
 Tie Rod 			

Shock Aborbers

Illustrated Parts Breakdown:			
	ELECTRIC	GASOLINE	ELECTRIC/GASOLINE
	TRUCK	TRUCK	TRUCK
Illustration	Page No.	Page No.	Page No.
FUEL SYSTEM		S-1	
 Choke Cable 			
 Fuel Filter 			
 Fuel Gauge 			
 Fuel Pump 			
 Fuel Tank 			
HORN AND ACCESSORY WIRING			T-1
 Headlamp 			
• Horn			
 Rear Lamp 			
 State of Charge Meter 			
 Turn Signal 			
 Wire Harness 			
MOTOR, 2 HP	U-1		
POWER WIRING	V-1		
 Charger Wiring Harness 			
 Direction Selector Wiring Indicat 	or		
 Ignition Switch Kit 			
REAR AXLE	W-1	W-3	
 Rear Axle 			
 Rear Axle Shaft 			
 Vent Valve 			
REAR SUSPENSION	X-1	X-5	
 Leaf Springs 			
 Shock Absorber 			
 Spring Shackle 			
SEATING	Y-1		
SEATING (GXI/T-804 TUFF 1)	**********	Y-3	
SOLID STATE SPEED CONTROL			
 Control Rod 			
 Electronic Speed Control 			

• Mounting Assembly

• Speed Control Cover

• Solenoid

Illustrated Parts Breakdown:

	ELECTRIC TRUCK	GASOLINE TRUCK	ELECTRIC/GASOLINE TRUCK
Illustration	Page No.	Page No.	Page No.
STATER/GENERATOR		AA-1	
Brush			
Pulley			
Terminal			
STEERING	••••••	•••••	BB-1
 Rack and Rod 			
 Steering Unit 			
 Steering Wheel 			
TRUCK BED	CC-1		
TRUCKBED (BOLT DOWN)		CC-7	
TRUCK BED AND ELECTRIC LIFT UNIT	••••••	CC-11	
WHEEL BRAKE	•••••		DD-1
 Brake Assembly 			
Brake Drum			
 Brake Shoe Set 			
 Lug Bolt 			
WHEELS AND TIRES	•••••		EE-1
• Tire			
 Tire and Wheel Rim 			
 Valve Stem 			
Wheel Rim			
SPECIAL TOOLS LISTING			Annendiy-A

HOW TO USE THE E-Z-GO SERVICE PARTS MANUAL

This manual is divided into several sections:

- GENERAL INFORMATION
- ILLUSTRATED PARTS BREAKDOWN FOR ELECTRIC AND 4 CYCLE GASOLINE POWERED TRUCKS
- SPECIAL TOOLS LISTING

The first section, GENERAL INFORMATION, contains the following information:

- •WARRANTY INFORMATION
- •GENERAL INDEX
- •HOW TO USE THE E-Z-GO SERVICE PARTS MANUAL

The second section, ILLUSTRATED PARTS BREAKDOWN (IPB) FOR THE ELECTRIC AND 4 CYCLE GASOLINE POWERED TRUCKS, contains illustrations and parts lists for all systems of the vehicle.

The third section, SPECIAL TOOLS, contains a listing of E-Z-GO service accessories and special tools and that may be purchased from the company to aid in the servicing of the vehicle.

USE OF THE MANUAL


To use this manual, consult the GENERAL INDEX to locate the information or illustration required.

Introduction of some revisions varies due to supply of components; therefore, it is possible that various combinations of components may be found that are not directly reflected by each illustration. Consult the illustration that best suits your situation and then contact the Service Parts Department. It is important that the serial number of your vehicle and its model number be supplied to Service Parts when ordering any replacement components.

Locate the serial number plate (see Model Details located in the IPB section of this manual for its location) and note the complete vehicle serial number and manufacture code shown on the plate.

All relevant systems are listed in the General Index and has an alphabetical prefix. The illustration always appears first and is followed by its related parts list.

HOW TO USE THE E-Z-GO SERVICE PARTS MANUAL

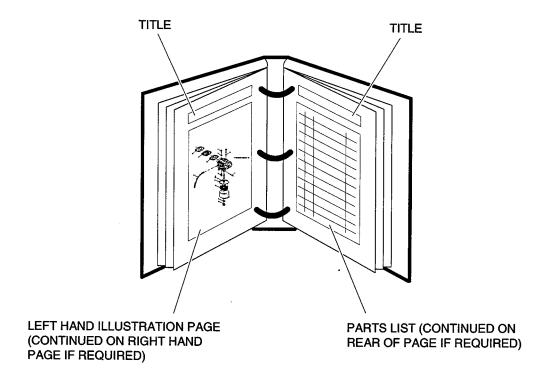

1. WHEN THE PART NUMBER IS NOT KNOWN

- Determine the function and application of the part required. Turn to the General Index and select the most appropriate title.
- Turn to the page number indicated and locate the desired part on the illustration.
- From the illustration, obtain the item number assigned to the desired part. Refer to the accompanying description for specific information regarding the part.

2. IF YOU KNOW THE PART NUMBER

Locate the part number or description in the appropriate column on the parts list page.


NOTE: It is suggested that you confirm that the part selected is correct by verifying it with the pictorial representation on the illustrated page.

Should an asterisk (*) appear in the part number column on the parts list page, read upwards until a part number is found. The part number is the *lowest* assembly sold by E-Z-GO and the asterisk (*) indicates that the part depicted is not available for sale by E-Z-GO.

NOTE: Descriptions are *indented* under the assembly that they are used on. That assembly is, in turn listed under the assembly that it is used on. This process is repeated until the highest *final assembly* is reached.

To facilitate the maintenance and repair of the vehicle, a Technicians Repair and Service Manual [E-Z-GO p/n 25122-G1(XI-500, XT-500) and E-Z-GO p/n 27206-G01 (GXT-804, GXI-804 TUFF 1)] is available from the E-Z-GO Service Parts Department.


ILLUSTRATED PARTS BREAKDOWN	

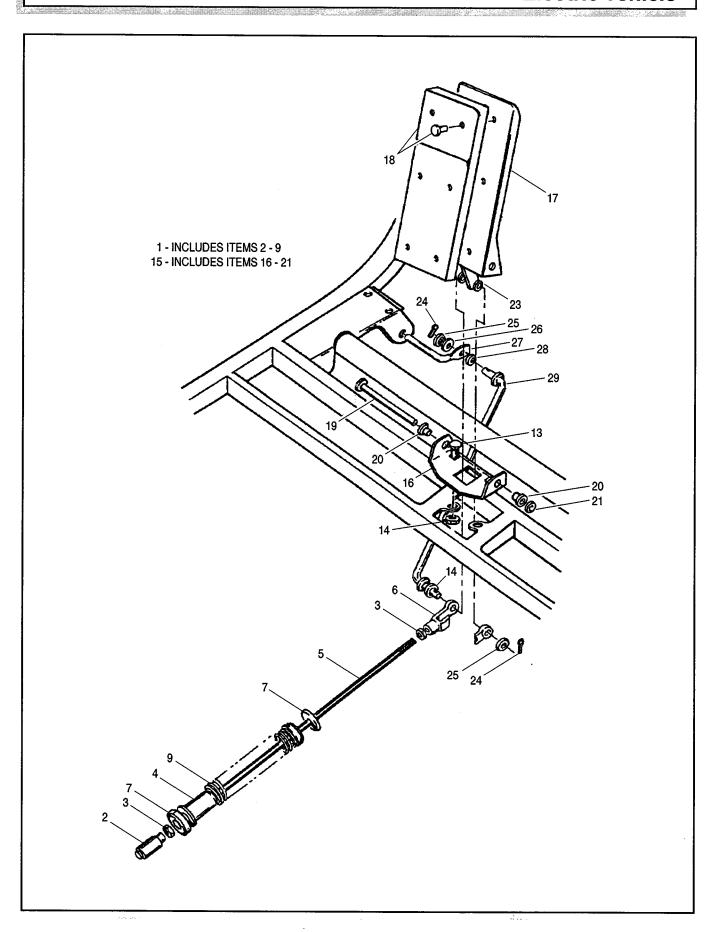



ACCELERATOR LINKAGE

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	25780-G1	ACCELERATOR ROD ASSEMBLY (INCLUDES ITEMS 2 - 9)	. 1
2	14444-G3	BALL JOINT, SOCKET	. 1
3	00554-G4	NUT, 5/16 - 24	. 2
4	17979-G1	BUSHING, ACCELERATOR ROD	. 1
5	23613-G1	ROD, ACCELERATOR	. 1
6	10385-G4	YOKE, CLEVIS	. 1
7	17677-G1	RETAINER, SPRING	. 2
8			
9	17675-G1	SPRING, COMPRESSION	1
10			
11			
12			
13	00414-G6	BOLT, CARRIAGE, 1/4 - 20 X 3/4 LG	2
14	11027-G2	NUT, LOCK, 1/4 - 20	2
15	18083-G2	ACCELERATOR PEDAL ASSEMBLY (INCLUDES ITEMS 16 - 21)	
16	12511-G1	BASE PLATE, ACCELERATOR	1
17	18084-G1	PEDAL, ACCELERATOR	. 1
18	27844-G01	ACCELERATOR PEDAL PAD KIT (INCLUDES RIVETS)	1
19	12512-G1	PIN, ACCELERATOR PEDAL	1
20	12513-G1	BEARING	. 2
21	12064-G2	PUSHNUT, 1/4	1
22			
23	17255-G1	WASHER, TEFLON	. 1
24	10387-G3	PIN, COTTER, 3/16 X 3/4 LG	
25	00559-G8	WASHER, 5/16	1
26	20835-G1	WASHER, NYLON	1 1
27	19708-G1	ARM, PIVOT	
28	17838-G1	BUSHING	1
29	19707-G1	ROD, LINKAGE	

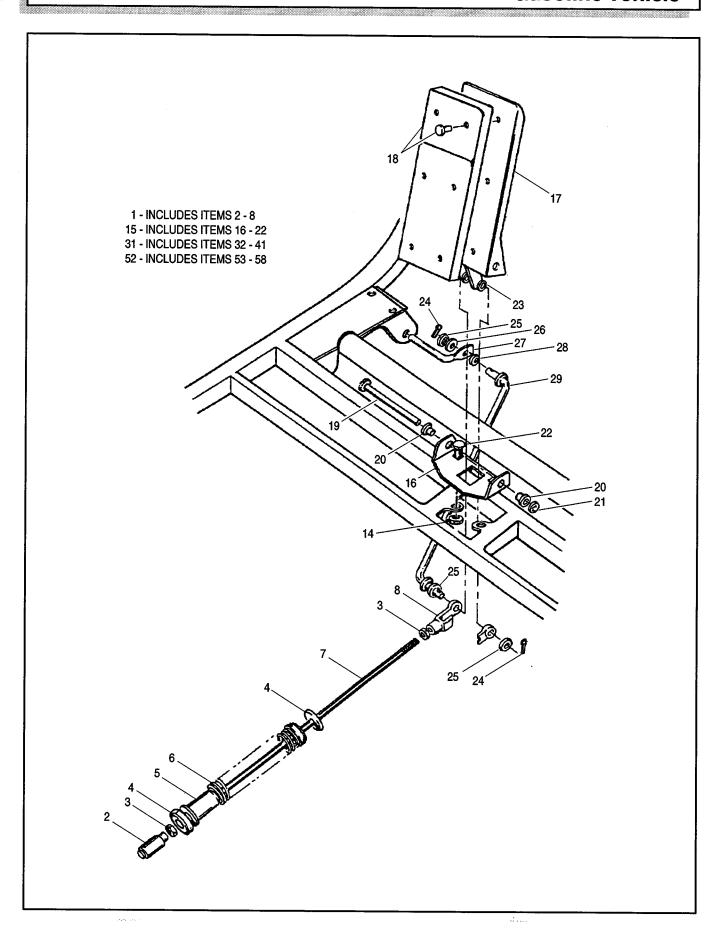

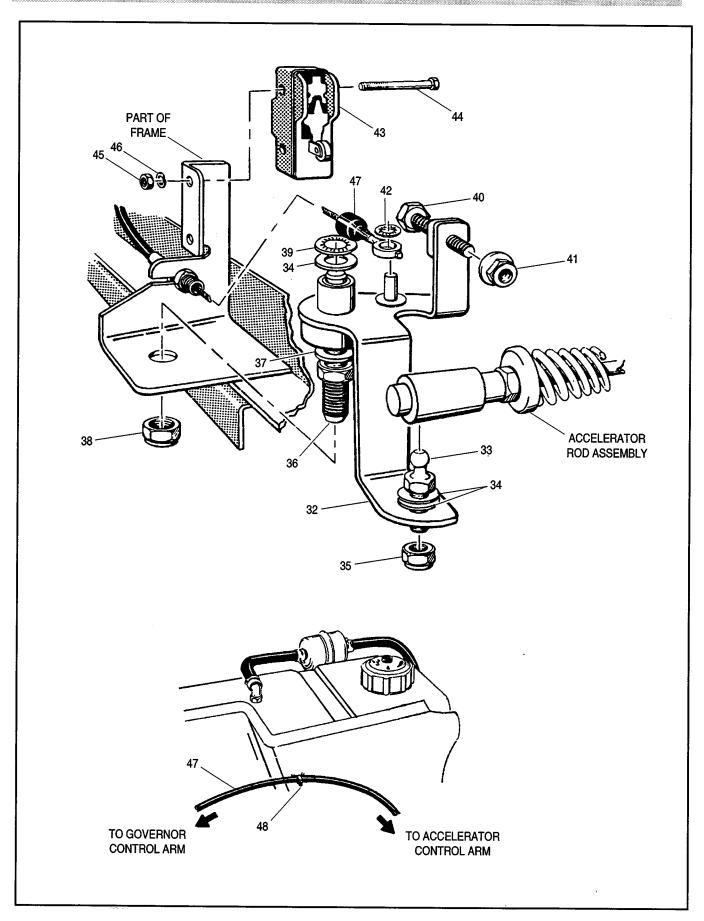

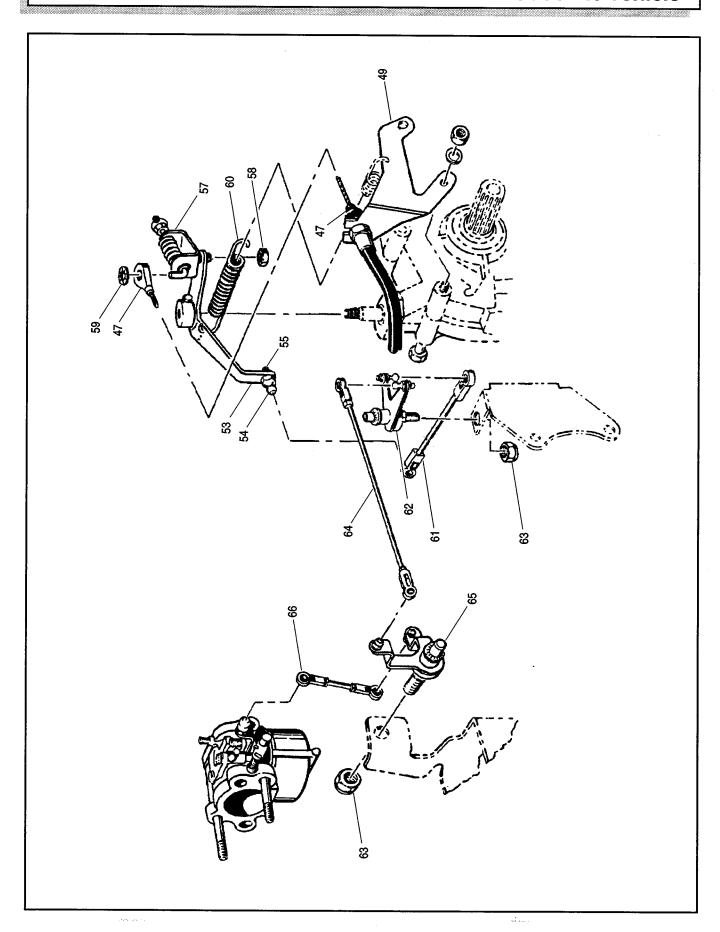

Gasoline Vehicle

ACCELERATOR LINKAGE


1 2	18091-G1		
	10001 01	ACCELERATOR ROD ASSEMBLY (INCLUDES ITEMS 2 - 8)	1
-	14444-G3	BALL JOINT, SOCKET	. 1
3	00544-G4	NUT, 5/16 - 24	. 2
4	17677-G1	RETAINER, SPRING	2
5	17979-G1	BUSHING, ACCELERATOR ROD	. 1
6	17675-G1	SPRING, COMPRESSION	1
7	19710-G1	ROD, ACCELERATOR	. 1
8	10385-G4	YOKE, CLEVIS	1
9			
10			
11			
12			
13			
14	11027-G2	NUT, LOCK, 1/4 - 20	2
15	18083-G2	ACCELRATOR PEDAL ASSEMBLY (INCLUDES ITEMS 16 - 22)	. 1
16	12511-G1	BASE PLATE, ACCELERATOR	, 1
17	18084-G1	PEDAL, ACCELERATOR	1
18	27844-G01	ACCELRATOR PEDAL PAD KIT (INCLUDES RIVETS)	. 1
19	12512-G1	PIN, ACCELERATOR PEDAL	1
20	12513-G1	BEARING	2
21	12064-G1	PUSHNUT, 1/4	. 1
22	26480-G01	BOLT, CARRIAGE, 1/4 - 20 X 3/4 LG	2
23	17255-G1	WASHER, TEFLON	2
24	10387-G3	PIN, COTTER, 3/16 X 3/4 LG	2
25	00559-G8	WASHER, 5/16	з
26	20835-G1	WASHER, NYLON	. 1
27	19708-G1	ARM, PIVOT	. 1
28	17838-G1	BUSHING	. 1
29	24030-G1	ROD, LINKAGE	. 1
30			


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	25338-G1	CONTROL ARM ASSEMBLY (INCLUDES ITEMS 32 - 41)	1
32	25337-G1	ARM, CONTROL	1
33	15944-G3	BALL JOINT BALL	1
34	00559-G8	WASHER, 5/16	2
35	11098-G9	NUT, LOCK, 5/16 - 24	1
36	25768-G01	ROD, PIVOT	1
37	24621-G1	WASHER, NYLON	1
38	14390-G1	NUT, LOCK, 3/8 - 24	1
39	12064-G1	PUSHNUT, 5/16	1
40	18759-G1	SCREW, STAINLESS STEEL, 1/4 - 20 X 1 LG	1
41	11027-G2	NUT, LOCK, 1/4 - 20	1
42	12064-G3	PUSHNUT, 3/16	1
43	10606-G2	SWITCH, MICRO	1
44	00957-G1	SCREW, #6 - 32 X 1 1/4 LG	1
45	00525-G5	NUT, #6 - 32	1
46	00565-G3	WASHER, LOCK, #6	1
47	25694-G01	CABLE, ACCELERATOR	1
48	25956-G01	CLAMP, PUSH MOUNT	1
49	25653-G01	BRACKET, ACCELERATOR CABLE	1
50			
51			
52	25690-G02	GOVERNOR CONTROL ARM ASSEMBLY (INCLUDES ITEMS 53 - 58)	1
53	25765-G01	ARM, GOVERNOR CABLE	1
54	24479-G1	BALL JOINT BALL	1
55	00734-G5	NUT, LOCK, #10 - 32	1
56			
57	22751-G3	BRACKET, GOVERNOR	1
58	14390-G4	NUT, LOCK, 1/4 - 20	1
59	12064-G3	PUSHNUT	1
60	25738-G01	SPRING	1

Gasoline Vehicle

ACCELERATOR LINKAGE

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
61	25737-G03	ROD, GOVERNOR LINKAGE	1
62	25763-G01	ARM, GOVERNOR PIVOT	1
63	14390-G1	NUT, LOCK, 3/8 - 24	2
64	25737-G02	ROD, LONG THROTTLE LINKAGE (COMPLETE)	1
65	25760-G01	ARM, CARBURETOR PIVOT	1
66	25737-G01	ROD, CARBURETOR LINKAGE, SHORT	1

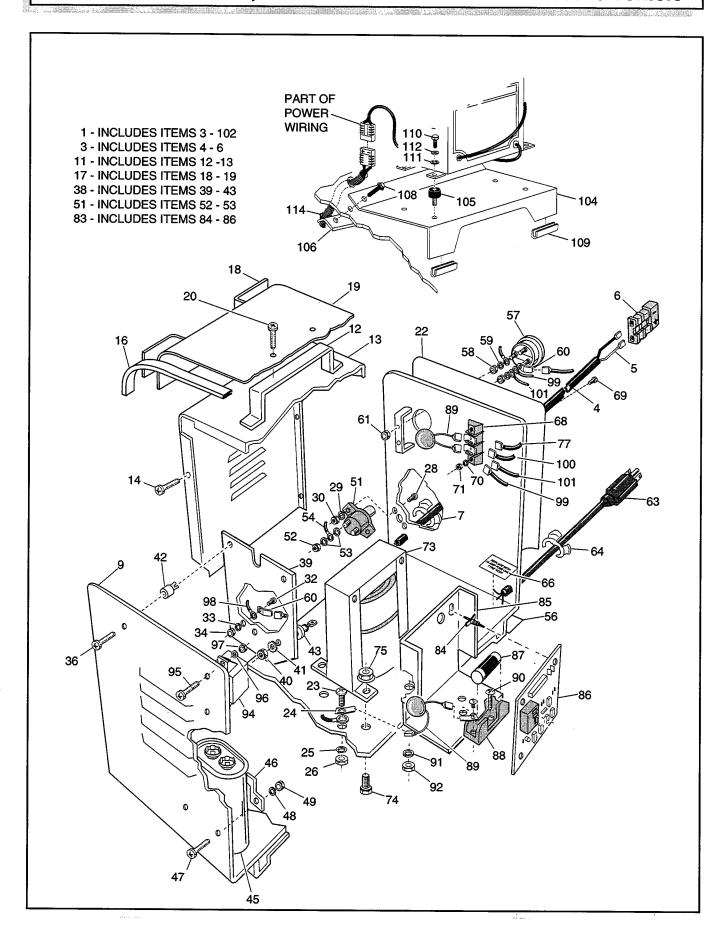

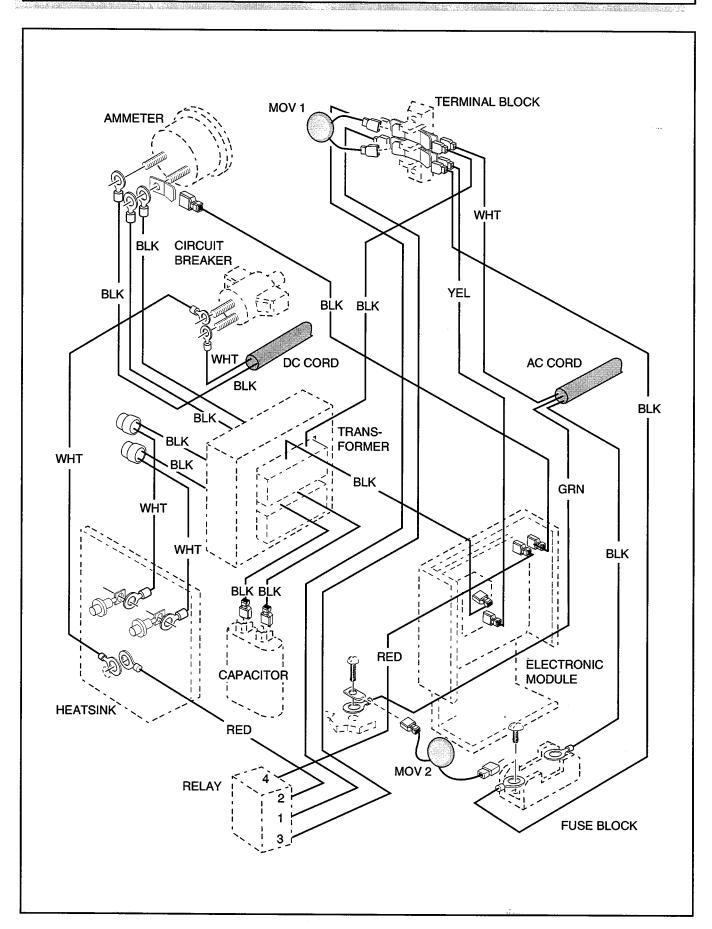

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	26986-G01	BATTERY CHARGER, 36 V, TOTAL CHARGE III, ONBOARD (INCLUDES ITEMS 3 - 102)	1
2			
3	22052-G1	DC CORD ASSEMBLY (INCLUDES ITEMS 4 - 6)	1
4	*	DC CORD	1
5	28030-G01	CONTACT, CONNECTOR (INCLUDES ITEM 6)	2
6	*	CONNECTOR, BLACK	1
7	13557-G3	STRAIN RELIEF (DC CORD)	1
8			
9	24920-G1	CHASSIS	1
10			
11	19092-G2	TOP COVER ASSEMBLY (INCLUDES ITEMS 12, 13)	1
12	*	BRACKET, CHARGER HANDLE	1
13	*	TOP	1
14	00614-G4	SCREW, #8 - 18 X LG	10
15			
16	18970-G1	STRIP, PROTECTOR SHIELD	1
17	22047-G1	SHIELD ASSEMBLY (INCLUDES ITEMS 18, 19)	1
18	*	BAR, CORD HOLDER	1
19	*	SHIELD	1
20	00614-G4	SCREW, #8 - 18 X LG	6
21			
22	*	LABEL, OPERATING INSTRUCTIONS (SERIALIZED)	1
23	00372-G3	SCREW, #8 - 32 X 3/8 LG	1
24	12914-G1	TAB, FASTON	1
25	00565-G4	WASHER, LOCK, #8	1
26	00526-G1	NUT, #8 - 32	1
27			
28	00372-G6	SCREW, #8 - 32 X 3/4 LG.	2
29	00565-G4	WASHER, LOCK, #8	2

BATTERY CHARGER, ONBOARD

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
30	00526-G1	NUT, #8 - 32	. 2
31			
32	00378-G4	SCREW, #10 - 24 X 1/ 2 LG	1
33	00565-G5	WASHER, LOCK, #10	. 1
34	00526-G3	NUT, #10 - 24	. 1
35			
36	00512-G7	SCREW, #8 - 18 X 7/8 LG	3
37			
38	18768-G1	HEAT SINK ASSEMBLY (INCLUDES ITEMS 39 - 43)	. 1
39	18489-G1	HEAT SINK	. 1
40	00532-G2	NUT, 1/4 - 28	. 2
41	00567-G7	WASHER, LOCK, #12	2
42	11572-G2	NUT, PLASTIC EXPANSION	3
43	18488-G1	DIODE, SILICON RECTIFIER	2
44			
45	17077-G1	CAPACITOR	. 1
46	11559-G1	BRACKET, CAPACITOR	. 1
47	00372-G4	SCREW, #8 - 32 X 1/2 LG	2
48	00565-G4	WASHER, LOCK, #8	. 2
49	00526-G1	NUT, #8 - 32	2
50		·	
51	19362-G1	CIRCUIT BREAKER (INCLUDES ITEMS 52 - 53)	. 1
52	00526-G4	NUT, #10 - 32	. 2
53	00559-G5	WASHER, #10	4
54	19441-G1	WIRE	. 1
55			ĺ
56	25775-G01	LABEL, CHARGER WARNING	. 1
57	24243-G1	AMMETER (INCLUDES BRACKET)	. 1
58	00526-G4	NUT, #10 - 32	2
59	00565-G5	WASHER, LOCK, #10	2

BATTERY CHARGER, ONBOARD

Electric Vehicle


THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
60	12914-G1	TAB, FASTON	2
61	00525-G5	NUT, #6 - 32	2
62			
63	19388-G1	AC CORD	1
64	13557-G2	STRAIN RELIEF (AC CORD)	1
65			
66	19434-G1	LABEL, FUSE	1
67			
68	26962-G01	BLOCK, TERMINAL	1
69	00987-G06	SCREW, #6 - 32 X 3/4 LG	2
70	00565-G3	WASHER, LOCK, #6	2
71	00525-G5	NUT, #6 - 32	2
72			
73	19372-G8	TRANSFORMER	1
74	00414-G5	SCREW, 1/4 - 20 X 5/8 LG	4
75	11027-G2	NUT, LOCK, 1/4 - 20	4
76			
7 7	19402-G1	WIRE	1
78			
79			
80		·	
81			
82			
83	19460-G1	ELECTRONIC MODULE ASSEMBLY (INCLUDES ITEMS 84 - 86)	1
84	27877-G01	SPACER, STANDOFF	4
85	19459-G1	BRACKET	1
86	27417-G01	ELECTRONIC MODULE	1
87	19361-G1	FUSE	1
88	19363-G1	FUSE BLOCK	1

BATTERY CHARGER, ONBOARD

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
89	26320-G01	MOV	2
90	00372-G5	SCREW, #8 - 32 X 5/8 LG	2
91	00565-G4	WASHER, LOCK, #8	2
92	00526-G4	NUT, #8 - 32	2
93			
94	21971-G1	RELAY	. 1
95	00138-G5	SCREW, #6 - 32 X 5/8 LG	2
96	00565-G3	WASHER, LOCK, #6	2
97	00525-G5	NUT, #6 - 32	2
98	*	WIRE	. 1
99	*	WIRE	. 1
100	22992-G1	WIRE	1
101	25977-G07	WIRE	1
102	26340-G01	WIRE	. 1
103			
104	30470-G1	CHARGER SUPPORT	. 1
105	32478-G1	MOUNT, ISOLATION	4
106	30468-G1	REINFORCEMENT	. 1
107			
108	13437-G4	SCREW, LOCK, 3/8 - 16 X 1 LG	. 2
109	22281-G3	TRIM, 1 1/2 LG	. 2
110	16705-G4	SCREW, STAINLESS STEEL	4
111	00660-G7	WASHER, STAINLESS STEEL, 1/4	. 4
112	00565-G7	WASHER, LOCK, 1/4	
113			
114	17618-G1	CLAMP, NYLON	. 1

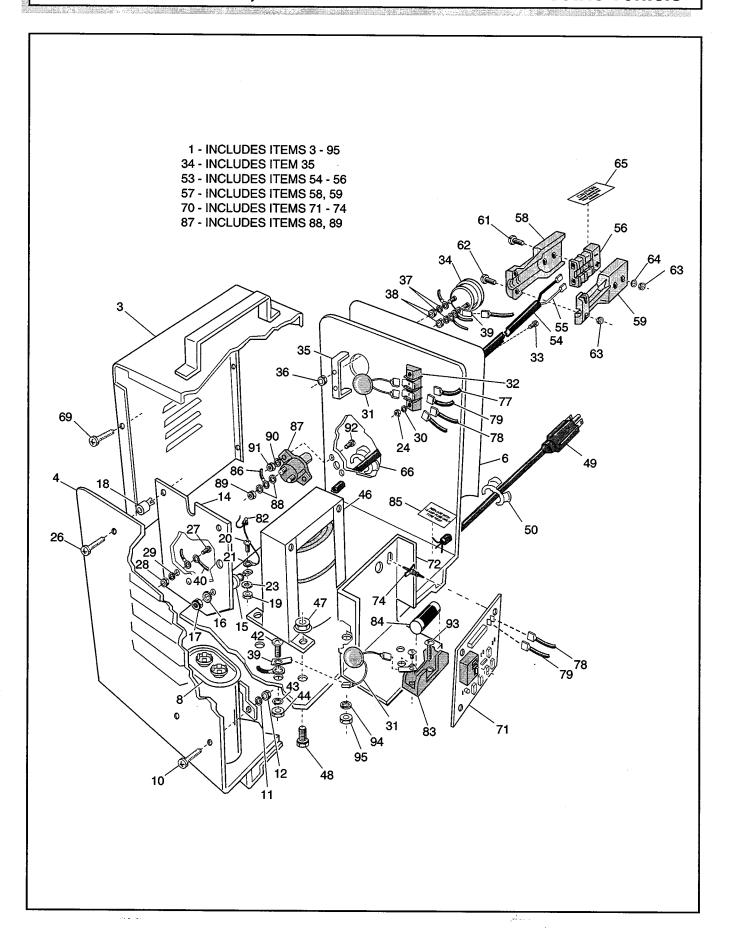

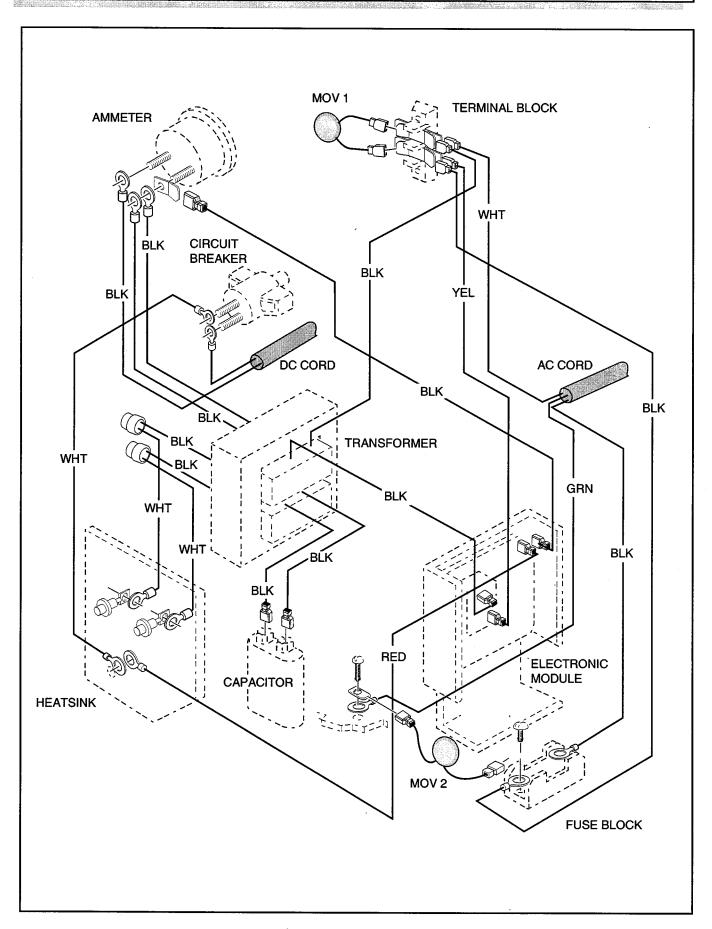

BATTERY CHARGER, PORTABLE

Electric Vehicle

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	26984-G01	BATTERY CHARGER ASSEMBLY, TOTAL CHARGE® III, PORTABLE 36V, 10 FT. D.C. CORD (INCLUDES ITEMS 3 - 95)	1
2		TOTTABLE 30V, TO FT. D.C. COND (INCLUDES TEMS 3 - 95)	•
3	19096-G1	TOP COVER	1
4	24919-G1	CHASSIS	
5	24010 01	OI IAGGIG	
6	*	LABEL, OPERATING INSTRUCTIONS (SERIALIZED)	1
7		LABEL, OF ETIATING INSTITUTIONS (SERIALIZED)	•
8	17077-G1	CAPACITOR (WITH MOUNTING BRACKET)	1
9		S, W, NO. 1 GT. (WITT MICENTING ET IAGICE 1)	'
10	00372-G4	SCREW, #8 - 32 X 1/2 LG	2
11	00565-G4	WASHER, LOCK, #8	2
12	00526-G1	NUT, #8 - 32	2
13			
14	18768-G1	HEATSINK	1
15	18488-G1	DIODE, SILICON RECTIFIER	2
16	00567-G7	WASHER, LOCK, 1/4	2
17	00532-G2	NUT, 1/4 - 28	2
18	11572-G2	NUT, PLASTIC EXPANSION	3
19	00525-G5	NUT, #6 - 32	2
20	00138-G3	SCREW, #6 - 32 X 3/8 LG	2
21	18769-G2	WIRE	2
22			
23	00567-G3	WASHER, LOCK, #6	2
24	00525-G5	NUT, #6 - 32	2
25			
26	00512-G7	SCREW, SELF TAPPING, #8 X 7/8 LG.	3
27	00378-G4	SCREW, #10 - 24 X 1/ 2 LG	1
28	00526-G3	NUT, #10 - 24	1
29	00565-G5	WASHER, LOCK, #10	1
	· · · · · · · · · · · · · · · · · · ·		

BATTERY CHARGER, PORTABLE

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
30	00565-G3	WASHER, #6 - 32	2
31	26320-G01	MOV	2
32	26962-G01	TERMINAL BLOCK	. 1
33	00987-G06	SCREW, #6 - 32 X 3/4 LG.	. 2
34	24243-G1	AMMETER (INCLUDES ITEM 35)	. 1
35	*	BRACKET, AMMETER	. 1
36	00525-G5	NUT, #6 - 32	. 2
37	00565-G5	WASHER, LOCK, #10	. 2
38	00526-G4	NUT, #10 - 32	. 2
39	12914-G1	TAB, FASTON	. 2
40	19952-G1	WIRE	. 1
41			
42	00372-G3	SCREW, #8 - 32 X 3/8 LG	. 1
43	00565-G4	WASHER, LOCK, #8	. 1
44	00526-G1	NUT, #8 - 32	. 1
45			
46	19928-G1	TRANSFORMER	. 1
47	11027-G2	NUT, LOCK, 1/4 - 20	4
48	00414-G5	BOLT, 1/4 - 20 X 5/8 LG	. 4
49	19388-G1	AC CORD	. 1
50	13557-G2	STRAIN RELIEF (AC CORD)	. 1
51			
52			
53	18747-G1	DC CORD ASSEMBLY (INCLUDES ITEMS 54 - 56)	. 1
54	*	DC CORD	1
55	28030-G01	CONNECTOR, CONTACT (INCLUDES ITEM 56)	2
56	*	CONNECTOR	1
57	18972-G1	CHARGER RECEPTACLE HANDLE KIT (INCLUDES ITEMS 58, 59)	1
58	*	HANDLE, HALF, L.H	1

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
59	*	HANDLE, HALF, R.H	1
60			
61	00647-G8	SCREW, STAINLESS STEEL, #6 - 32 X 29/32 LG	2
62	00647-G3	SCREW, STAINLESS STEEL, #6 - 32 X 3/8 LG	2
63	13521-G5	NUT, LOCK, #6 - 32	4
64	00650-G2	WASHER, #5	2
65	20628-G1	LABEL, CAUTION	1
66	13557-G3	STRAIN RELIEF (DC CORD)	1
67			
68			
69	00614-G4	SCREW, SELF TAPPING, #8 - 18 X 1/2 LG	10
70	19460-G1	ELECTRONIC MODULE ASSEMBLY (INCLUDES ITEMS 71 - 74)	1
71	27417-G01	ELECTRONIC MODULE	1
72	19459-G1	BRACKET	1
73			
74	27877-G01	SPACER, SUPPORT	4
75			
76			
77	19402-G1	WIRE	1
78	19949-G1	WIRE	1
79	19954-G1	WIRE	1
80			
81			
82	19360-G1	SPLICE, WIRE, CLOSED END	2
83	19363-G1	FUSE BLOCK	1
84	19361-G1	FUSE, 15 AMP	1
85	19434-G1	LABEL, IDENTIFICATION	1
86	19441-G1	WIRE	1
87	19362-G1	CIRCUIT BREAKER, 50 AMP (INCLUDES ITEMS 88, 89)	2

BATTERY CHARGER, PORTABLE


THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.


When ordering parts, please specify the model and serial number of the product.


* Indicates a component that is not available as an individual part.


G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
88	00559-G5	WASHER, #10	. 4
89	00526-G4	NUT, #10 - 32	. 2
90	00565-G4	WASHER, LOCK, #8	. 2
91	00526-G1	NUT, #8 - 32	. 2
92	00372-G6	SCREW, #8 - 32 X 3/4 LG	. 2
93	00372-G5	SCREW, #8 - 32 X 5/8 LG	. 2
94	00565-G4	WASHER, #8	. 2
95	00526-G1	NUT, #8 - 32	. 2

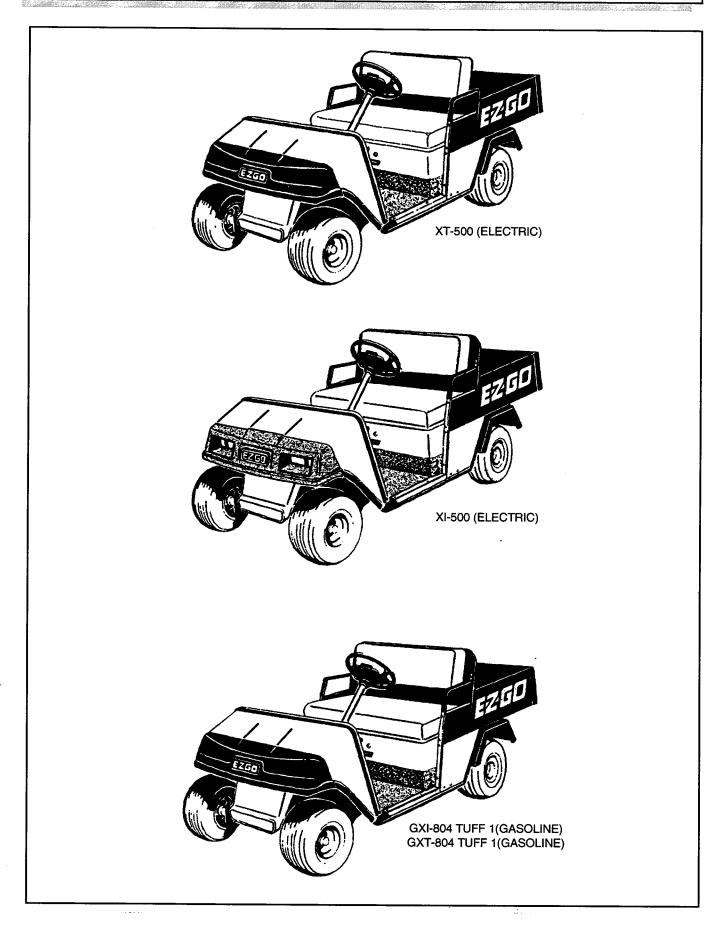

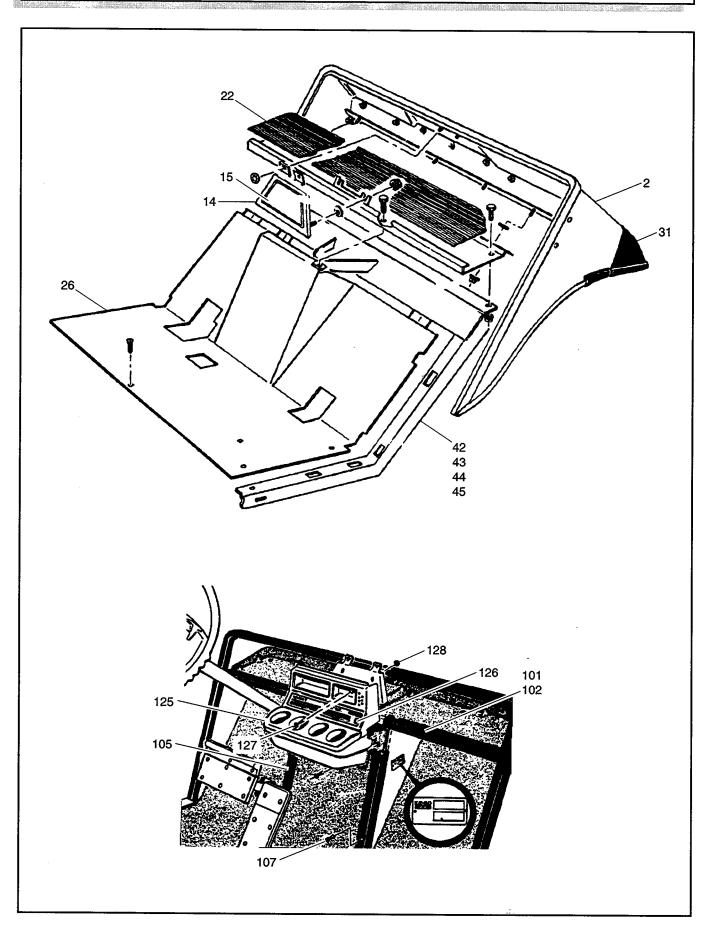

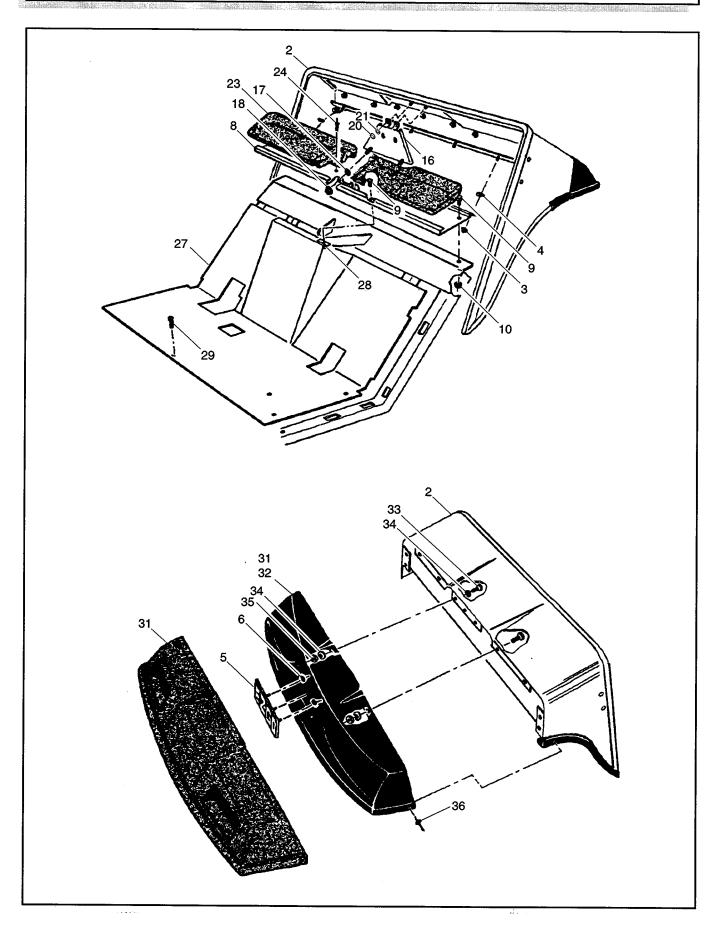

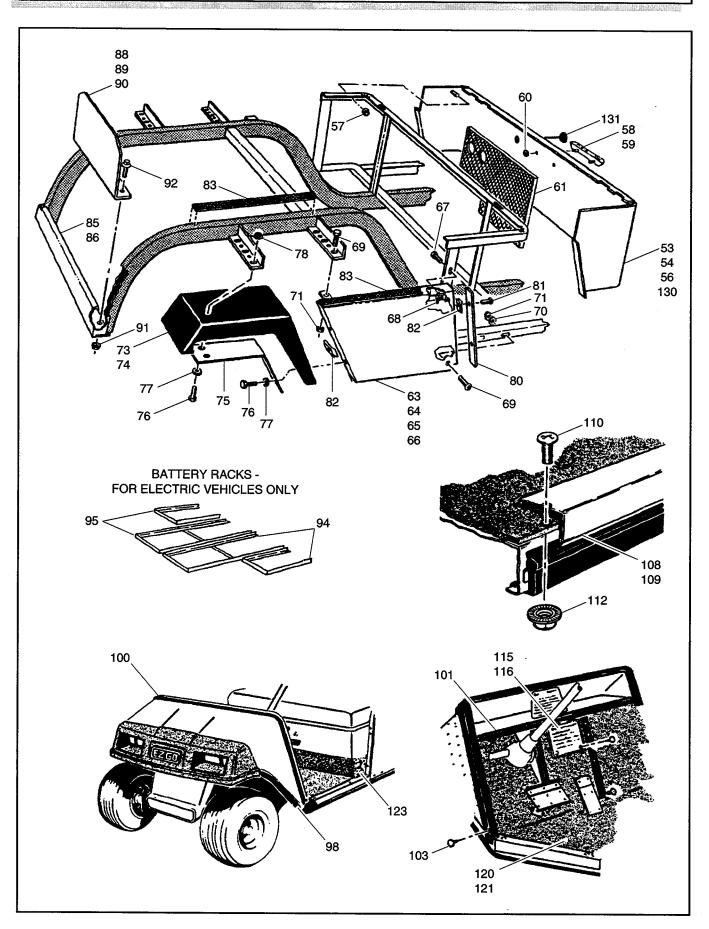

BODY AND ASSOCIATED PARTS

Electric/Gasoline Vehicle

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1			
2	26513-G02	COWL	1
3	11027-G2	NUT, 1/4 - 20	16
4	00559-G8	WASHER, 5/16	5
5	19817-G1	NAMEPLATE, E-Z-GO	1
6	12064-G3	PUSHNUT	3
7			
8	18353-G2	TRAY, DASH	1
9	00414-G6	SCREW, 1/4 - 20 X 3/4 LG	i i
10	11027-G2	NUT, LOCK, 1/4 - 20	3
11			
12			
13	17108-G1	SUPPORT, COWL (INCLUDES ITEMS 14, 15) XI-500	1
14	*	SUPPORT	l i
15	20412-G1	DECAL, WARNING	1
16	23148-G1	COWL SUPPORT (OPTIONAL ON XI-500)	1
17	00560-G1	WASHER, 3/8	2
18	11027-G2	NUT, 1/4 - 20	4
19			
20	27024-G01	RETAINER, PUSHON	2
21	24621-G1	WASHER, NYLON	2
22	17097-G1	MAT, DASH TRAY, XI-500	1
23	22911-G1	DASH TRAY LINER (INCLUDES ITEM 24) OPTIONAL ON XI-500	
24	18436-G1	RIVET	2
25			:
26	15671-G2	FLOORBOARD (INCLUDES ITEM 28) XI-500	1
27	15671-G3	FLOORBOARD (INCLUDES ITEM 28) OPTIONAL ON XI-500	1
28	14776-G1	"J" NUT, 1/4 - 20	2
29	00106-G6	SCREW, SELF TAPPING, #12 - 24 X 3/4 LG	23
30			

Electric/Gasoline Vehicle

BODY AND ASSOCIATED PARTS

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	27147-G01	COWL CAP, XI-500 AND GXI-804	. 1
32	27164-G01	COWL CAP, XT-500 AND GXT-804	1
33	00414-G2	SCREW, 1/4 - 20 X 3/4 LG	9
34	00559-G7	WASHER, 1/4 - 20	18
35	14390-G4	NUT, LOCK, 1/4 - 20	. 9
36	15058-G4	RIVET	. 2
37			
38			
39			
40			
41			
42	25454-G3	SIDERAIL, PASSENGER SIDE, XI/T-500	. 1
43	25454-G4	SIDERAIL, DRIVER'S SIDE, XI/T-500	1
44	15664-G2	SIDERAIL, PASSENGER SIDE, GXI/T-804	1
45	15665-G2	SIDERAIL, DRIVER'S SIDE, GXI/T-804	, 1
46			
47			
48			
49			
50			
51			
52			
53	20443-G3	SEATWRAP, XI-500	. 1
54	20443-G1	SEATWRAP, XT-500	1
55			
56	23961-G2	SEATWRAP, GXI/T-804 (AIR BOX MOUNT ON FRAME)	. 1
57	11027-G2	NUT, LOCK, 1/4 - 20	9
58	19882-G1	INDICATOR, DIRECTION SELECTOR, XI/T-500	1
59	23791-G4	INDICATOR, DIRECTION SELECTOR, XI/T-804	1
60	12064-G3	PUSHNUT	. 3

BODY AND ASSOCIATED PARTS

Electric/Gasoline Vehicle

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
61	22428-G1	SOUND CONTROL PANEL, GXI/T-804	1
62			
63	18982-G1	LOWER PANEL, PASSENGER SIDE, XI/T-500	1
64	18982-G2	LOWER PANEL, DRIVER'S SIDE, XI/T-500	1
65	18191-G3	LOWER PANEL, PASSENGER SIDE, GXI/T-804	1
66	18191-G4	LOWER PANEL, DRIVER'S SIDE, GXI/T-804	1
67	13437-G3	SCREW, 5/16 - 18 X 1 LG	2
68	11840-G1	SPEEDNUT, 5/16	2
69	16705-G2	SCREW, STAINLESS STEEL, 1/4 - 20 X 3/4 LG.	6
70	00559-G7	WASHER, 1/4	6
71	14390-G4	NUT, 1/4 - 20	6
72			
73	18213-G1	FENDER, PASSENGER SIDE	1
74	18213-G2	FENDER, DRIVER'S SIDE	1
75	18249-G1	BRACE, FENDER	2
76	00414-G6	SCREW, 1/4 - 20 X 3/4 LG.	8
77	00559-G7	WASHER, 1/4	8
78	11027-G2	NUT, LOCK, 1/4 - 20	4
79			
80	22224-G1	TRIM	2
81	16705-G1	SCREW, 1/4 - 20 X 1 LG	4
82	14776-G1	"J" NUT, 1/4 - 20	4
83	14382-G1	STRIP, NOISE SUPPRESSOR	4
84			
85	23800-G2	BUMPER, REAR	1
86			
87			
88	22282-G1	REAR SHIELD, TAILLIGHT MOUNTING, XI-500	1
89	19876-G1	REAR SHIELD	1
90	22291-G1	REAR SHIELD, TAILLIGHT MOUNTING, GXI-804	1

Electric/Gasoline Vehicle

BODY AND ASSOCIATED PARTS

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
91	11027-G2	NUT, LOCK, 1/4 - 20	. 2
92	13437-G9	SCREW, 1/4 - 20 X 3/4 LG	2
93			
94	25457-G2	BATTERY RACK, PASSENGER SIDE	1
95	25457-G3	BATTERY RACK, DRIVER'S SIDE	. 1
96			
97			
98	22888-G3	VINYL BUMPER BODY TRIM, FRONT AND SIDE	1
99			
100	22273-G1	VINYL BUMPER BODY TRIM, BACK OF COWL	1
101	17203-G4	DASH VINYL BUMPER BODY TRIM, XI-500	1
102	17203-G9	DASH VINYL BUMPER BODY TRIM, XT-500, GXI/T-804	1
103	15058-G2	RIVET	4
104			
105	24620-G3	TRIM, FLOORMAT (CUT TO LENGTH)	2
106			
107	18436-G1	RIVET	. 8
108	22223-G1	TRIM, ROCKER PANEL, PASSENGER SIDE	1
109	22223-G2	TRIM, ROCKER PANEL, DRIVER' S SIDE	. 1
110	00827-G8	BOLT, CARRIAGE, STAINLESS STEEL, 1/4 - 20 X 1 LG	. 2
111		·	
112	00891-G2	NUT, LOCK, 1/4 - 20	4
113			
114	17117-G2	DECAL AND PLATE ASSEMBLY (INCLUDES ITEMS 115, 116) XI-500	1
115	*	PANEL, MOUNTING PLATE	. 1
116	23446-G1	LABEL, OPERATING INSTRUCTIONS	. 1
117	15058-G2	RIVET	. 3
118			
119			
120	25091-G2	FLOORMAT (WITH HOLES FOR BATTERY CHARGER) XI-500	. 1

BODY AND ASSOCIATED PARTS

Electric/Gasoline Vehicle

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.


* Indicates a component that is not available as an individual part.


G** Indicates consult Customer Service Department for additional information.


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
121	25091-G1	FLOORMAT	1
122			
123	26437-G1	SCUFF GUARD, SEAT WRAP	1
124			
125	26570-G**	CENTER CONSOLE (INCLUDES ITEM 126) SPECIFY MODEL WHEN ORDERING	1
126	*	LABEL, SAFETY	1
127	18436-G1	RIVET	4
128	00559-G7	WASHER, 1/4	2
129			
130	23692-G5	SEAT WRAP, GXI/T-804 TUFF 1 ONLY	1
131	20271-G2	HOLE PLUG, GXI/T-804 TUFF 1 ONLY	1
		·	
			1

Electric/Gasoline Vehicle

BODY AND ASSOCIATED PARTS

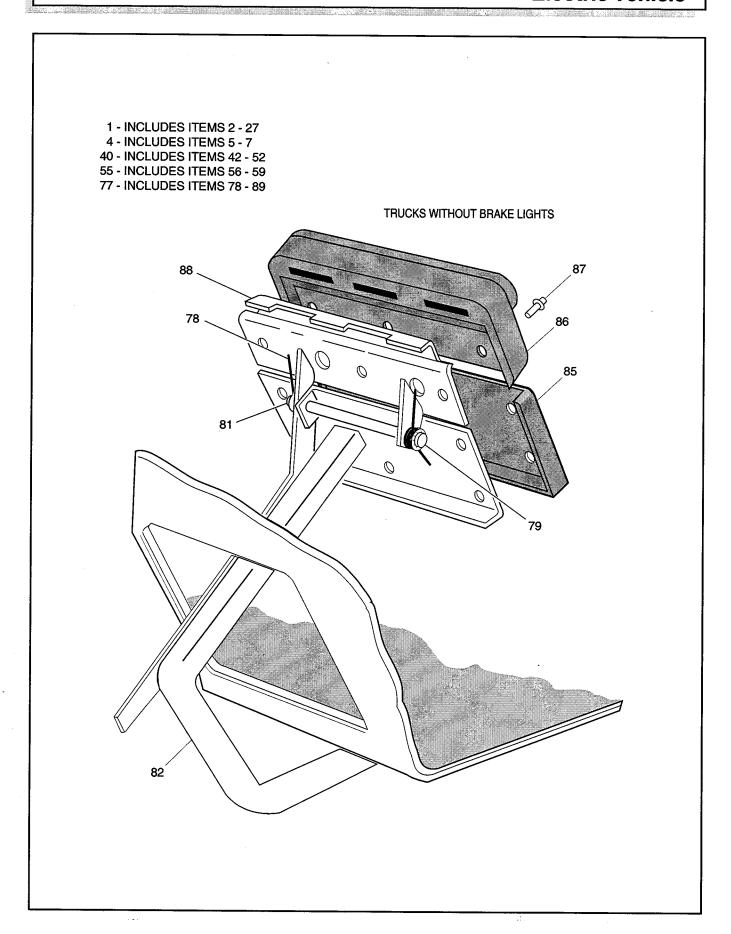

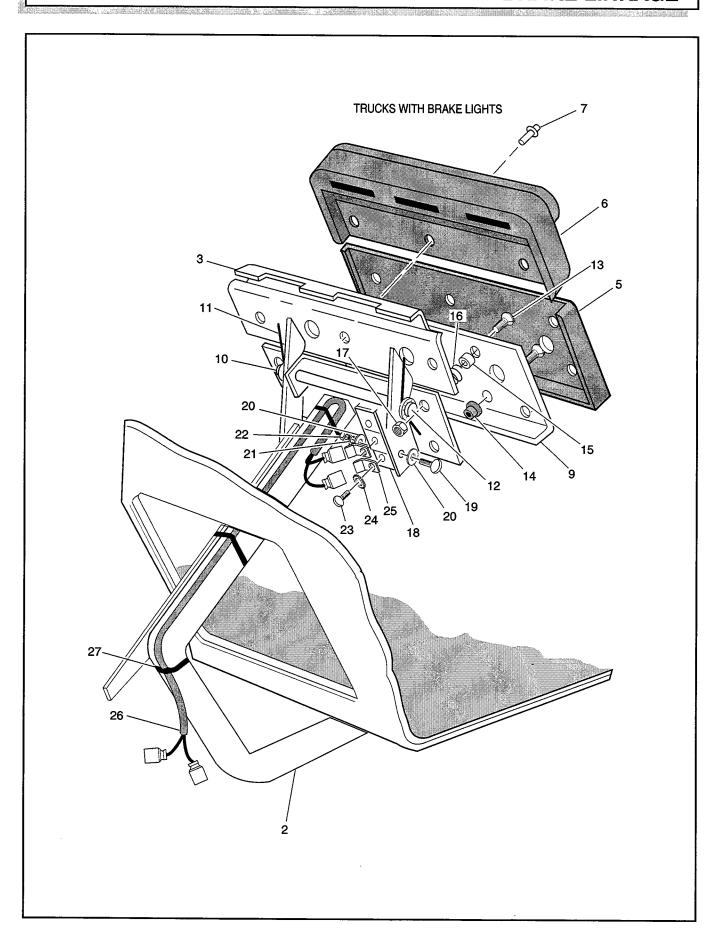


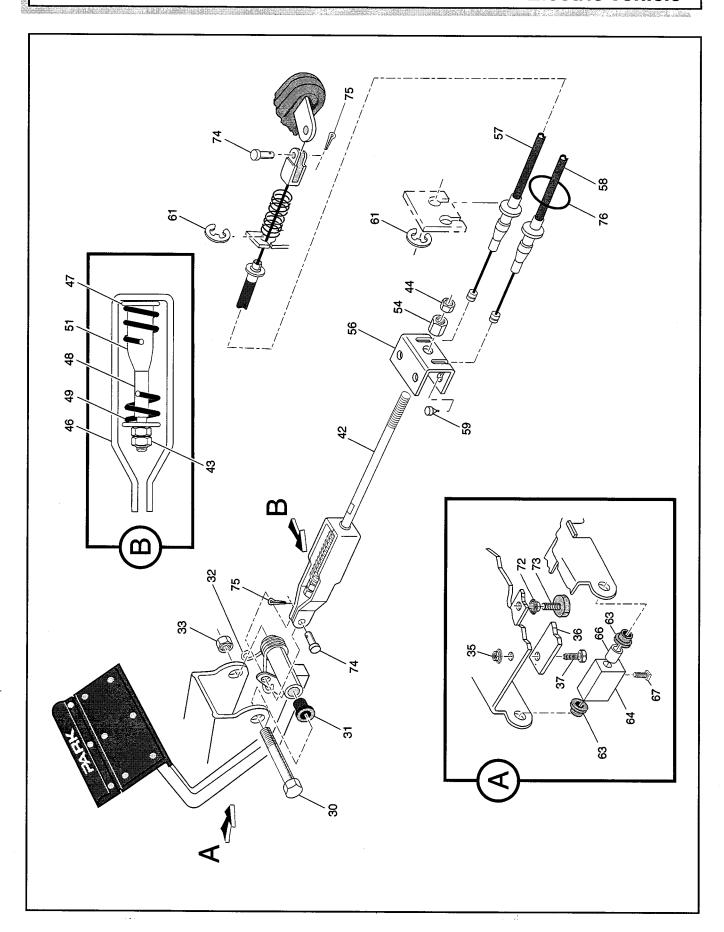



ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	27581-G01	BRAKE PEDAL ASSEMBLY (INCLUDES ITEMS 2 - 27) TRUCKS WITH BRAKE LIGHTS	. 1
2	*	PEDAL, BRAKE	. 1
3	*	PEDAL, PARK BRAKE	. 1
4	27843-G01	BRAKE/PARK BRAKE PEDAL PAD KIT (INCLUDES ITEMS 5 - 7)	. 1
5	*	PAD, BRAKE PEDAL	. 1
6	*	PAD, PARK BRAKE	. 1
7	15766-G1	RIVET, 3/8 x 15/32 LG	. 9
8			
9	*	PLATE, BRAKE PEDAL	. 1
10	15932-G2	PIN, PARK BRAKE PEDAL	. 1
11	11737-G1	SPRING, TORSION, PARK BRAKE	. 2
12	12064-G1	PUSHNUT, 5/16	. 1
13	00737-G8	SCREW, #10 - 24 X 1 LG	4
14	00739-G1	NUT, RUBBER, #10 - 24	. 2
15	22362-G3	STANDOFF, BRAKE PEDAL	. 2
16	27137-G01	SPRING, CONICAL	. 2
17	11098-G7	NUT, LOCK, #10 - 24	. 2
18	10606-G8	SWITCH, MICRO	. 1
19	00645-G2	SCREW, #6 - 32 X 1 1/4 LG	. 2
20	00559-G3	WASHER, #6	2
21	00565-G3	WASHER, LOCK, #6	2
22	00525-G5	NUT, #6 - 32	2
23	*	SCREW, BRASS	2
24	00567-G3	WASHER, LOCK, #6	6
25	14628-G1	TAB, FASTON, 5/16 X 5/16 LG	2
26	22447-G1	WIRE HARNESS, BRAKE	1
27	17618-G1	NYLON CLAMP	3
28			
29			

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
30	14158-G01	BOLT, SHOULDER, 3/8 - 16 X 3 LG	1
31	11079-G1	BUSHING, FLANGED	2
32	25292-G1	SPRING, TORSION	1
33	13521-G4	NUT, LOCK, 3/8 - 16	1
34			
35	11027-G2	NUT, LOCK, 1/4 - 20	2
36	70080-G01	CATCH BRACKET, PARK BRAKE	1
37	00414-G6	BOLT, 1/4 - 20 X 3/4 LG.	2
38			
39			
40	70272-G02	COMPENSATOR ASSEMBLY (INCLUDES ITEMS 42 - 54)	1
41			
42	25882-G03	ROD, LINK	1
43			
44	11098-G9	NUT, LOCK, 5/16 - 24	1
45			
46	27330-G01	YOKE, BRAKE	1
47	15121-G1	WASHER, 3/8	2
48	23061-G2	TUBE	1
49	23463-G1	SPRING, COMPRESSION	1
50			
51	17979-G1	BUSHING, ACCELERATOR ROD	1
52			
53			
54	00963-G01	NUT, SPHERICAL, 5/16 - 24	1
55	70273-G01	EQUALIZER AND BRAKE CABLE ASSEMBLY (INCLUDES ITEMS 56 - 59)	1
56	28082-G01	BRACKET, EQUALIZER	1
57	*	CABLE, BRAKE, PASSENGER SIDE	1
58	*	CABLE, BRAKE DRIVER'S SIDE	1
59	28083-G01	BUMPER, BRAKE COMPENSATOR	2

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
60			
61	12305-G1	RING, RETAINING	. 4
62			
63	10097-G6	BEARING, FLANGED	. 2
64	25103-G1	CAM, KICK-OFF	. 1
65			
66	14134-G4	SPACER	. 1
67	00491-G4	SETSCREW, 1/4 - 20 X 1/2 LG	2
68			
69			
70			
71			
72	11027-G1	NUT, LOCK, 5/16 - 18	1
73	70113-G01	ADJUSTABLE BUMPER	. 1
74	10386-G3	PIN, CLEVIS, 5/16 X 15/16 LG	. з
75	10387-G3	PIN, COTTER, 3/32 X 3/4 LG	. 5
76	12416-G1	NYLON CLAMP	2
77	27580-G01	BRAKE PEDAL ASSEMBLY (INCLUDES ITEMS 78 - 88) TRUCKS WITHOUT BRAKE LIGHTS	. 1
78	25292-G1	SPRING, TORSION PARK BRAKE	2
79	12064-G1	PUSHNUT, 5/16	. 1
80		·	
81	15932-G2	PIN, PARK BRAKE	. 1
82	*	BRAKE PEDAL	. 1
83			
84	27843-G01	BRAKE/PARK BRAKE PEDAL PAD KIT (INCLUDES ITEMS 85 - 87)	1
85	*	PAD, BRAKE PEDAL	. 1
86	*	PAD, PARK BRAKE PEDAL	. 1
87	15766-G1	RIVET, 3/8 X 15/32 LG	. 9
88	*	PARK BRAKE PEDAL	. 1

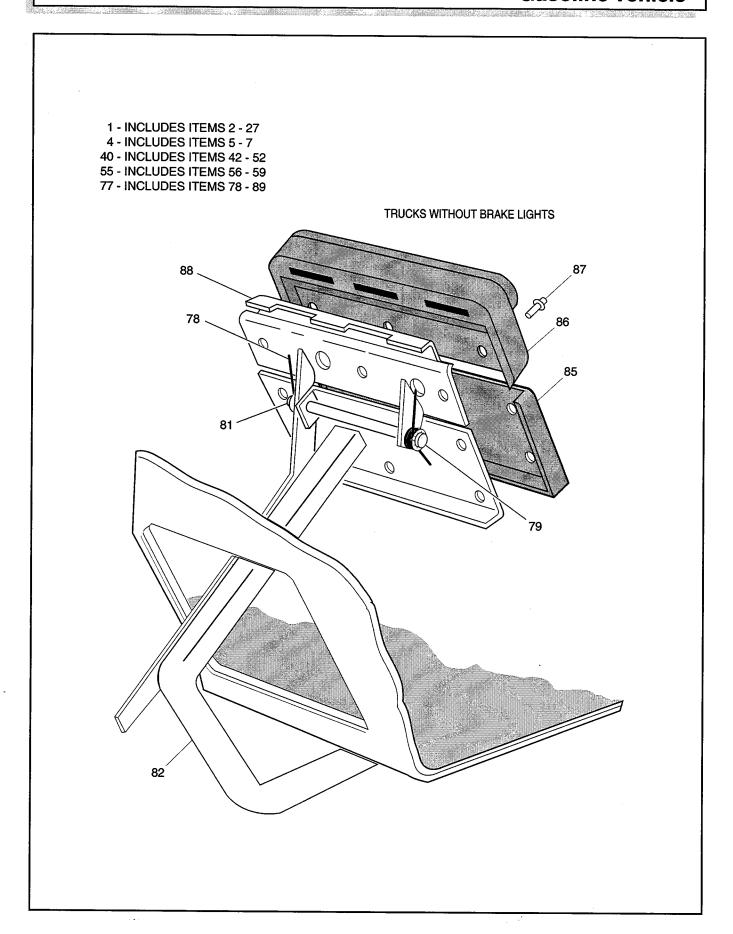

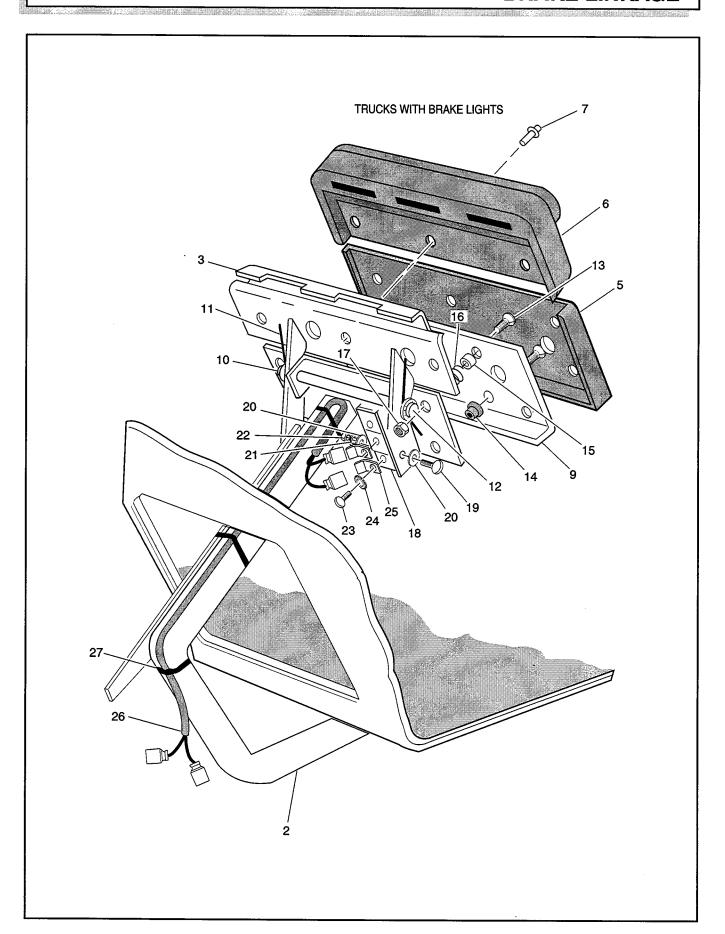


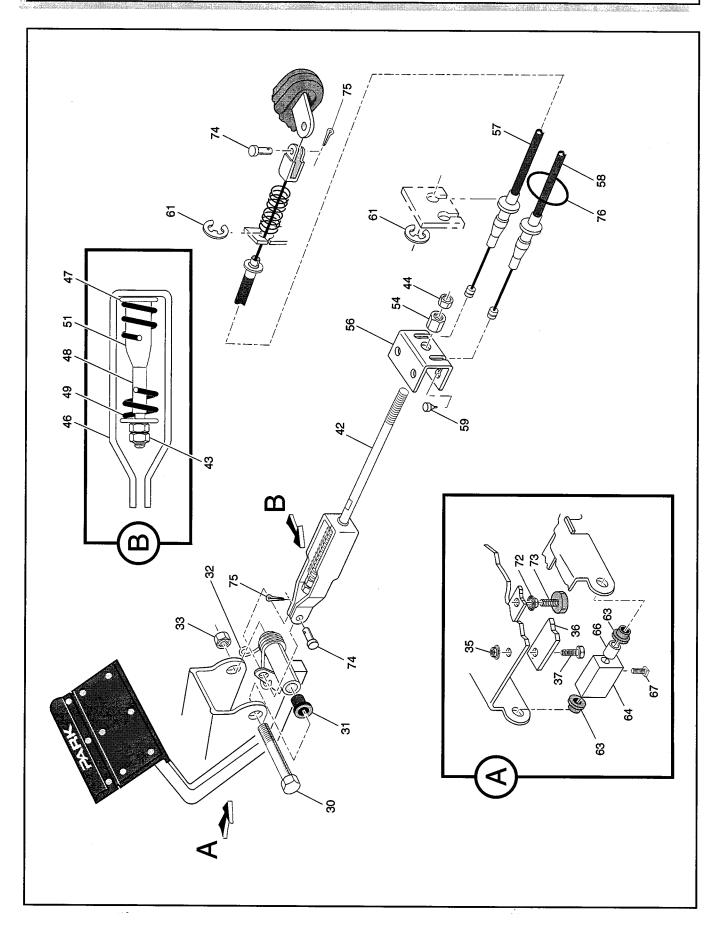


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	27581-G01	BRAKE PEDAL ASSEMBLY (INCLUDES ITEMS 2 - 27) TRUCKS WITH BRAKE LIGHTS	1
2	*	PEDAL, BRAKE	1
3	*	PEDAL, PARK BRAKE	1
4	27843-G01	BRAKE/PARK BRAKE PEDAL PAD KIT (INCLUDES ITEMS 5 - 7)	1
5	*	PAD, BRAKE PEDAL	1
6	*	PAD, PARK BRAKE	1
7	15766-G1	RIVET, 3/8 x 15/32 LG	9
8			
9	*	PLATE, BRAKE PEDAL	1
10	15932-G2	PIN, PARK BRAKE PEDAL	1
11	11737-G1	SPRING, TORSION, PARK BRAKE	2
12	12064-G1	PUSHNUT, 5/16	1
13	00737-G8	SCREW, #10 - 24 X 1 LG	4
14	00739-G1	NUT, RUBBER, #10 - 24	2
15	22362-G3	STANDOFF, BRAKE PEDAL	2
16	27137-G01	SPRING, CONICAL	. 2
17	11098-G7	NUT, LOCK, #10 - 24	. 2
18	10606-G8	SWITCH, MICRO	. 1
19	00645-G2	SCREW, #6 - 32 X 1 1/4 LG.	2
20	00559-G3	WASHER, #6	2
21	00565-G3	WASHER, LOCK, #6	. 2
22	00525-G5	NUT, #6 - 32	2
23	*	SCREW, BRASS	2
24	00567-G3	WASHER, LOCK, #6	6
25	14628-G1	TAB, FASTON, 5/16 X 5/16 LG	2
26	22447-G1	WIRE HARNESS, BRAKE	. 1
27	17618-G1	NYLON CLAMP	3
28			
29			

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
30	70096-G01	BOLT, SHOULDER, 3/8 - 16 X 3 LG.	1
31	11079-G1	BUSHING, FLANGED	2
32	70138-G01	SPRING, TORSION	1
33	12262-G1	NUT, LOCK, 3/8 - 16	1
34			
35	11027-G2	NUT, LOCK, 1/4 - 20	2
36	70080-G01	CATCH BRACKET, PARK BRAKE	1
37	00414-G6	BOLT, 1/4 - 20 X 3/4 LG.	2
38			
39			
40	70272-G03	COMPENSATOR ASSEMBLY (INCLUDES ITEMS 42 - 54)	1
41			
42	25882-G03	ROD, LINK	1
43			
44	11098-G9	NUT, LOCK, 5/16 - 24	1
45			
46	27330-G01	YOKE, BRAKE	1
47	15121-G1	WASHER, 3/8	2
48	23061-G2	TUBE	1
49	23463-G1	SPRING, COMPRESSION	1
50		·	
51	17979-G1	BUSHING, ACCELERATOR ROD	1
52			
53			
54	00963-G01	NUT, SPHERICAL, 5/16 - 24	1
55	70273-G02	EQUALIZER AND BRAKE CABLE ASSEMBLY (INCLUDES ITEMS 56 - 59)	1
56	28082-G01	BRACKET, EQUALIZER	1
57	*	CABLE, BRAKE, PASSENGER SIDE	1
58	*	CABLE, BRAKE DRIVER'S SIDE	1
59	28083-G01	BUMPER, BRAKE COMPENSATOR	2


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
60			
61	12305-G1	RING, RETAINING	. 4
62			
63	10097-G6	BEARING, FLANGED	2
64	25103-G1	CAM, KICK-OFF	. 1
65			
66	14134-G4	SPACER	1
67	00491-G4	SETSCREW, 1/4 - 20 X 1/2 LG	. 2
68			
69			
70			
71			
72	11027-G1	NUT, LOCK, 5/16 - 18	1
73	70113-G01	ADJUSTABLE BUMPER	. 1
74	10386-G3	PIN, CLEVIS, 5/16 X 15/16 LG	. з
75	10387-G3	PIN, COTTER, 3/32 X 3/4 LG	. 5
76	12416-G1	NYLON CLAMP	2
77	27580-G01	BRAKE PEDAL ASSEMBLY (INCLUDES ITEMS 78 - 88) TRUCKS WITHOUT BRAKE LIGHTS	. 1
78	25292-G1	SPRING, TORSION PARK BRAKE	2
79	12064-G1	PUSHNUT, 5/16	. 1
80			
81	15932-G2	PIN, PARK BRAKE	. 1
82	*	BRAKE PEDAL	. 1
83			,
84	27843-G01	BRAKE/PARK BRAKE PEDAL PAD KIT (INCLUDES ITEMS 85 - 87)	. 1
85	*	PAD, BRAKE PEDAL	. 1
86	*	PAD, PARK BRAKE PEDAL	1
87	15766-G1	RIVET, 3/8 X 15/32 LG	. 9
88	*	PARK BRAKE PEDAL	. 1

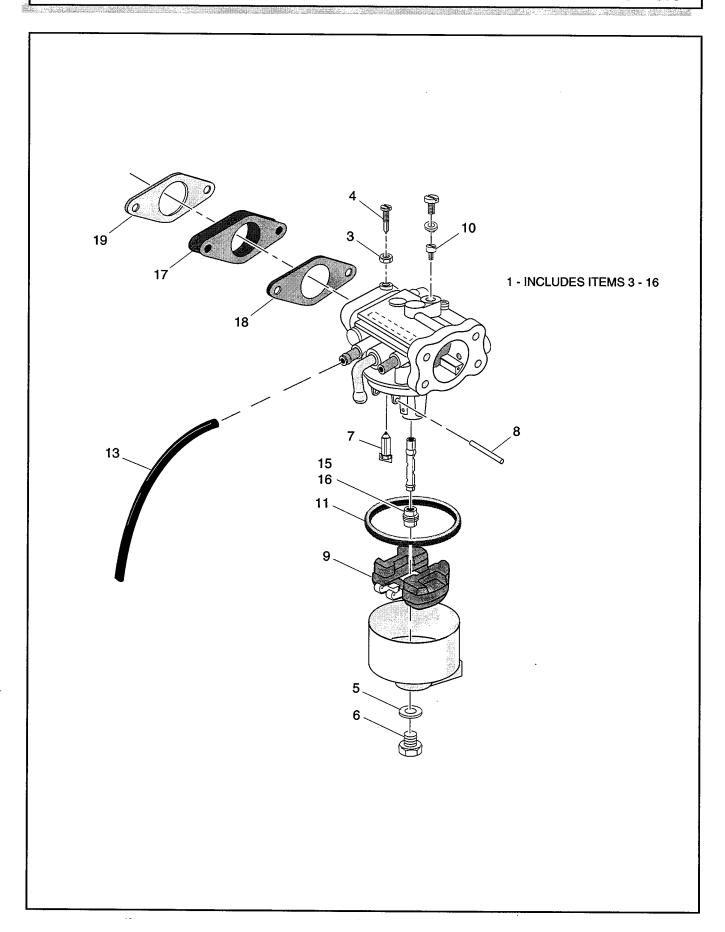

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	26645-G01	CARBURETOR ASSEMBLY (INCLUDES ITEMS 3 - 16)	. 1
2			
3	26847-G01	NUT, PILOT SCREW	2
4	26835-G01	SCREW, PILOT	. 1
5	26838-G01	GASKET, BOWL SCREEN	1
6	26839-G01	SCREW, BOWL	1
7	26647-G01	VALVE, NEEDLE	1
8	26840-G01	PIN, FLOAT	1
9	26648-G01	FLOAT	1
10	26649-G01	JET, PILOT (#48)	1
11	26843-G01	GASKET, FLOAT BOWL	1
12			
13	26650-G01	TUBE, CARBURETOR VENT	2
14			
15	26646-G02	JET, MAIN (#84)	1
16	26646-G03	JET, MAIN (#76) HIGH ALTITUDE - ABOVE 5,000 FEET	. 1
17	26637-G01	INSULATOR, CARBURETOR	. 1
18	26725-G01	GASKET, CARBURETOR MOUNT	1
19	26726-G01	GASKET, CARBURETOR MOUNT	1

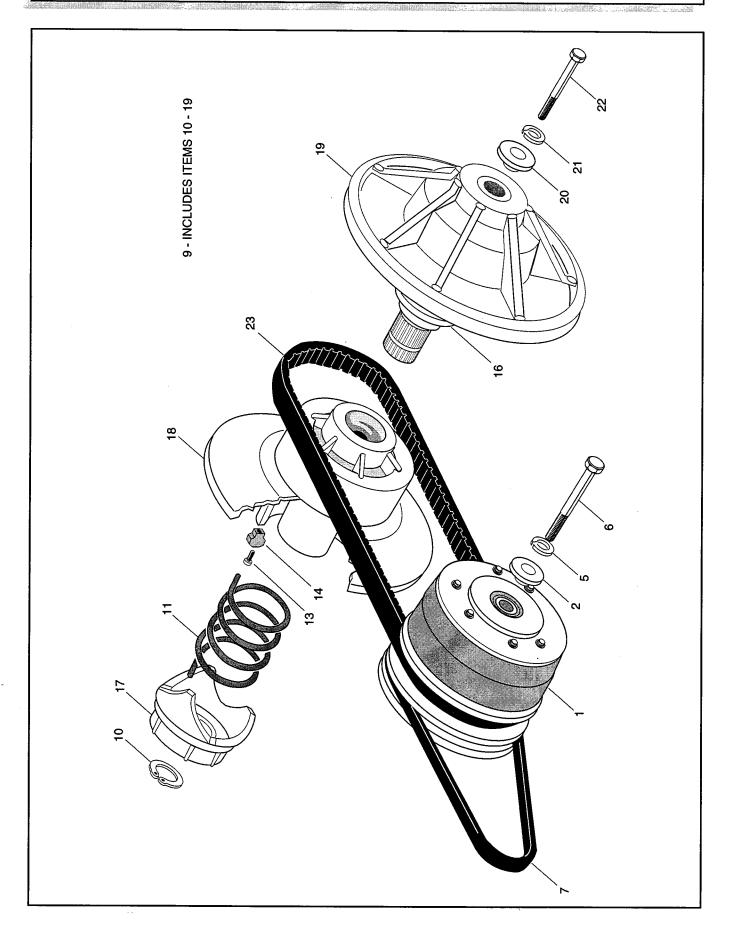

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	26952-G01	DRIVE CLUTCH	. 1
2	23213-G1	WASHER, PILOT	1
3			
4			
5	00566-G2	WASHER, LOCK, 7/16	1
6	00473-G9	BOLT, 7/16 - 20 X 6 1/2 LG.	1
7	26414-G01	BELT, STARTER / GENERATOR	. 1
8			
9	26301-G02	DRIVEN CLUTCH ASSEMBLY (INCLUDES ITEMS 10 - 19)	1
10	27270-G01	RETAINING RING, HEAVY DUTY	1
11	26304-G01	SPRING, COMPRESSION	. 1
12			
13	00979-G01	SCREW, #10 - 24	з
14	26479-G01	RAMP BUTTON	з
15			
16	24600-G1	WASHER, SPACER	. 1
17	*	CAM	. 1
18	*	SHEAVE, MOVABLE	. 1
19	*	SHEAVE AND POST	. 1
20	22496-G1	WASHER, RETAINING	1
21	00565-G8	WASHER, LOCK, 5/16	. 1
22	00441-G8	BOLT, 5/16 - 18 X 4 LG	. 1
23	27077-G02	BELT, DRIVE	. 1
24	**	PULLER, DRIVE CLUTCH	. AR
		** SEE SERVICE ACCESSORIES AND SPECIAL TOOLS	

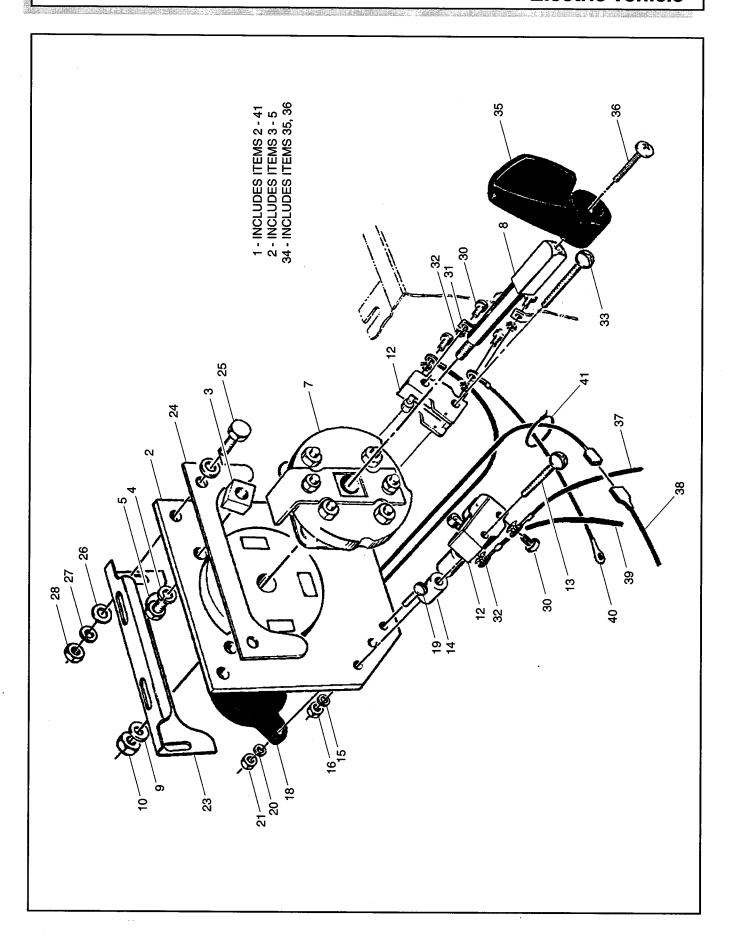

Electric Vehicle

DIRECTION SELECTOR

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	32911-G1	DIRECTION SELECTOR (INCLUDES ITEMS 2 - 41)	1
2	14651-G1	CONTACT BOARD ASSEMBLY (INCLUDES ITEMS 3 - 5)	. 1
3	24940-G1	STOP	. 2
4	00565-G7	WASHER, LOCK, 1/4	2
5	00414-G6	SCREW, 1/4 - 20 X 3/4 LG	2
6			
7	12835-G1	CAM, DIRECTION SELECTOR	. 1
8	19470-G1	SHAFT, DIRECTION SELECTOR	. 1
9	00560-G1	WASHER, 3/8	. 1
10	14390-G1	NUT, LOCK, 3/8 - 24	. 1
11			
12	10606-G4	SWITCH, MICRO	2
13	00139-G6	SCREW, #6 - 32 X 1 3/4 LG	. 2
14	12806-G1	SPACER, MICRO SWITCH	. 2
15	00565-G3	WASHER, LOCK, #6	. 4
16	00525-G5	NUT, #6 - 32	4
17			
18	17940-G1	BUZZER, REVERSE WARNING	. 1
19	00138-G5	SCREW, #6 - 32 X 5/8 LG	. 2
20	00565-G3	WASHER, LOCK, #6	. 2
21	00525-G5	NUT, #6 - 32	. 2
22			
23	30278-G1	BRACKET, MOUNTING	. 1
24	15461-G1	SUPPORT, BRACKET MOUNTING	. 1
25	00414-G8	SCREW, 1/4 - 20 X 1 LG.	2
26	00559-G7	WASHER, 1/4	4
27	00565-G7	WASHER, LOCK, 1/4	2
28	00532-G1	NUT, 1/4 - 20	2
29			
30	*	SCREW, BRASS	4

When ordering parts, please specify the model and serial number of the product.


* Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	14628-G1	TAB, FASTON	2
32	00567-G3	WASHER, LOCK, #6	4
33	00139-G9	SCREW, #6 - 32 X 1 3/4 LG	2
34	20325-G1	DIRECTION SELECTOR HANDLE KIT (INCLUDES ITEMS 35, 36)	1
35	19886-G1	HANDLE, DIRECTION SELECTOR	1
36	00740-G4	SCREW, #10 - 32 X 1/2 LG	1
37	14619-G2	WIRE	1
38	21743-G1	WIRE	1
39	23862-G2	WIRE	1
40	23645-G1	WIRE	1
41	17618-G1	CLAMP, NYLON	3

Electric Vehicle

DIRECTION SELECTOR

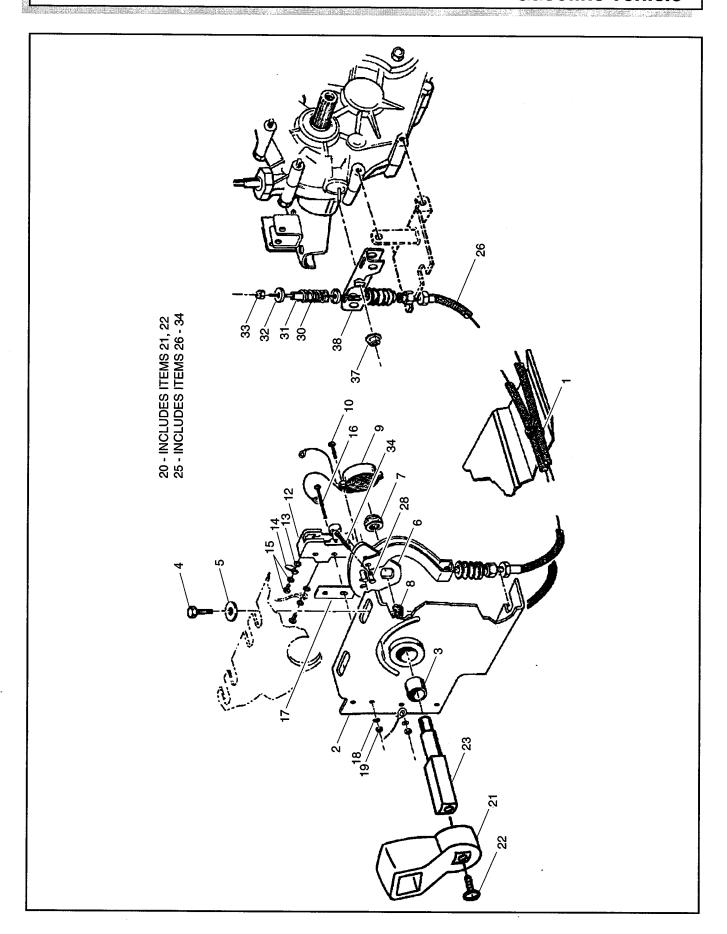


DIRECTION SELECTOR


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	17618-G1	CLAMP, NYLON	1
2	25684-G01	BRACKET, DIRECTION SELECTOR	. 1
3	25664-G1	BUSHING	. 1
4	00414-G6	SCREW, 1/4 - 20 X 3/4 LG	. 2
5	00559-G7	WASHER, 1/4	. 2
6	25745-G01	CAM, DIRECTION SELECTOR	. 1
7	14390-G1	NUT, 3/8 - 24	1
8	11027-G2	NUT, LOCK, 1/4 - 20	. 2
9	17940-G1	BUZZER	1
10	00138-G4	SCREW, #6 - 32 X 1/2 LG	2
11			
12	10606-G1	SWITCH, MICRO	1
13	00567-G3	WASHER, LOCK,	2
14	14628-G1	TAB, FASTON	1
15	13514-G1	SCREW AND WASHER ASSEMBLY	2
16	00139-G2	SCREW, 1/8 X 1 1/4 LG	. 2
17	27151-G01	SPACER, MICRO SWITCH	1
18	00565-G3	WASHER, LOCK, #6	4
19	00525-G5	NUT, #6 - 32	4
20	20325-G2	DIRECTION SELECTOR KIT (INCLUDES ITEMS 21, 22)	. 1
21	71905-G01	KNOB, PLASTIC	1
22	00704-G4	SCREW, #10 - 32 X 1/2 LG	. 1
23	27537-G01	SHAFT, DIRECTION SELECTOR	. 1
24			
25	27170-G01	CABLE KIT (INCLUDES ITEMS 26 - 35)	. 1
26	25691-G02	CABLE, SHIFTER CONTROL, GXI/T-804 MODELS ONLY	2
27			
28	23176-G1	PIN, CLEVIS	2
29			
30	27764-G01	SPRING, SHIFTER CABLE	2


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	23726-G5	SPACER, SHIFTER	2
32	25727-G01	WASHER, CUP	4
33	11098-G7	NUT, LOCK, #10 - 24	2
34	10387-G8	PIN, COTTER	2
35			
36			
37	26830-G01	NUT, SHIFTER LEVER	1
38	25946-G01	LEVER, SHIFTER	1

Gasoline Vehicle

DIRECTION SELECTOR

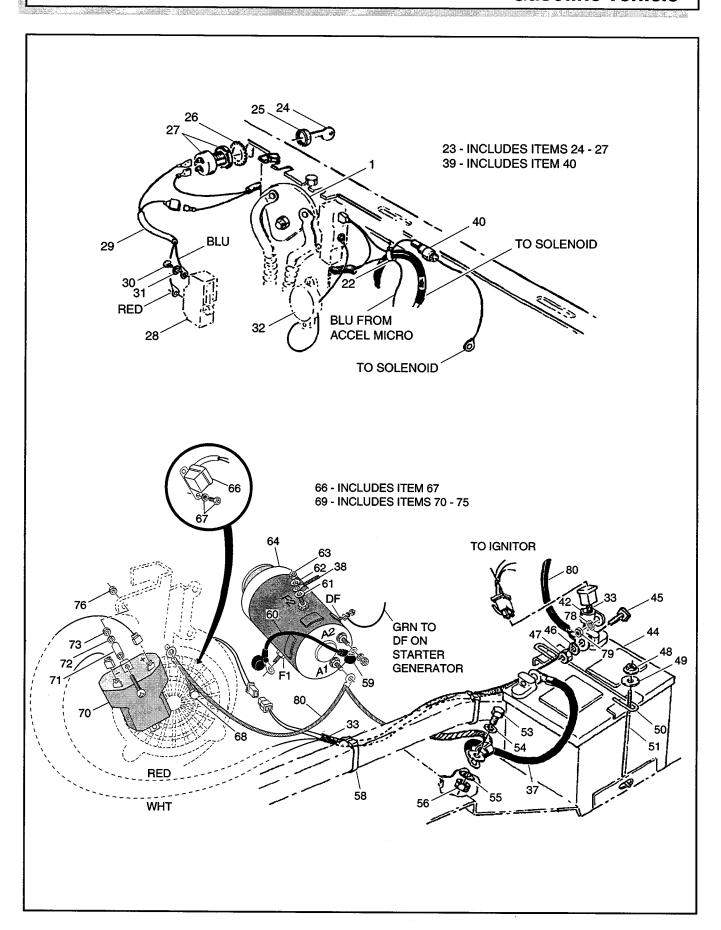

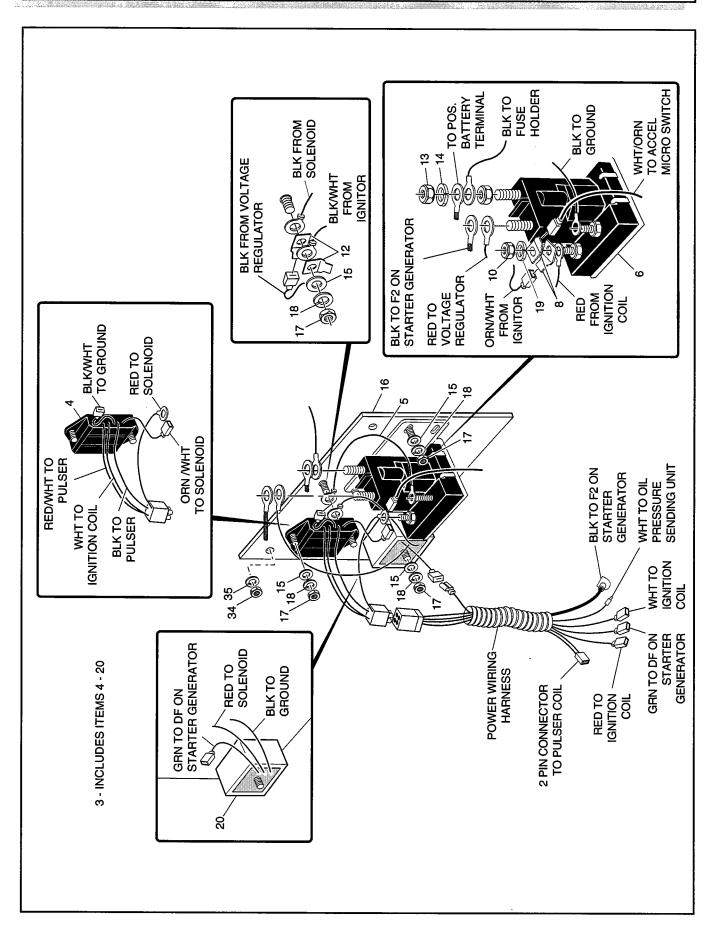

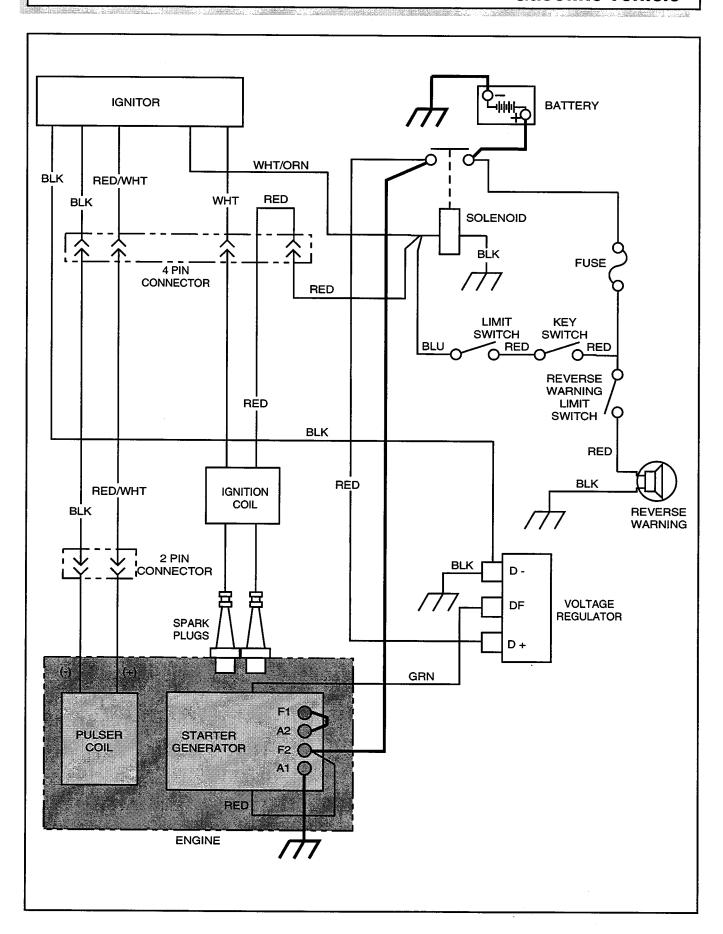


ELECTRICAL SYSTEM

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
- 1	XXXXX-XX	DIRECTION SELECTOR (SEE SECTION H FOR PART NUMBER AND QUANTITY)	. x
2			
3	27740-G02	ELECTRICAL PLATE ASSEMBLY (INCLUDES ITEMS 4 - 20)	. 1
4	27746-G01	IGNITOR	. 1
5	25978-G56	WIRE	. 1
6	27153-G01	SOLENOID	. 1
7			
8	12914-G1	TAB, FASTON	. 2
9			
10	*	NUT, #10 - 32	. 2
11			
12	12914-G2	TAB, FASTON	. 2
13	*	NUT, 5/16 - 24	. 2
14	*	WASHER, LOCK, 5/16	. 2
15	00650-G7	WASHER, 1/4	1
16	*	PLATE, ELECTRICAL	1
17	00532-G1	NUT, 1/4 - 20	i .
18	00565-G7	WASHER, LOCK, 1/4	
19	*	WASHER, LOCK, #10	į.
20	27739-G01	VOLTAGE REGULATOR	
21		·	
22	17618-G1	CLAMP, NYLON	1
23	17421-G1	IGNITION SWITCH ASSEMBLY (INCLUDES ITEMS 24 - 27 AND ADDITIONAL PUSH ON TERMINALS)	
24	17063-G1	KEY, IGNITION	ł
25	17137-G1	NUT, 3/4	
26	00568-G6	WASHER, LOCK, 3/4	
27	*	SWITCH, IGNITION	
28	xxxxx-xx	SWITCH, MICRO (SEE SECTION A FOR PART NUMBER AND QUANTITY)	

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
29	25932-G01	HARNESS, WIRING	1
30	13514-G1	SCREW, BRASS, #6 - 32 X 1/4 LG	2
31	00567-G3	WASHER, LOCK, #6	2
32	XXXXX-XX	REVERSE WARNING BUZZER (SEE SECTION H FOR PART NUMBER AND QUANTITY)	х
33	26583-G01	WIRING HARNESS, JUMPER	1
34	00532-G1	NUT, LOCK, 1/4 - 20	4
35	00565-G7	WASHER, LOCK, 1/4	4
36			
37	27044-G02	CABLE, NEGATIVE BATTERY	1
38	27062-G01	WIRE HARNESS	1
39	18392-G6	FUSE HOLDER ASSEMBLY (INCLUDES ITEM 40)	1
40	18392-G6	FUSE, 7 AMP	1
41			
42	11845-G5	CLIP, CABLE INSULATED	1
43			
44	24775-G1	BATTERY, 12 VOLT	1
45	12649-G1	BOLT, BATTERY, SQUARE HEAD, 5/16 - 18 X 1 LG	2
46	00993-G01	WASHER, LOCK, SILICON BRONZE, 5/16	2
47	00994-G01	NUT, SILICON BRONZE, 5/16 - 18	2
48	14390-G4	NUT, LOCK, 5/16	2
49	00571-G2	WASHER, 5/16	2
50	18258-G2	RETAINER, BATTERY	1
51	18261-G3	ROD, BATTERY HOLD DOWN	2
52			
53	00414-G5	BOLT, 1/4 - 20 X 1/2 LG	1
54	00660-G7	WASHER, 1/4	1
55	00567-G7	WASHER, LOCK, 1/4	1
56	00532-G1	NUT, 1/4 - 20	1
57			

ELECTRICAL SYSTEM

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
58	17618-G1	CLAMP, NYLON	. 2
59	25682-G1	COVER, TERMINAL	3
60	25887-G01	WIRE	1
61	26702-G01	WASHER, 6.5 MM	. 4
62	51400-G1	WASHER, LOCK, 6 MM	. 4
63	13632-G1	NUT, M6 X 1	4
64	XXXXX-XX	STARTER/GENERATOR (SEE SECTION AA FOR PART NUMBER AND QUANTITY)	1
65	•		İ
66	26651-G02	IGNITION PICKUP ASSEMBLY (INCLUDES ITEM 67)	1 1
67	26707-G01	BOLT AND WASHER ASSEMBLY, M5 X .8 X 10 MM	1
68	26676-G01	SCREW, M6 X 1 X 23 MM	1
69	26652-G01	IGNITION COIL ASSEMBLY (INCLUDES ITEMS 70 - 75)	1
70	*	COIL, IGNITION	1
71	*	SPACER	. 1
72	*	WASHER, LOCK	. 1
73	*	NUT	1
74	*	SCREW	1
75			
76	13632-G1	NUT, M6 X 1	. 2
77	26651-G02	PULSER COIL	1
78	00565-G7	WASHER, LOCK, 1/4	4
79	00532-G1	NUT, 1/4 - 20	4
80	25972-G35	WIRE, BL- TO GROUND	. 1
			:

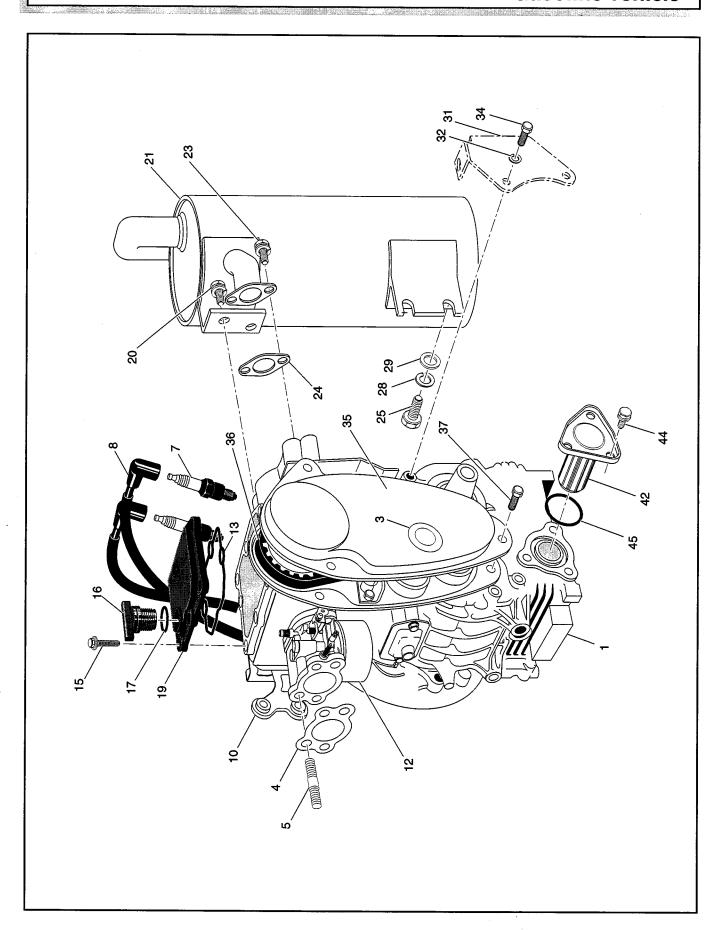

ENGINE AND MUFFLER


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	26700-G01	ENGINE	. 1
2			
3	26631-G01	GROMMET, TIMING BELT COVER	1
4	26727-G01	GASKET, CARBURETOR/AIR BOX	1
5	26667-G01	STUD	2
6			
7	25523-G02	SPARK PLUG, NGK BP4ES	2
8	26733-G01	SPARK PLUG WIRE SET (2 WITH BOOTS)	. 1
9			
10	26657-G01	BRACKET, IGNITION COIL	. 1
11			
12	XXXXX-XX	CARBURETOR (SEE SECTION E FOR PART NUMBER AND QUANTITY	X
13	26719-G01	GASKET, VALVE COVER	1
14			
15	26676-G01	BOLT, FLANGED, M6 X 1 X 23 MM LG	6
16	26601-G01	CAP, OIL FILLER	. 1
17	26720-G01	O-RING	1
18			
19	26600-G01	COVER, VALVE	. 1
20	25532-G1	BOLT AND WASHER, M8 X 1.25 X 18 MM LG	2
21	26344-G01	MUFFLER	1
22			
23	25532-G1	BOLT AND WASHER, M8 X 1.25 X 18 MM LG	2
24	25531-G1	GASKET, EXHAUST	. 1
25	00438-G8	BOLT, 5/16 - 18 X 1 LG	. 1
26			
27			
28	00565-G8	WASHER, LOCK, 5/16	1
29	00642-G8	WASHER, 5/16	1

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
30			
31	25655-G01	BRACKET, PIVOT	1
32	00565-G8	WASHER, LOCK, 5/16	
33			
34	00276-G6	SCREW, 5/16 - 24 X 3/4 LG	2
35	26630-G01	COVER, TIMING BELT	1
36	26626-G01	TIMING BELT	1
37	26678-G01	BOLT, M6 X 1 X 12 MM LG.	3
38			
39			
40			
41			
42	26591-G01	FILTER, OIL	1
43	•		
44	26680-G01	BOLT AND WASHER, M6 X 1 X 12 MM LG.	3
45	26710-G01	O-RING, OIL FILTER	1
			Ĭ
	;		

Gasoline Vehicle

ENGINE AND MUFFLER



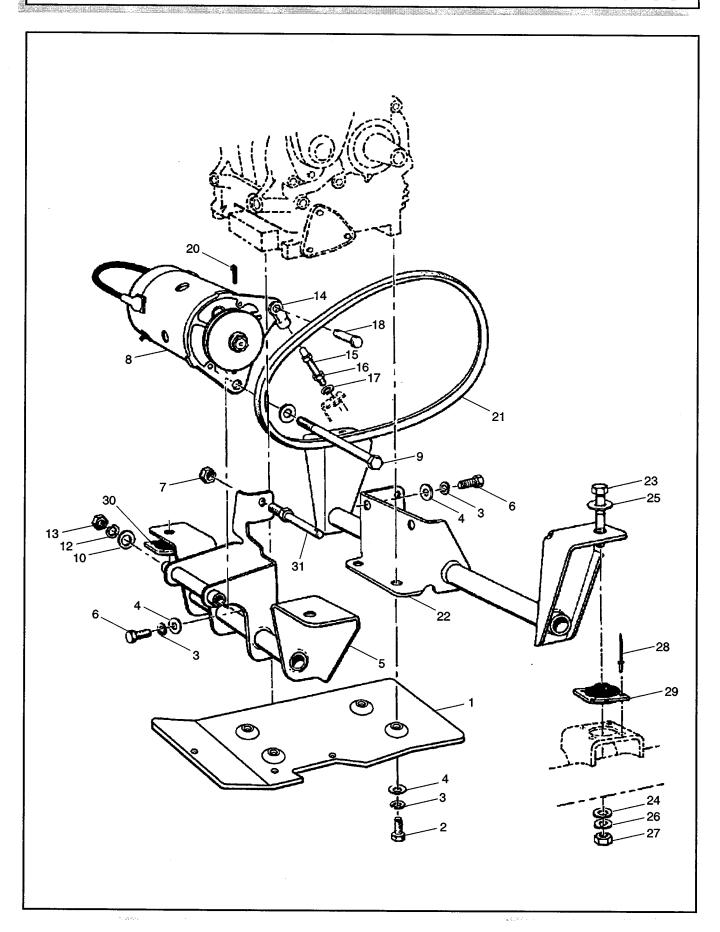

ENGINE/STARTER MOUNTING

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	27432-G01	GUARD, ENGINE	1
2	00463-G4	BOLT, 7/16 - 14 X 1/2 LG.	4
3	00566-G2	WASHER, LOCK, 7/16	8
4	00922-G3	WASHER, 7/16	. 8
5	25674-G01	BRACKET, FRONT ENGINE MOUNTING	1
6	00288-G8	BOLT, 7/16 - 14 X 1 LG.	4
7	14390-G1	NUT, LOCK, 3/8 - 24	. 1
8	xxxxx-xx	STARTER/GENERATOR (SEE SECTION AA FOR PART NUMBER AND QUANTITY)	x
9	00938-G4	BOLT, 1/2 - 13 X 8 LG	. 1
10	00560-G3	WASHER, 1/2	. 2
11			
12	00566-G3	WASHER, LOCK, 1/2	. 1
13	00533-G1	NUT, 1/2 - 13	. 1
14	25708-G01	YOKE, CLEVIS	. 1
15	24667-G1	PIN, ADJUSTING	. 1
16	00532-G6	NUT, 3/8 - 24	. 1
17	00566-G1	WASHER, LOCK, 3/8	. 1
18	14443-G3	PIN, CLEVIS, 5/16 X 1 LG	. 1
19			
20	10387-G4	PIN, COTTER	. 1
21	26414-G01	BELT, STARTER/GENERATOR	. 1
22	25675-G01	BRACKET, REAR ENGINE MOUNTING	. 1
23	00428-G6	BOLT, 3/8 - 16 X 2 3/4 LG.	. 4
24	00560-G1	WASHER, 1.25 O.D. X .38 I.D	. 4
25	15121-G1	WASHER, 1.25 O.D. X .38 I.D. ZINC	. 2
26	00566-G1	WASHER, LOCK, 3/8	. 4
27	00550-G5	NUT, LOCK, 3/8 - 16	. 4
28	14601-G5	RIVET, 3/16 X 13/32 LG	. 16
29	14137-G1	MOUNT, ISOLATION, 25 LB.	. 2

ENGINE/STARTER MOUNTING

Gasoline Vehicle

When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.


		r additional information.

PART NO.	1 2 3 4 5 DESCRIPTION	ΩТ
14137-G2	MOUNT, ISOLATION, 35 LB.	2
XXXXX-XX	PIVOT, FRONT ENGINE MOUNT (SEE SECTION A FOR PART NUMBER AND QUANTITY)	
		!
	14137-G2	14137-G2 MOUNT, ISOLATION, 35 LB


Gasoline Vehicle

ENGINE/STARTER MOUNTING




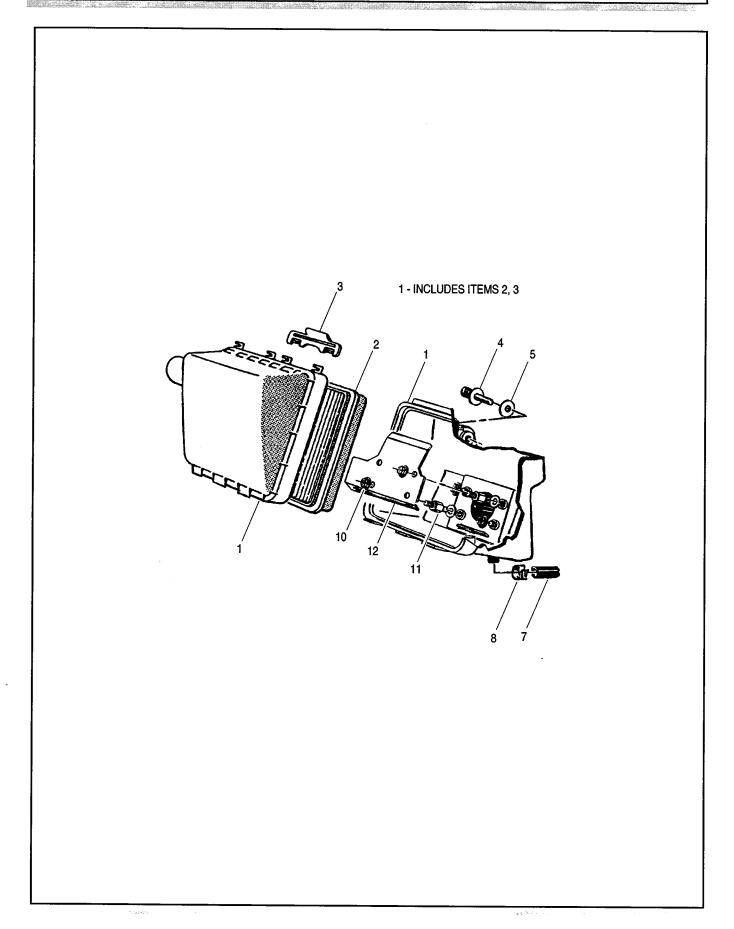


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	26634-G01	AIR CLEANER ASSEMBLY (INCLUDES ITEMS 2, 3)	1
2	26855-G01	ELEMENT, AIR CLEANER	. 1
3	26735-G01	CLIP, AIR CLEANER BOX	ļ ₁
4	26671-G01	BOLT AND WASHER, M6 X 1 X 30 MM LG	. 2
5	26701-G01	WASHER, 6.5 MM X 20	. 2
6	•		
7	26602-G01	HOSE, BREATHER	. 1
8	18292-G1	CLAMP, HOSE	. 2
9			
10	26706-G01	NUT, BAFFLE PLATE, M6 X 1	. 2
11	26679-G01	STUD, BAFFLE PLATE	. 2
12	26729-G01	PLATE, AIR CLEANER BAFFLE	1
			İ

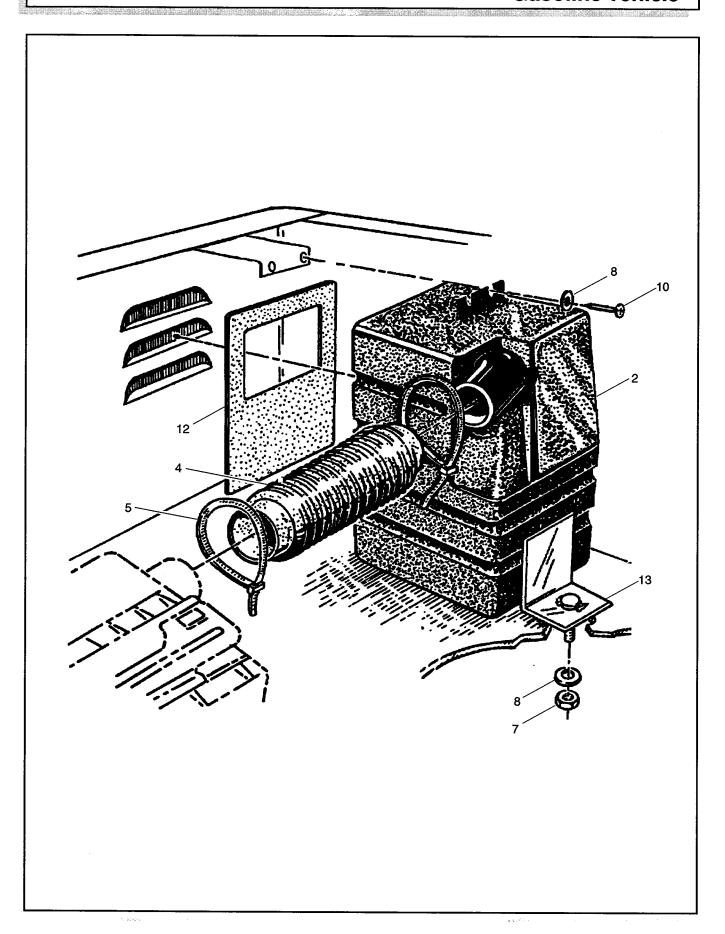

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1			
2	26481-G01	AIRBOX, INTAKE	. 1
3			
4	25560-G02	HOSE, AIR	1
5	17618-G1	CLAMP, NYLON	2
6			
7	14390-G4	NUT, LOCK, 1/4 - 20	. 1
8	00559-G6	WASHER, #12	. 2
9			
10	00106-G6	SCREW, SELF TAPPING, #12 - 24 X 3/4 LG	. 2
11			
12	26412-G01	GASKET, AIR BOX	1
13	26458-G01	BRACKET, AIR BOX SUPPORT	1
·			

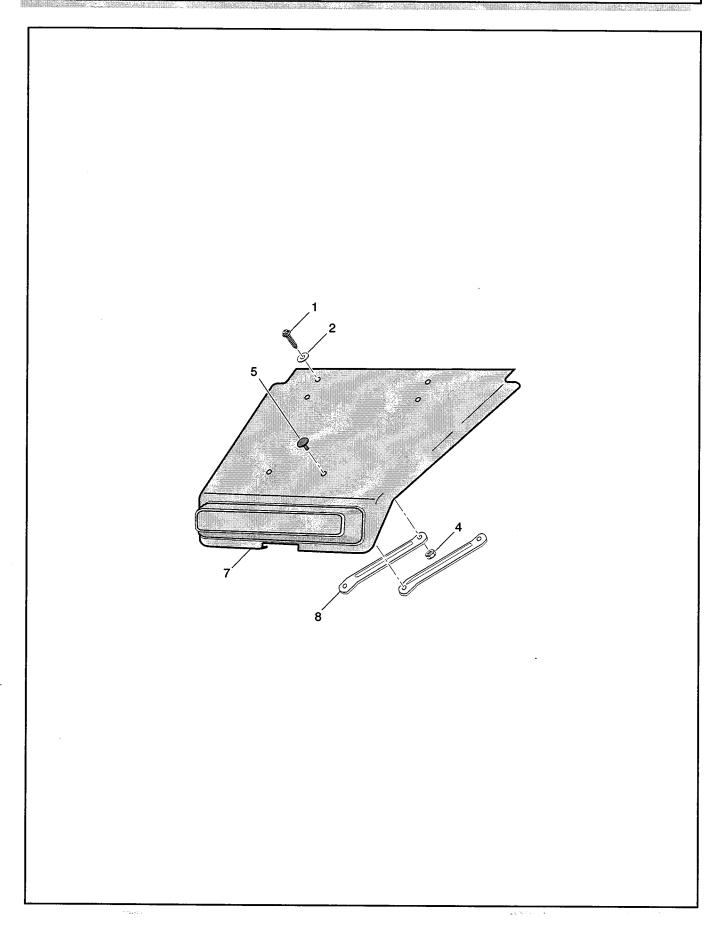

		1 2 3 4 5 DESCRIPTION	QTY.
1 1	00414-G8	SCREW, 1/4 - 20 X 1 LG	. 2
2	00559-G7	WASHER, 1/4	2
3			
4	14390-G4	NUT, LOCK, 1/4 - 20	. 2
5	16816-G2	FASTENER	2
6			
7	27166-G03	SHIELD	1
8	27252-G01	SUPPORT, FRONT SHIELD	. 2

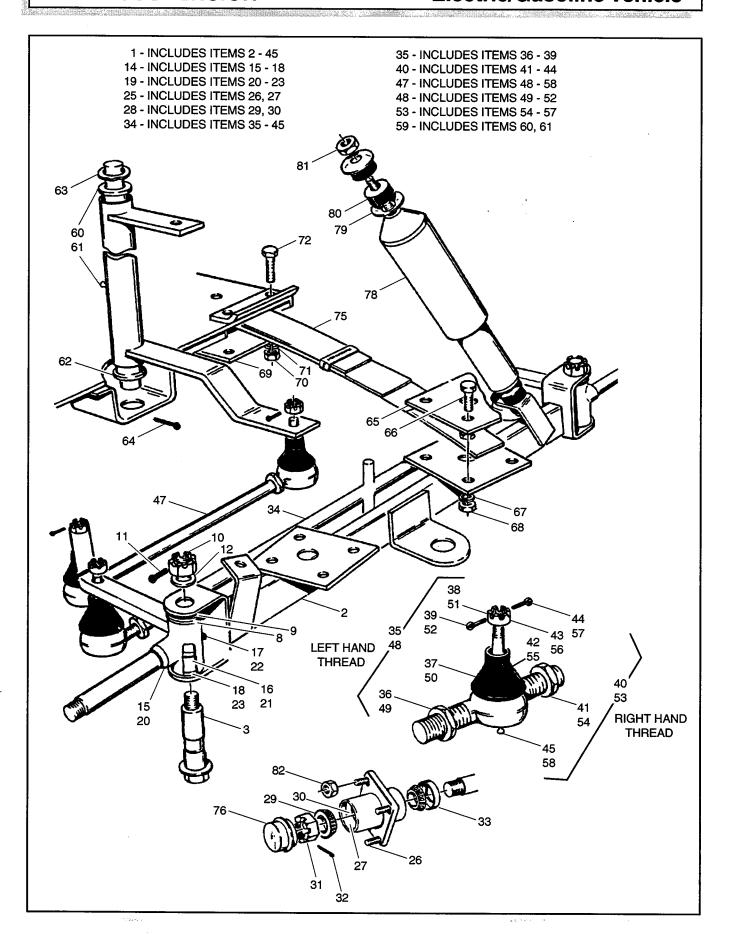

FRONT SUSPENSION

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	25840-G02	FRONT AXLE ASSEMBLY (INCLUDES ITEMS 2 - 45)	, 1
2	23918-G2	AXLE	1
3	25177-G2	PIN, KING	1
4			
5			
6			
7			
8	16982-G1	BEARING	2
9	00879-G7	WASHER, 7/8	2
10	00886-G1	NUT, SLOTTED, 5/8 - 18	2
11	19060-G1	PIN, COTTER, STAINLESS STEEL, 1/4 X 1 1/2 LG	2
12	00879-G5	WASHER, 5/8	2
13			
14	25837-G01	SPINDLE ASSEMBLY, DRIVER'S SIDE (INCLUDES ITEMS 15 - 18)	1
15	*	SPINDLE	. 1
16	16623-G1	BEARING	. 2
17	10389-G3	FITTING, GREASE	1
18	16626-G1	SEAL	. 1
19	25836-G01	SPINDLE ASSEMBLY, PASSENGER SIDE (INCLUDES ITEMS 20 - 23)	, 1
20	*	SPINDLE	. 1
21	16623-G1	BEARING	2
22	10389-G3	FITTING, GREASE	. 1
23	16626-G1	SEAL	. 1
24			
25	19932-G1	HUB ASSEMBLY (INCLUDES ITEMS 26, 27)	. 2
26	19862-G1	BOLT, HUB, 1/2 - 20	4
27	*	RACE, BEARING	. 2
28	50892-G1	BEARING AND RACE ASSEMBLY (INCLUDES ITEMS 29, 30)	2
29	11750-G2	BEARING, ROLLER	. 2


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
30	11752-G1	BEARING, RACE	2
31	12093-G1	NUT, SLOTTED	2
32	00798-G8	PIN, COTTER, 1/4 X 1 1/2 LG	2
33	25146-G1	SEAL	1
34	27365-G01	TIE ROD ASSEMBLY (INCLUDES ITEMS 35 - 45)	1
35	20795-G1	TIE ROD END ASSEMBLY, LEFT HAND THREAD (INCLUDES ITEMS 36 - 39)	1
36	18434-G1	NUT, 9/16 - 18, LEFT HAND THREAD	1
37	50641-G1	BOOT, RUBBER	1
38	50209-G1	NUT, SLOTTED, 7/16 - 20	1
39	10387-G2	PIN, COTTER, 3/16 X 1 LG	1
40	20795-G2	TIE ROD END ASSEMBLY, RIGHT HAND THREAD (INCLUDES ITEMS 36 - 39)	1
41	18434-G1	NUT, 9/16 - 18, RIGHT HAND THREAD	1
42	50641-G1	BOOT, RUBBER	1
43	50209-G1	NUT, SLOTTED, 7/16 - 20	1
44	10387-G2	PIN, COTTER, 3/16 X 1 LG	1
45	10389-G3	FITTING, GREASE	2
46			
47	18377-G1	TIE ROD ASSEMBLY (INCLUDES ITEMS 48 - 58)	1
48	27205-G01	TIE ROD END ASSEMBLY, LEFT HAND THREAD (INCLUDES ITEMS 49 - 52)	1
49	18434-G1	NUT, 9/16 - 18, LEFT HAND THREAD	1
50	50641-G1	BOOT, RUBBER	1
51	50209-G1	NUT, SLOTTED, 7/16 - 20	1
52	10387-G2	PIN, COTTER, 3/16 X 1 LG	1
53	27205-G02	TIE ROD END ASSEMBLY, RIGHT HAND THREAD (INCLUDES ITEMS 54 - 57)	1
54	18434-G1	NUT, 9/16 - 18, LEFT HAND THREAD	1
55	50641-G1	BOOT, RUBBER	1
56	50209-G1	NUT, SLOTTED, 7/16 - 20	1

FRONT SUSPENSION

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
57	10387-G2	PIN, COTTER, 3/16 X 1 LG	. 1
58	10389-G3	FITTING, GREASE	. 2
59	23929-G2	IDLER ASSEMBLY (INCLUDES ITEMS 60, 61)	. 1
60	15012-G1	BUSHING, FLANGED	. 2
61	10389-G3	FITTING, GREASE	. 1
62	16417-G2	SHAFT, IDLER	. 1
63	13221-G1	WASHER, SPRING WAVE	. 1
64	10387-G1	PIN, COTTER, 1/4 X 1 1/2 LG	. 1
65	15023-G2	RETAINER, SPRING	. 2
66	00876-G4	SCREW, 3/8 - 16 X 1 1/2 LG	. 8
67	00878-G1	WASHER, LOCK, 3/8	. 8
68	00877-G5	NUT, 3/8 - 16	. 6
69	15023-G2	RETAINER, SPRING	. 2
70	00532-G5	NUT, 3/8 - 16	. 6
71	00566-G1	WASHER, LOCK, 3/8	. 6
72	00428-G2	SCREW, 3/8 - 16 X 2 1/4 LG	. 6
73			
74			
75	24065-G1	SPRING, LEAF	. 2
76	12091-G1	CAP, SPINDLE	i i
77			
78	27538-G01	SHOCK ABSORBER	2
79	10435-G1	WASHER, 13/32	. 8
80	10194-G1	BUSHING, RUBBER	. 8
81	00532-G6	NUT, 3/8 - 24	4
82	14723-G1	NUT, LUG, 1/2 - 20	i i
	ļ		

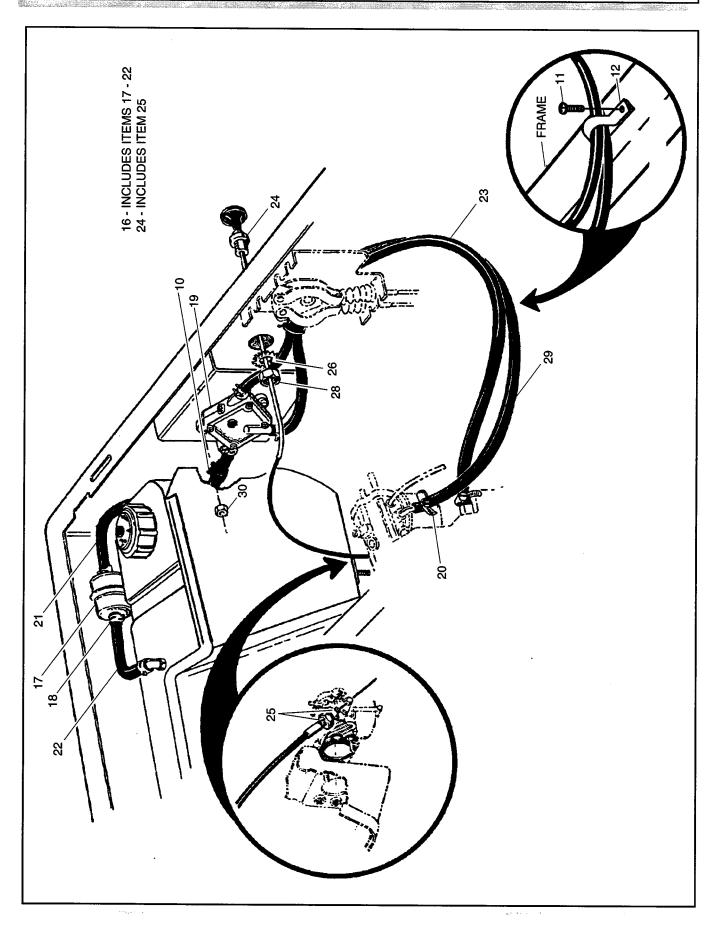


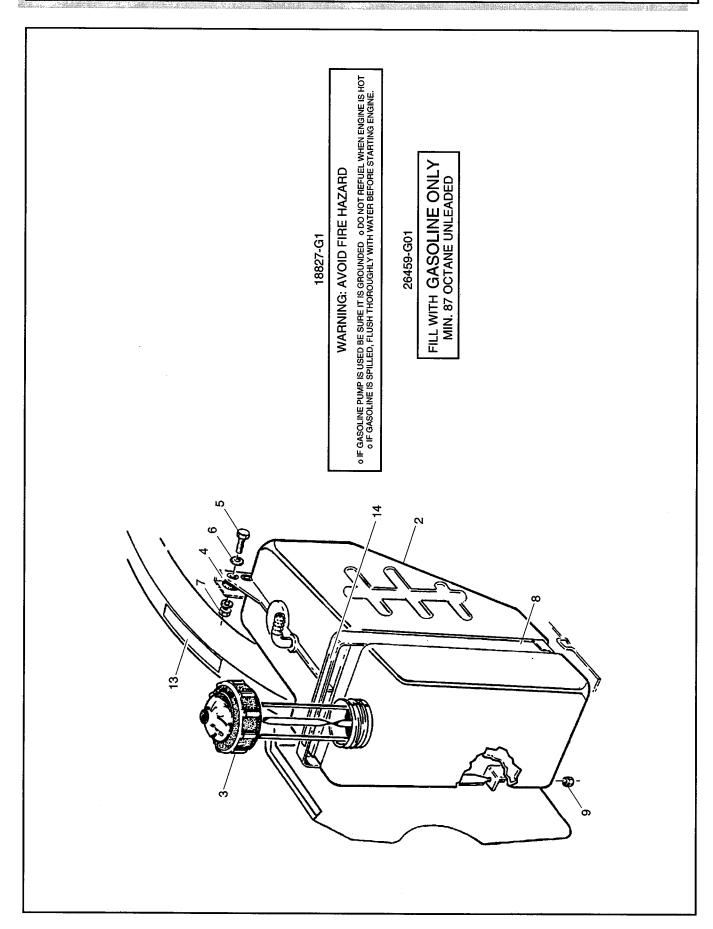



ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1			
2	18293-G1	FUEL TANK	1
3	14099-G2	GAUGE, FUEL CAP	1
4	14091-G1	WASHER, RUBBER	1
5	00439-G1	SCREW, 5/16 - 18 X 1 1/8 LG	1
6	00559-G8	WASHER, 5/16	2
7	11098-G6	NUT, LOCK, 5/16 - 18	1
8	18302-G2	STRAP, FUEL TANK	1
9	14390-G4	NUT, LOCK, 1/4 - 20	1
10	17618-G1	CLAMP, NYLON	2
11	00106-G6	SCREW, #12 - 24 X 3/4 LG., GXI/T-804 TUFF1 MODELS ONLY	1
12	25325-G1	CLAMP, CUSHIONED, GXI/T-804 TUFF1 MODELS ONLY	1
13	18827-G1	LABEL, WARNING: AVOID FIRE HAZARD	1
14	26459-G01	LABEL, GASOLINE ONLY	1
15			
16	25294-G6	FUEL PUMP AND FILTER ASSEMBLY (INCLUDES ITEMS 17 - 22)	1
17	72084-G01	FILTER	1
18	18292-G01	CLAMP, TUBING	2
19	25683-G1	PUMP, FUEL	1
20	11391-G1	CLAMP, TUBING	1
21	17470-G1	FUEL TUBING, 13.25" LG. (ORDER TO NEAREST FOOT AND CUT TO LENGTH)	1
22	17470-G1	FUEL TUBING, 6.25" LG. (ORDER TO NEAREST FOOT AND CUT TO LENGTH)	1
23	17470-G1	PULSE FUEL TUBING, 31" LG. (ORDER TO NEAREST FOOT AND CUT TO LENGTH)	1
24	25693-G01	CHOKE CONTROL ASSEMBLY (INCLUDES ITEM 25)	1
25	00544-G4	NUT, JAM, 5/16 - 21	2
26	00568-G4	WASHER, LOCK, 9/16	1
27			
28	00545-G4	NUT, 9/16 - 18	1

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
29	17470-G1	TUBE, BULK (ORDER TO THE NEAREST FOOT AND CUT TO LENGTH)	AR
30	11027-G2	NUT, LOCK, 1/4 - 20	
:			
:			
1			
		•	

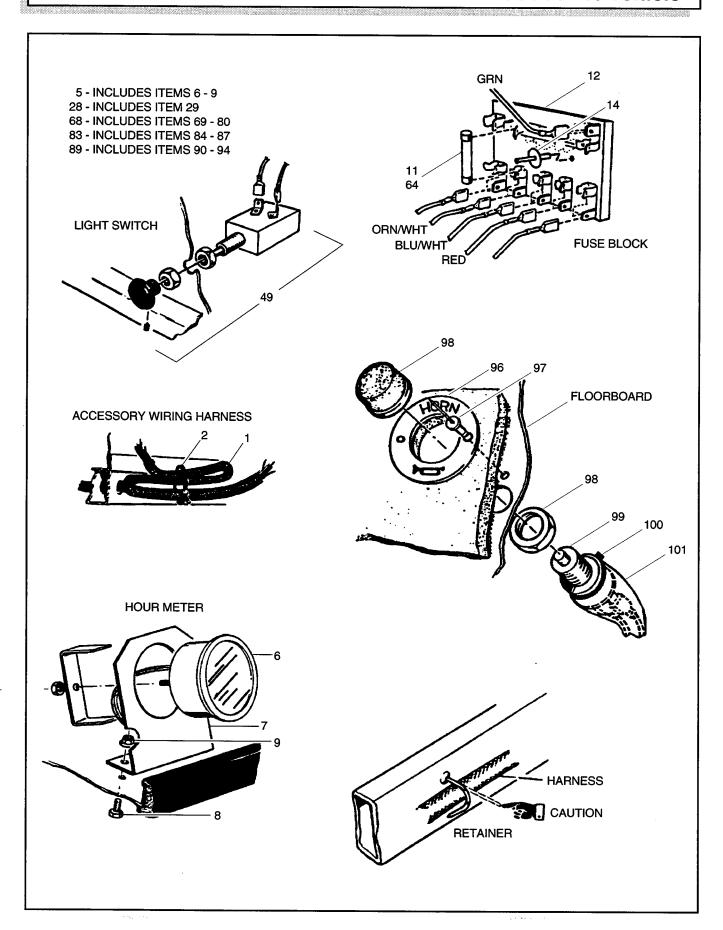

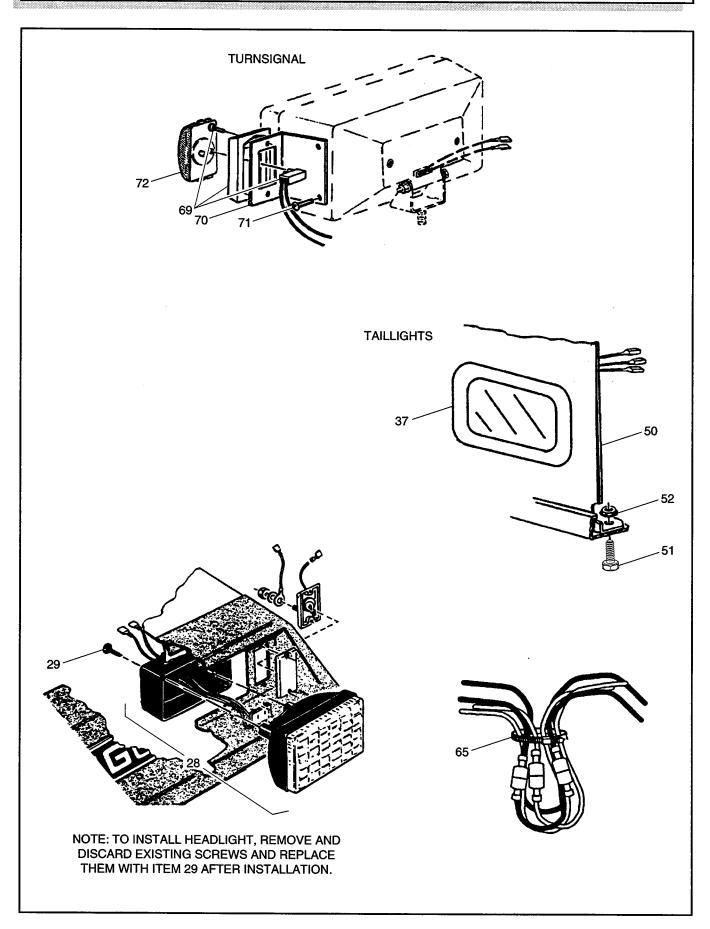

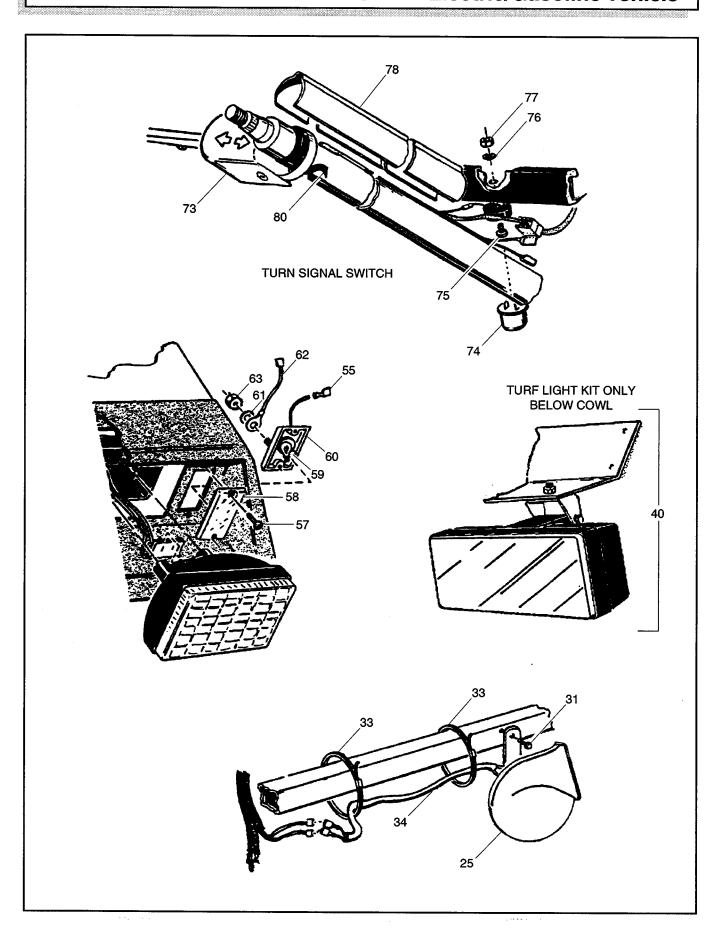

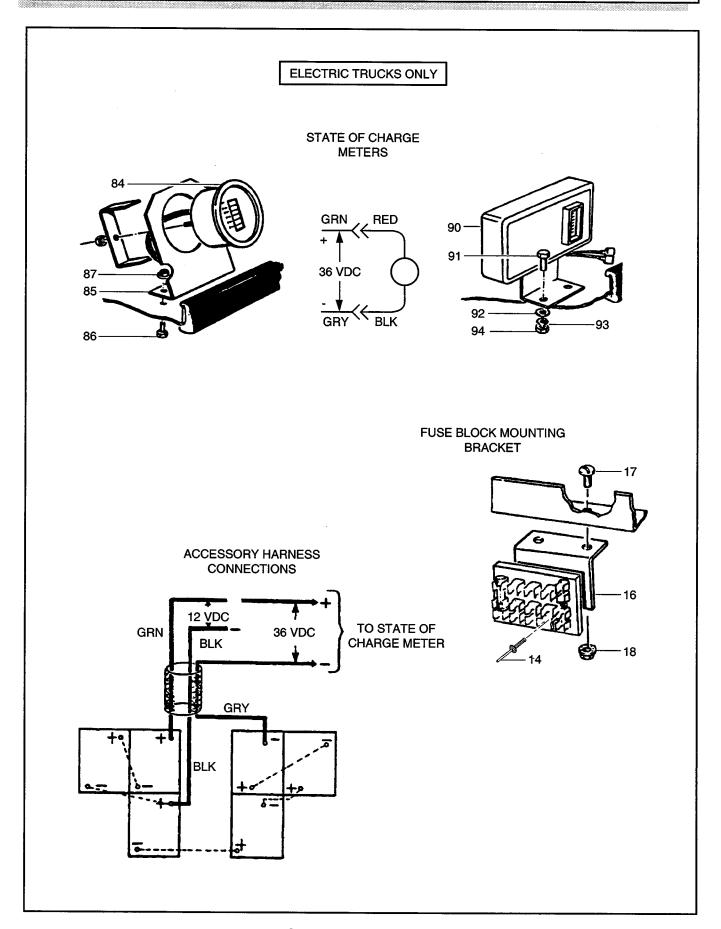

HORN AND ACCESSORY WIRING

Electric/Gasoline Vehicle

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	22069-G1	HARNESS, WIRING	1
2	16172-G1	CLAMP, NYLON	3
3			
4			
5	19318-G2	HOUR METER KIT (INCLUDES ITEMS 6 - 9)	1
6	21573-G1	HOUR METER (INCLUDES MOUNTING HARDWARE)	1
7	18001-G1	BRACKET, HOUR METER	1
8	00414-G4	SCREW, 1/4 - 20 X 1/2 LG	2
9	11027-G2	NUT, LOCK, 1/4 - 20	2
10			
11	18392-G1	FUSE, 15 AMP (ELECTRIC VEHICLES ONLY)	3
12	25953-G01	FUSEBLOCK	1
13			
14	10570-G3	RIVET, 1/8	2
15			
16	22767-G1	BRACKET, FUSE BLOCK MOUNTING (ELECTRIC VEHICLES ONLY)	1
17	16705-G3	SCREW, 1/4 - 20 X 3/4 LG	2
18	11027-G2	NUT, LOCK, 1/4 - 20	2
19			
20			
21		9-	
22			
23			
24			
25	32860-G1	HORN	1
26			
27			
28	20209-G3	HEADLAMP (REQUIRES ITEM 29 FOR INSTALLATION)	2
29	00906-G6	SCREW, #10 - 16 X 1 LG	2
30			

HORN AND ACCESSORY WIRING

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	00106-G6	SCREW, SELF TAPPING, #12 - 24 X 3/4 LG.	. 1
32			
33	17618-G1	CLAMP, NYLON	2
34	24684-G2	HARNESS, HORN WIRING	, 1
35			
36			
37	32739-G2	TAILLIGHT (INCLUDES BULB)	. 2
38			
39			
40	22301-G2	HEAD AND TAILLIGHT KIT	1
41			
42			
43			
44			
45			
46			
47			
48	·		
49	18431-G1	SWITCH, HEADLAMP (INCLUDES MOUNTING HARDWARE)	1
50	22282-G1	PLATE, TAILLIGHT MOUNT	1
51	13437-G9	SCREW, LOCK, 1/4 - 20 X 3/4 LG	2
52	11027-G2	NUT, LOCK, 1/4 - 20	. 2
53			
54	20570-G2	TURN SIGNAL ASSEMBLY (INCLUDES ITEMS 55 - 62)	. 2
55	18995-G1	TERMINAL, FEMALE	. 1
56	20574-G2	TURN SIGNAL, AMBER (INCLUDES ITEMS 57 - 60)	. 1
57	*	SCREW	. 2
58	*	LENS, TURN SIGNAL	. 1
59	21760-G1	BULB	. 1
60	*	HOUSING, TURN SIGNAL	. 1

When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
61	00567-G7	WASHER, LOCK, 1/4	1
62	20606-G1	WIRE, JUMPER	1
63	00532-G1	NUT, LOCK, 1/4 - 20	1
64	18392-G2	FUSE, 20 AMP (GASOLINE VEHICLES ONLY)	3
65	17618-G1	CLAMP, NYLON	4
66			
67			
68	22437-G1	TURN SIGNAL SWITCH KIT (INCLUDES ITEMS 69 - 80)	1
69	18927-G1	TURN SIGNAL MOUNT KIT	2
70	21806-G1	BRACKET, TURN SIGNAL	2
71	00598-G4	SCREW, SELF TAPPING, #8 - 18 X 1/2 LG	4
72	19180-G2	LAMP, YELLOW SIGNAL	2
73	17867-G1	TURN SIGNAL SWITCH ASSEMBLY (INCLUDES ITEM 74)	1
74	21640-G1	FLASHER, TURN SIGNAL	1
75	00372-G4	SCREW, #8 - 32 X 1/2 LG	1
76	00565-G4	WASHER, LOCK, #8	1
77	00526-G1	NUT, #8 - 32	1
78	20965-G3	COVER, STEERING COLUMN (WITH TURN SIGNALS)	1
79			
80	19344-G1	TAPE, VINYL	AR
81			
82			
83	19197-G7	ROUND STATE OF CHARGE METER KIT (INCLUDES ITEMS 84 - 87)	1
84	19714-G1	METER, STATE OF CHARGE	1
85	18001-G1	BRACKET	1
86	00414-G4	SCREW, 1/4 - 20 X 1/2 LG	2
87	11027-G2	NUT, LOCK, 1/4 - 20	2
88			
89	19197-G3	SQUARE STATE OF CHARGE METER KIT (INCLUDES ITEMS 90 - 94)	1
90	19196-G2	METER, STATE OF CHARGE	1


HORN AND ACCESSORY WIRING

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.


When ordering parts, please specify the model and serial number of the product.


* Indicates a component that is not available as an individual part.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
91	00372-G5	SCREW, #8 - 32 X 5/8 LG	. 2
92	00559-G4	WASHER, #8	2
93	00565-G4	WASHER, LOCK, #8	2
94	00526-G1	NUT, #8 - 32	2
95			
96	19233-G1	DECAL, HORN	1
97	14601-G9	RIVET	2
98	17318-G2	CAP AND NUT, HORN SWITCH	1
99	17318-G1	SWITCH, HORN	1
100	17618-G1	CLAMP, NYLON	. 2
101	27068-G01	BOOT, HORN	. 1

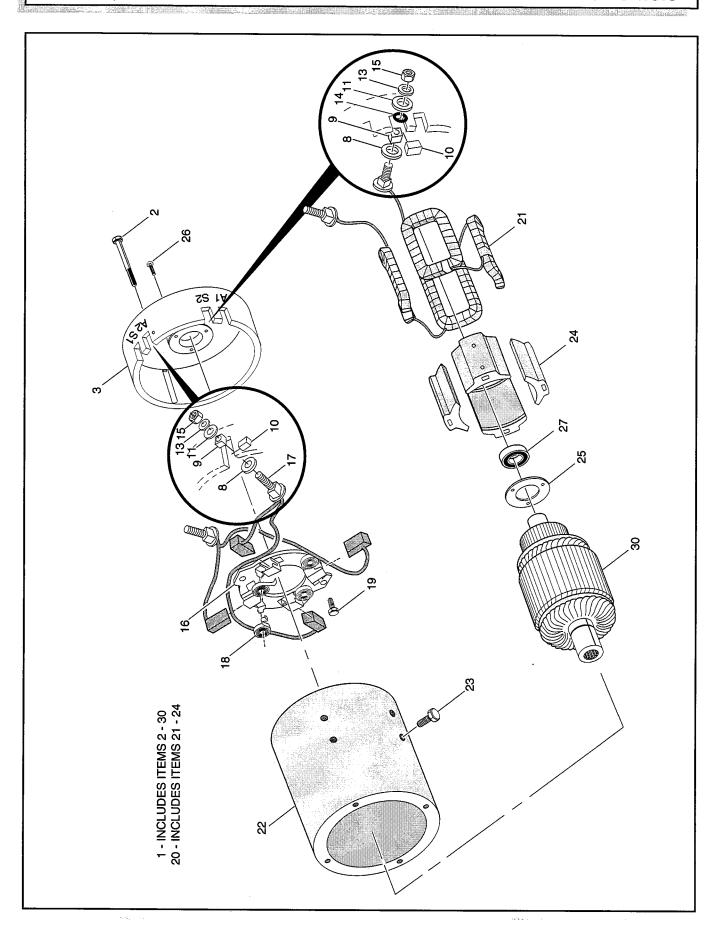

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	25028-G1	MOTOR, 2 HP COMPLETE (INCLUDES ITEMS 2 - 30)	1
2	*	SCREW, CLAMP	2
3	*	SHIELD, END	1
4			
5			
6			
7			
8	*	WASHER, INSULATED	4
9	*	GASKET	4
10	*	BUSHING, INSULATED	4
11	*	WASHER, INSULATED	4
12			
13	*	WASHER	4
14	*	GASKET	4
15	*	LOCK NUT	4
16	*	BRUSH HOLDER	1
17	*	BRUSH AND PARTS	2
18	*	SPRING	4
19	*	SCREW, BRUSH HOLDER	2
20	*	STATOR, COMPLETE (INCLUDES ITEMS 21 - 24)	1
21	*	FIELD COIL	1
22	*	STATOR SHELL	1
23	*	SCREW POLE	8
24	*	MAIN POLE	4
25	*	RETAINER, BEARING	2
26	*	SCREW	3
27	*	BALL BEARING	
28			
29			
30	*	ARMATURE	1

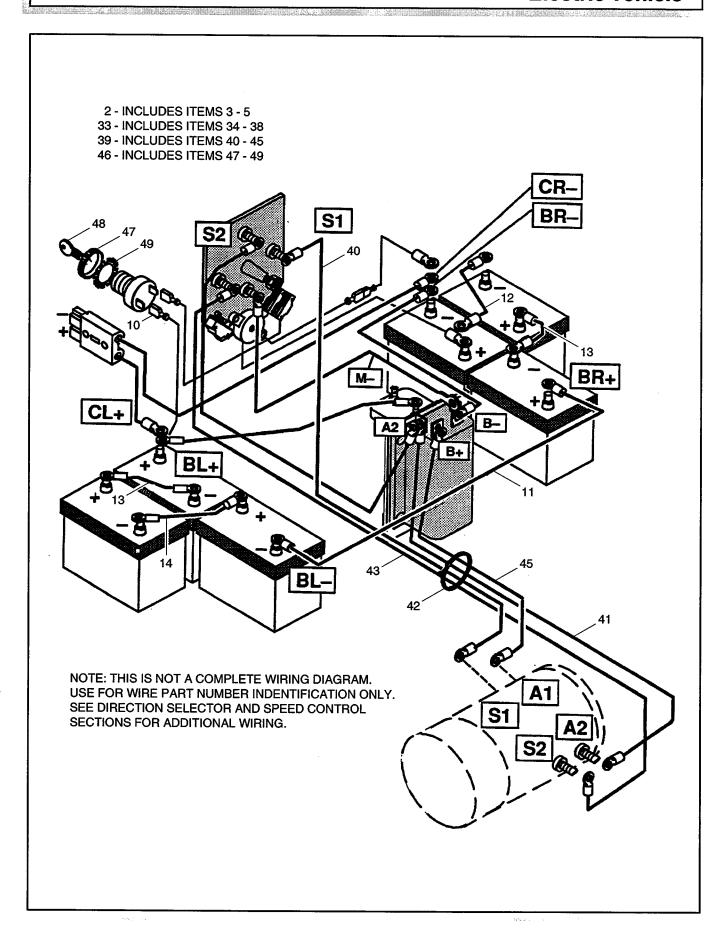

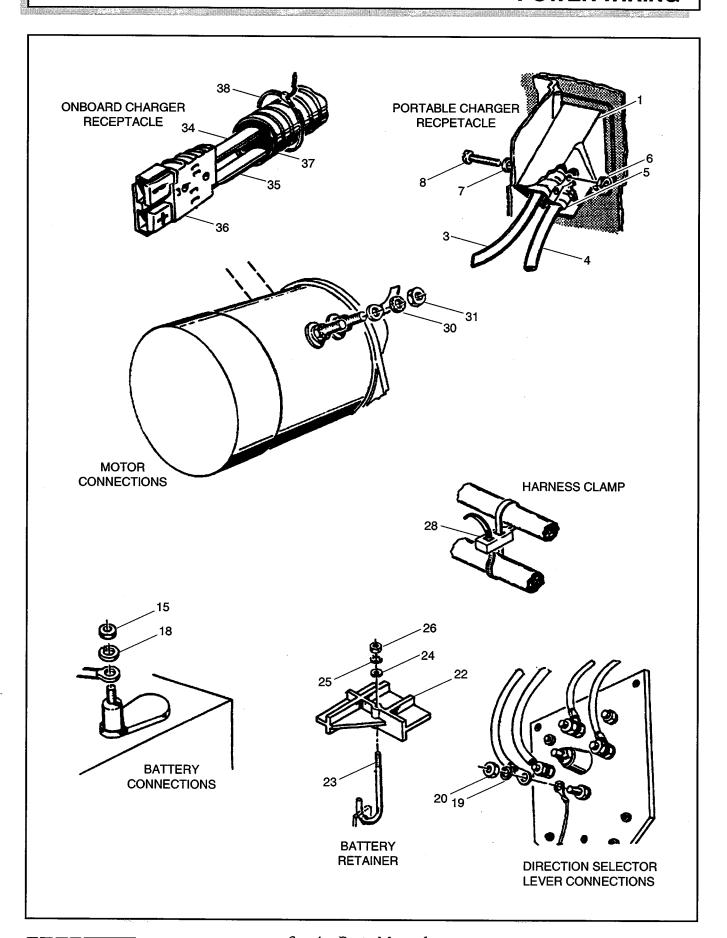


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	18724-G1	HOLDER, CHARGER RECEPTACLE	1
2	18784-G1	HARNESS, CHARGER CONNECTOR WIRING	
3	14852-G1	(INCLUDES ITEMS 3 - 5)	1
4	14852-G1	WIRE (CR-)	1
5	18782-G1	WIRE (CL+)	1
6		CONNECTOR	1
	14390-G9	NUT, LOCK, #6 - 32	
7	00559-G3	WASHER, #6	2
8	00645-G2	SCREW, #6 - 32 X 1 1/4 LG	2
9	00000 04	l wine	
10	23968-G1	WIRE	1
11	11885-G1	WIRE	1
12	23540-G1	WIRE	1
13	11893-G1	WIRE	2
14	11894-G1	WIRE	1
15	00994-G01	NUT, SILICONE BRONZE, 5/16 - 18	12
16			
17			
18	00993-G01	i i	12
19	00565-G8	WASHER, LOCK, 5/16	4
20	00702-G2	NUT, 5/16 - 18	4
21			
22	15736-G1	BATTERY HOLD DOWN	2
23	15734-G2	"J" BOLT	2
24	00559-G8	WASHER, 5/16	2
25	00565-G8	WASHER, LOCK, 5/16	2
26	00702-G2	NUT, 5/16 - 18	2
27			
28	23544-G1	CLAMP, DOUBLE NYLON	4
29			


When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
30	00567-G8	WASHER, LOCK, 5/16	. 2
31	00532-G3	NUT, 5/16 - 18	. 4
32			
33	22344-G1	HARNESS, CHARGER CONNECTOR WIRING (INCLUDES ITEMS 34 - 38) XI-500 MODEL ONLY	, 1
34	22349-G1	WIRE (CR-)	. 1
35	22349-G2	WIRE (CL+)	. 1
36	18782-G1	CONNECTOR	1
37	22351-G1	FLEXLOOM	1
38	17618-G1	CLAMP, NYLON	2
39	23978-G1	HARNESS, DIRECTION SELECTOR WIRING (INCLUDES ITEMS 40 - 45)	1
40	23793-G9	WIRE (S1)	1
41	23793-G7	WIRE (S2)	1
42	17618-G1	CLAMP, NYLON	5
43	23793-G8	WIRE (S2)	1
44			
45	23793-G6	WIRE (A1)	1
46	17421-G1	IGNITION SWITCH KIT (INCLUDES ITEMS 47 - 49)	1
47	17137-G1	FACE NUT	1
48	17063-G1	IGNITION KEY	2
49	00568-G6	WASHER, LOCK, 3/4	1

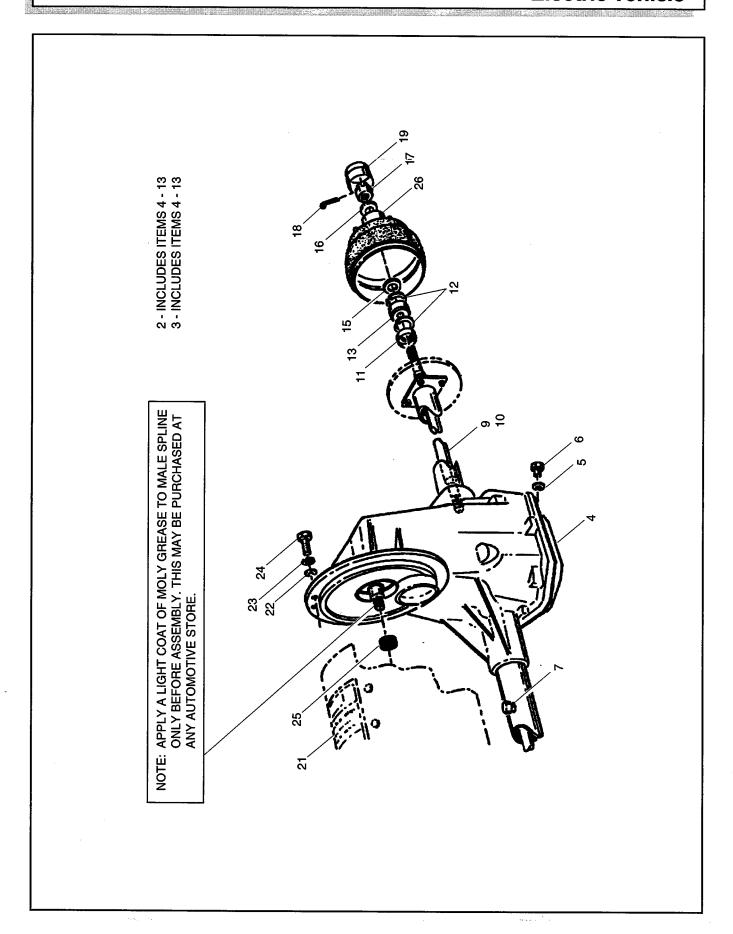


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	XXXXX-XX	WHEEL BRAKE SET (SEE SECTION DD FOR PART NUMBER AND QUANTITY)	X
2	27120-G01	REAR AXLE ASSEMBLY, 12.44 TO 1, XT-500 MODELS (INCLUDES ITEMS 4 - 13)	. 1
3	27120-G02	REAR AXLE ASSEMBLY, 14.78 TO 1, XI-500 MODELS (INCLUDES ITEMS 4 - 13)	
4	25228-G1	COVER	1 1
5	25227-G1	WASHER	1
6	25226-G1	PLUG, CHECK/FILL	1
7	25229-G1	VENT, VALVE	1
8			
9	20377-G4	AXLE SHAFT, PASSENGER SIDE	1
10	20377-G3	AXLE SHAFT, DRIVER'S SIDE	1
11	15114-G1	SEAL, AXLE	2
12	15113-G1	RING, RETAINING	. 4
13	15112-G1	BALL BEARING, AXLE	2
14			
15	15458-G1	WASHER, 20 MM	2
16	15487-G1	WASHER, BRAKE DRUM, 5/8	2
17	15483-G1	NUT, SLOTTED, 5/8 - 18	. 2
18	10387-G1	PIN, COTTER, 1/8 X 1/2 LG	. 2
19	12091-G1	CAP, SPINDLE	. 2
20			:
21	XXXXX-XX	MOTOR (SEE SECTION U FOR PART NUMBER AND QUANTITY)	1
22	00559-G7	WASHER, 1/4	. 3
23	00565-G7	WASHER, LOCK, 1/4	3
24	00797-G2	SCREW, 1/4 - 20 X 1 1/4 LG	3
25	24261-G1	BUMPER, SPLINE	
26	24939-G1	ADAPTOR, SPINDLE CAP	! I

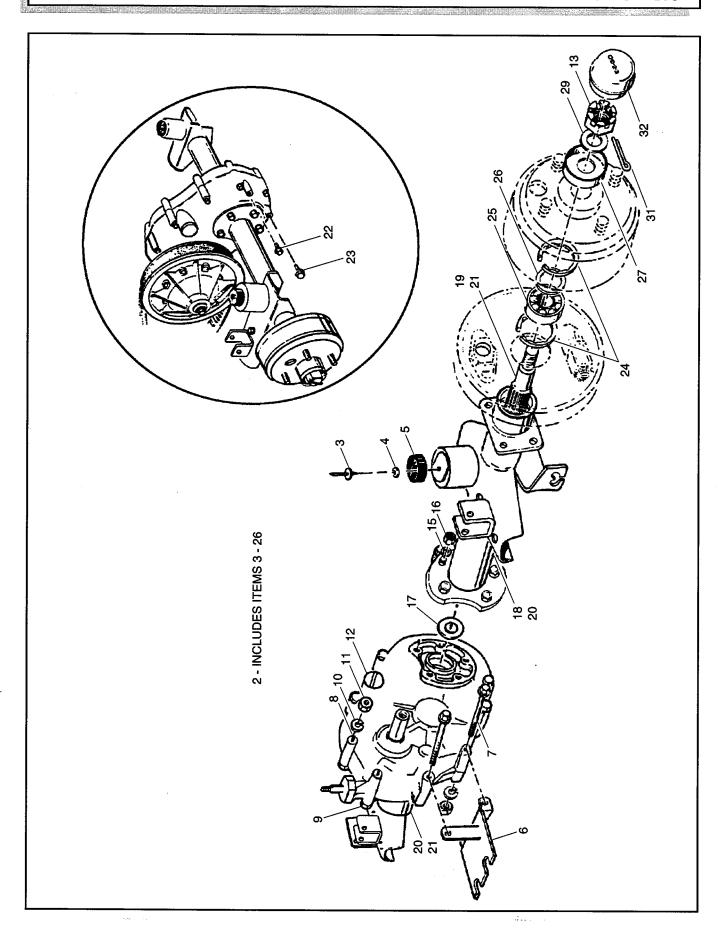

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1			
2	25696-G01	SERVICE, REAR AXLE (INCLUDES ITEMS 3 - 26)	1
3	14601-G1	RIVET	2
4	00559-G5	WASHER, #10	. 2
5	13728-G1	BUMPER	. 2
6	26815-G1	BRACKET, SHIFTER CABLE	. 2
7	26823-G01	BOLT, FLANGE, M8 X 1.25 X 100 MM LG	. 8
8	26824-G01	BOLT, FLANGE, M8 X 1.25 X 110 MM LG	. 8
9	26825-G01	BOLT, FLANGE, M8 X 1.25 X 120 MM LG	. 8
10	26826-G01	WASHER, LOCK, 8 MM	. 12
11	26827-G01	NUT, M8 X 1.25 MM	12
12	26772-G01	PLUG, OIL FILL	. 1
13	00518-G8	NUT, SLOTTED, 3/4 - 16	. 2
14			
15	26828-G01	WASHER, 10 MM	. 8
16	26829-G01	NUT, 10 MM X 1.5 MM	. 8
17	26766-G01	SEAL, OIL	. 2
18	27601-G01	AXLE CASE, DRIVER'S SIDE	. 1
19	26809-G01	AXLE SHAFT, DRIVER'S SIDE	1
20	27600-G01	AXLE CASE, PASSENGER SIDE	. 1
21	26810-G01	AXLE SHAFT, PASSENGER SIDE	. 1
22	26768-G01	PLUG, OIL CHECK	. 1
23	26770-G01	PLUG, OIL DRAIN	. 1
24	26814-G01	RING, RETAINING	4
25	26811-G01	BALL BEARING	. 2
26	15485-G1	WASHER, 20 MM	. 2
27	24939-G2	ADAPTER, SPINDLE CAP	2
28			
29	21830-G1	WASHER, BRAKE DRUM	2
30			

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	10387-G1	PIN, COTTER	2
32	12091-G1	CAP, SPINDLE	

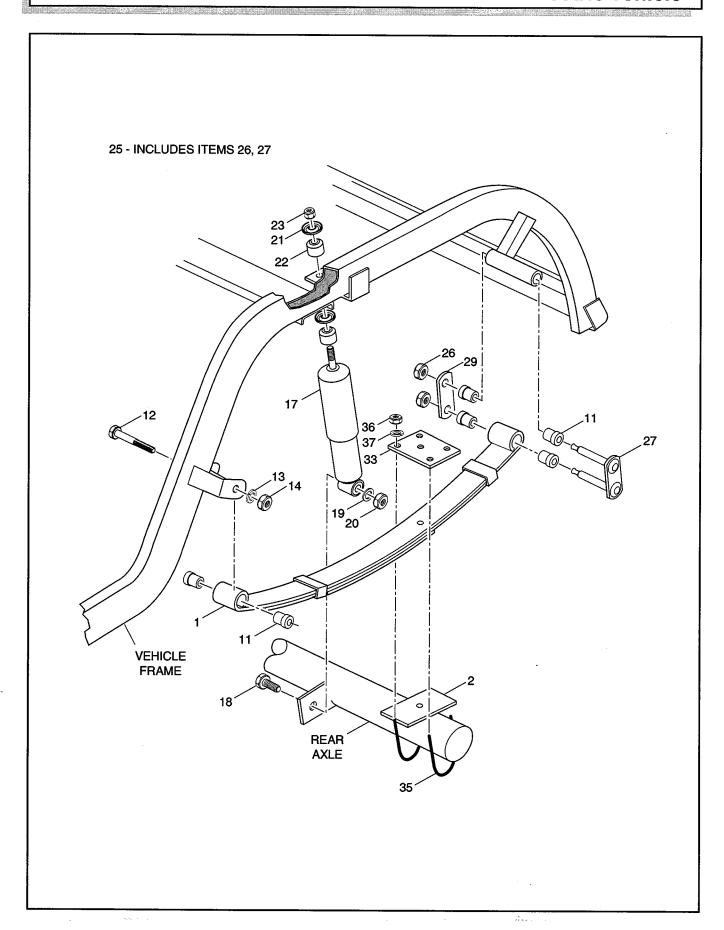

REAR SUSPENSION

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.


* Indicates a component that is not available as an individual part.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	11645-G2	LEAF SPRING	. 2
2	27859-G01	SPACER, LEAF SPRING	. 2
3			
4			
5			
6			
7			
8			
9			
10			
11	20098-G1	BUSHING, RUBBER	. 12
12	15727-G1	BOLT, SHOULDER, 3/8 - 16	. 2
13	00566-G1	WASHER, LOCK, 3/8	. 2
14	00532-G5	NUT, 3/8 - 16	. 2
15			
16			
17	20279-G1	SHOCK ABSORBER	. 2
18	00428-G2	SCREW, 3/8 - 16 X 2 1/4 LG	. 2
19	00560-G1	WASHER, 3/8	, 2
20	00550-G5	NUT, LOCK, 3/8 - 16	2
21	10435-G1	WASHER, SHOCK ABSORBER	4
22	10194-G1	BUSHING, SHOCK ABSORBER	. 4
23	00532-G6	NUT, 3/8 - 24	2
24			
25	27458-G01	SHACKLE PLATE ASSEMBLY (INCLUDES ITEMS 26, 27)	2
26	27459-G01	BOLT, SHACKLE	2
27	27460-G02	SHACKLE PLATE (WITH STUDS)	1
28			
29	27460-G01	PLATE, SHACKLE	2
30			


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31			
32			
33	17034-G1	PLATE, SPRING RETAINER	2
34			
35	13716-G2	"U" BOLT, AXLE	4
36	00532-G5	NUT, 3/8 - 16	8
37	00566-G1	WASHER, LOCK, 3/8	8
		·	
			•
		·	
			İ

Electric Vehicle

REAR SUSPENSION

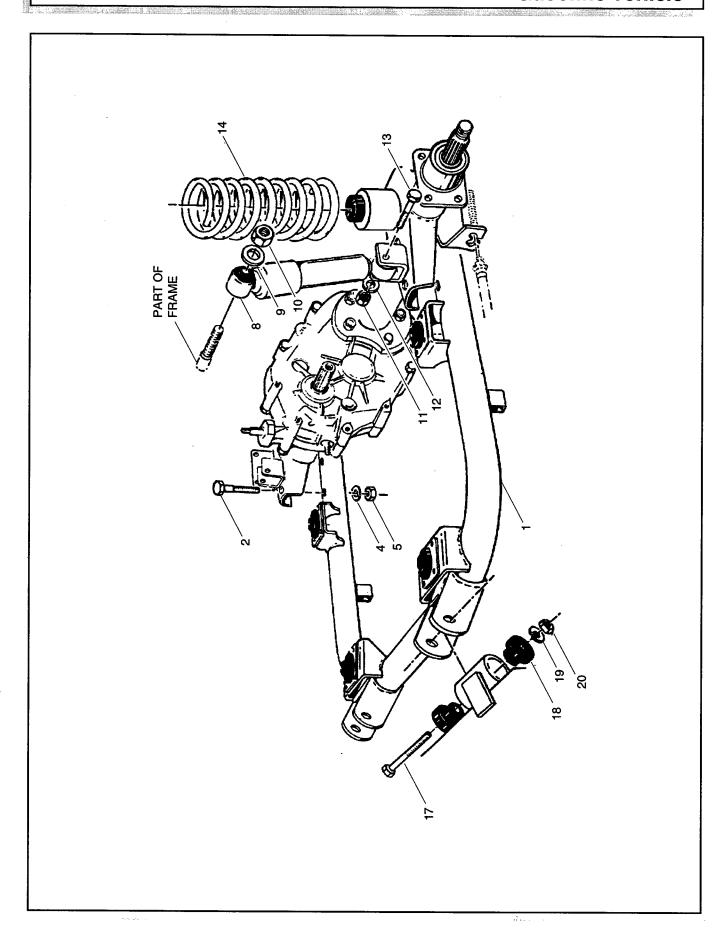

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	25673-G01	FRAME, INNER (WITH FACTORY INSTALLED ENGINE MOUNTS)	1
2	00428-G6	SCREW, 3/8 - 16 X 2 3/4 LG	4
3			
4	00560-G1	WASHER, 3/8	4
5	00550-G5	NUT, LOCK, 3/8 - 16	4
6			
7			
8	24957-G1	SHOCK ABSORBER	2
9	00560-G3	WASHER, 1/2	2
10	00551-G1	NUT, LOCK, 1/2 - 13	2
11	00550-G5	NUT, LOCK, 3/8 - 16	. 2
12	00560-G1	WASHER, LOCK, 3/8 - 16	. 2
13	00428-G2	SCREW, 3/8 - 16 X 2 1/4 LG	2
14	14462-G1	SPRING, COMPRESSION	2
15			
16			
17	00406-G4	SCREW, 1/2 - 13 X 4 1/2 LG	2
18	12302-G2	MOUNT, ISOLATION	4
19	00566-G3	WASHER, LOCK, 1/2	. 2
20	00551-G1	NUT, LOCK, 1/2 - 13	. 2
		·	l
			:

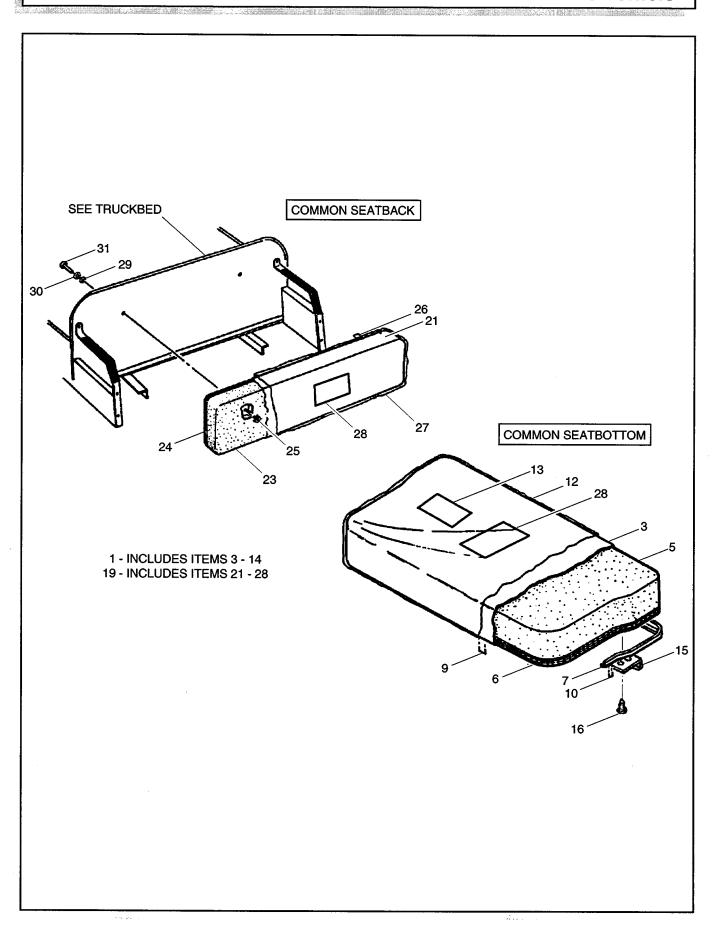


When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	25504-G**	SEAT BOTTOM ASSEMBLY (INCLUDES ITEMS 3 - 14)	. 1
2			
3	18146-G**	COVER, SEAT BOTTOM	1
4			
5	25432-G2	CUSHION, FOAM SEAT BOTTOM	1
6	*	SEAT BOTTOM, PLYWOOD	. 1
7	17113-G3	TRIM, VINYL	. 1
8			
9	*	STAPLE	110
10	*	STAPLE	24
11	•		
12	*	PLASTIC, HEAT SHRINK	1
13	*	LABEL, WARNING - PROTECTIVE BAG	1
14			
15	18250-G2	BRACKET, HINGE	2
16	00115-G2	SCREW, SELF TAPPING, 1/4 - 14 X 1 1/4 LG	4
17			
18			
19	25807-G**	SEAT BACK ASSEMBLY (INCLUDES ITEMS 21 - 28)	1
20			
21	18144-G**	COVER, SEAT BACK	1
22			
23	25433-G2	CUSHION, FOAM SEAT BACK	. 1
24	*	SEAT BACK, PLYWOOD	. 1
25	11782-G2	NUT, TEE, 1/4 - 20	. 2
26	*	STAPLE	. 95
27	*	PLASTIC, HEAT SHRINK	. 1
28	*	LABEL, WARNING - PROTECTIVE BAG	. 1
29	00915-G1	WASHER, #14	. 2
30	00664-G7	WASHER, LOCK, STAINLESS STEEL, 1/4	. 2

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	16705-G1	SCREW, STAINLESS STEEL, 1/4 - 20 X 1 LG.	2
:			
		·	

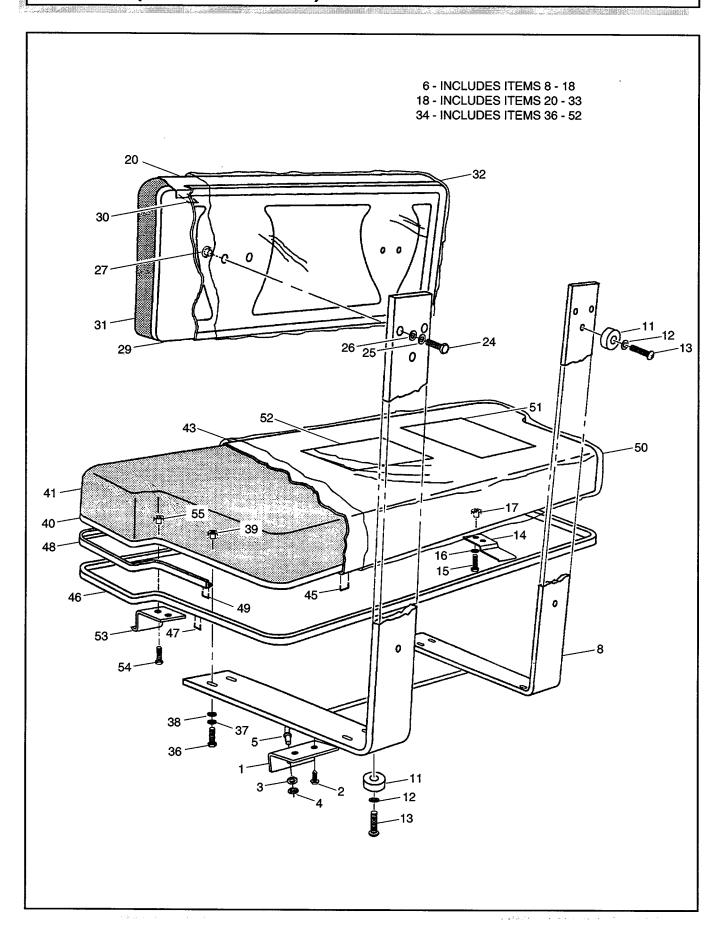

Gasoline Vehicle

SEATING (GXI/T-804 TUFF 1)

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	22501-G2	MOUNT	. 1
2	00965-G01	BOLT, 1/4 - 20 X 3/4 LG.	2
3	00559-G8	WASHER, 5/16	1
4	12064-G1	PUSHNUT	. 1
5	33274-G01	ROD, SUPPORT	. 1
6	27390-G**	SEAT BOTTOM AND BACK ASSEMBLY (INCLUDES ITEMS 8 - 18)	1
7			
8	27385-G01	BRACKET, SEAT	. 2
9			
10			
11	13728-G1	BUMPER, RUBBER	. 4
12	00559-G5	WASHER, #10	. 4
13	00106-G6	SCREW, #12 - 24 X 3/4 LG	. 4
14	27308-G01	RETAINER, SEAT PROP	. 1
15	00661-G6	BOLT, 1/4 - 20 X 3/4 LG	. 2
16	00664-G7	WASHER, LOCK, 1/4 - 20	2
17	11782-G2	NUT, TEE, 1/4 - 20	2
18	27546-G**	SEAT BACK ASSEMBLY (INCLUDES ITEMS 20 - 33)	. 1
19			
20	27545-G**	COVER, BACKREST	. 1
21		·	
22	18868-G**	COVER, SEAT BACK	. 1
23			
24	16705-G1	BOLT, 1/4 - 20 X 1 LG	. 4
25	00793-G2	WASHER, 1/4	4
26	00664-G7	WASHER, LOCK, 1/4 - 20	4
27	11782-G2	NUT, TEE, 1/4 - 20	4
28			
29	*	PLYWOOD, SEAT BACK	. 1
30	*	STAPLE	95

SEATING (GXI/T-804 TUFF 1)


Gasoline Vehicle


THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	25433-G4	CUSHION, FOAM SEAT BACK	1
32	*	PLASTIC, HEAT SHRINK	1
33			
34	27380-G**	SEAT BOTTOM ASSEMBLY (INCLUDES ITEMS 36 - 52)	1
35			
36	00661-G8	BOLT, 1/4 - 20 X 1 LG.	8
37	00793-G2	WASHER, 1/4	8
38	00664-G7	WASHER, LOCK, 1/4 - 20	8
39	11782-G2	NUT, TEE, 1/4	8
40	*	PLYWOOD, SEAT BOTTOM	1
41	25432-G2	CUSHION, FOAM SEAT BOTTOM	1
42			
43	18146-G**	COVER, SEAT BOTTOM	1
44			
45	*	STAPLE	110
46	12727-G10	GASKET, SEAT	1
47	*	STAPLE	61
48	17113-G1	TRIM, VINYL	1
49	*	STAPLE	24
50	*	PLASTIC, HEAT SHRINK	1
51	*	TAG, NOTICE (SAFETY)	1
52	*	LABEL, WARNING - PROTECTIVE BAG	1
53	18250-G1	BRACKET, SEAT HINGE	2
54	00661-G6	BOLT, 1/4 - 20 X 3/4 LG.	4
55	11782-G2	NUT, TEE, 1/4 - 20	4
	į		

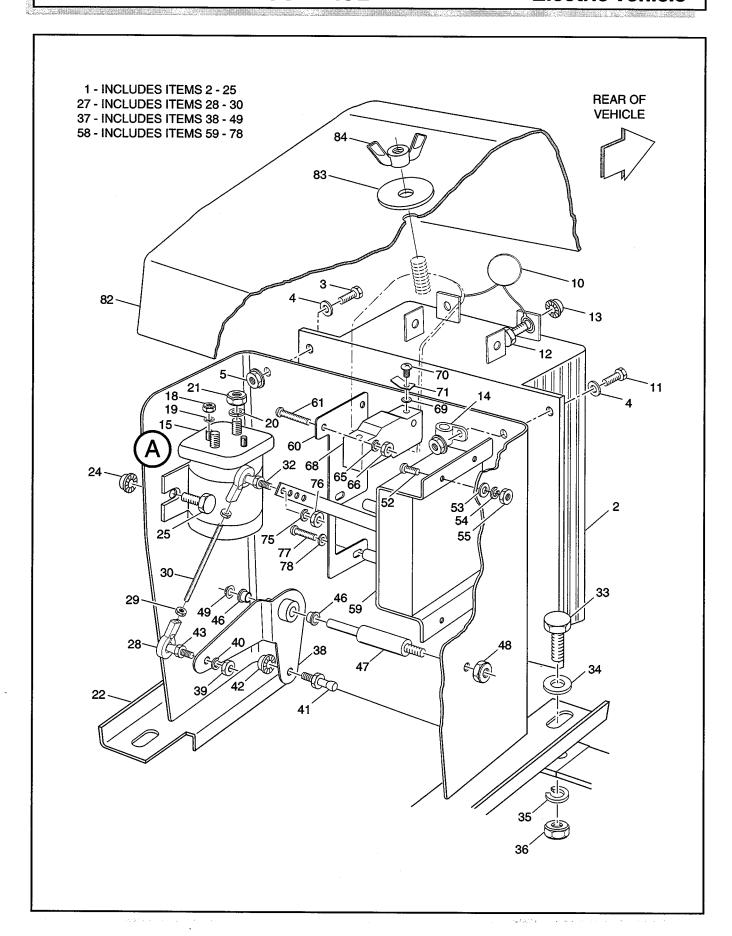

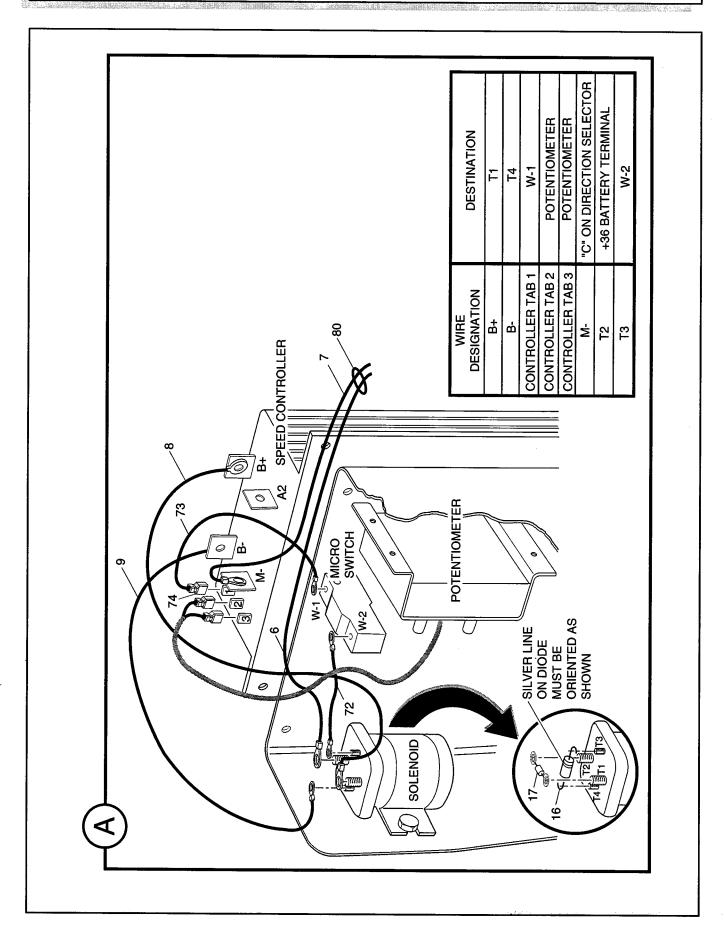

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	25389-G02	SOLID STATE SPEED CONTROL ASSEMBLY (INCLUDES ITEMS 2 - 25)	1
2	22717-G1	CONTROLLER	1
3	00414-G5	SCREW, 1/4 - 20 X 5/8 LG	3
4	00660-G7	WASHER, STAINLESS STEEL, 1/4	4
5	11027-G2	NUT, LOCK, 1/4 - 20	4
6	23793-G3	WIRE (SOL - BL+)	1
7	23793-G4	WIRE (M - C)	1
8	23793-G1	WIRE (SOL - B+)	1
9	24021-G1	WIRE	
10	25949-G01	MOV	1
11	00414-G6	SCREW, 1/4 - 20 X 3/4 LG	1
12	00270-G5	SCREW, 5/16 - 18 X 5/8 LG	4
13	11027-G1	NUT, LOCK, 5/16 - 18	4
14	11845-G5	CLIP, INSULATED CABLE	1
15	20468-G1	SOLENOID	1
16	30353-G1	DIODE	1
17	21764-G1	RESISTOR	1
18	00526-G4	NUT, #10 - 32	2
19	00565-G5	WASHER, #10	2
20	00565-G8	WASHER, 5/16	2
21	00544-G4	NUT, 5/16 - 24	1
22	25378-G01	BRACKET, ELECTRONIC SPEED CONTROL	1
23			
24	11027-G2	NUT, LOCK, 1/4 - 20	2
25	00414-G4	SCREW, 1/4 - 20 X 1/2 LG	2
26			
27	22587-G8	ADJUSTING ROD ASSEMBLY (INCLUDES ITEMS 28 - 30)	1
28	24465-G1	SOCKET	2
29	00526-G4	NUT, #10 - 32	2

Electric Vehicle

SOLID STATE SPEED CONTROL

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
30	23722-G1	ROD, CONTROL	. 1
31			
32	15944-G3	BALL JOINT BALL	2
33	00661-G8	BOLT, 1/4 - 20 X 1 LG.	4
34	00559-G7	WASHER, 1/4	4
35	00565-G7	WASHER, LOCK, 1/4	4
36	00532-G1	NUT, 1/4 - 20	. 4
37	25332-G1	PIVOT ARM ASSEMBLY (INCLUDES ITEMS 38 - 49)	. 1
38	25331-G1	PIVOT ARM	. 1
39	00526-G4	NUT, #10 - 32	2
40	00565-G5	WASHER, #10	. 1
41	24479-G1	BALL JOINT BALL	. 1
42	11098-G9	NUT, LOCK, 5/16 - 24	. 1
43	15944-G3	BALL JOINT BALL	2
44			
45			
46	24621-G1	WASHER, NYLON	. 2
47	25328-G1	PIVOT ROD	1
48	14390-G1	NUT, LOCK, 3/8 - 24	. 1
49	12064-G1	PUSHNUT	. 1
50			
51	•		
52	00150-G4	SCREW, #10 - 24 X 1/2 LG	3
53	00559-G5	WASHER, #10	. з
54	00565-G5	WASHER, LOCK, #10	3
55	00526-G3	NUT, #10 - 24	. 3
56			
57			
58	25458-G1	POTENTIOMETER ASSEMBLY (INCLUDES ITEMS 59 - 78)	. 1
59	25460-G1	POTENTIOMETER	1

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
60	23275-G1	BRACKET, POTENTIOMETER MICRO SWITCH	1
61	00645-G1	SCREW, #6 - 32	2
62			
63			
64			
65	00565-G3	WASHER, LOCK, #6	2
66	00525-G5	NUT, #6 - 32	2
67			
68	10606-G5	MICRO SWITCH	1
69	00567-G3	WASHER, LOCK, #6	2
70	13514-G1	SCREW, BRASS, #6 - 32 X 7/32 LG	2
71	14628-G1	TAB, FASTON	I
72	23975-G1	WIRE	1
73	24019-G2	WIRE	1
74	17064-G1	TERMINAL, PUSHON	4
75	00565-G5	WASHER, #10	1
76	00526-G4	NUT, #10 - 32	1
77	00372-G3	SCREW, #8 - 32 X 3/8 LG	2
78	00559-G4	WASHER, #8	2
79			
80	17618-G10	CLAMP, NYLON	1
81			
82	23723-G2	COVER, ELECTRONIC SPEED CONTROL	1
83	16469-G1	WASHER, FENDER	1
84	14419-G1	WINGNUT	1

Electric Vehicle


SOLID STATE SPEED CONTROL

=><□ TEXTRON

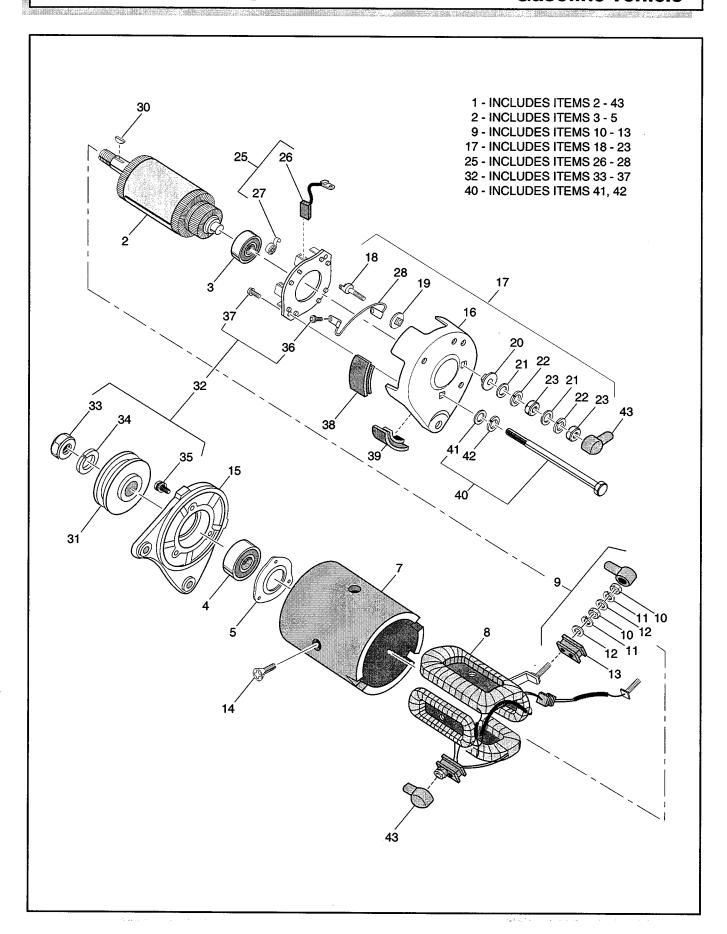

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	27065-G01	STARTER/GENERATOR, COMPLETE (INCLUDES ITEMS 2 - 43)	. 1
2	26870-G01	ARMATURE ASSEMBLY (INCLUDES ITEMS 3 - 5)	. 1
3	26871-G01	BALL BEARING, REAR	. 1
4	26872-G01	BALL BEARING, FRONT	1
5	26873-G01	HOLDER, BEARING	1
6			
7			
8	26875-G01	COIL, FIELD	1
9	26876-G01	"F" INSULATING BRUSH ASSEMBLY (INCLUDES ITEMS 10 - 13)	2
10	*	NUT	. 2
11	*	WASHER, LOCK	2
12	*	WASHER	. 2
13	*	INSULATOR	. 1
14	26877-G01	SCREW, POLE CORE SET	4
15	26878-G01	COVER, FRONT	. 1
16	26879-G01	COVER, REAR	1
17	26880-G01	"A" TERMINAL ASSEMBLY (INCLUDES ITEMS 18 - 23)	. 2
18	*	TERMINAL	. 2
19	*	INSULATOR	. 2
20	*	INSULATOR	. 2
21	*	WASHER	. 4
22	*	WASHER, LOCK	4
23	*	NUT	. 4
24			
25	26881-G01	BRUSH HOLDER ASSEMBLY (INCLUDES ITEMS 26 - 28)	. 1
26	26658-G01	BRUSH	4
27	26882-G01	BRUSH SPRING	4
28	26883-G01	BRUSH CONNECTOR	
29			
30	26884-G01	KEY	. 1

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	26885-G01	PULLEY	1
32	26886-G01	PULLEY ASSEMBLY (INCLUDES ITEMS 33 - 37)	1
33	*	NUT	1
34	*	WASHER, LOCK	1
35	*	SCREW	3
36	*	SCREW	4
37	*	SCREW	2
38	26887-G01	BRUSH 1 COVER	2
39	26888-G01	BRUSH 2 COVER	3
40	26889-G01	BOLT AND WASHER ASSEMBLY (INCLUDES ITEMS 41, 42)	2
41	*	WASHER	2
42	*	WASHER, LOCK	2
43	16896-G1	TERMINAL COVER	4

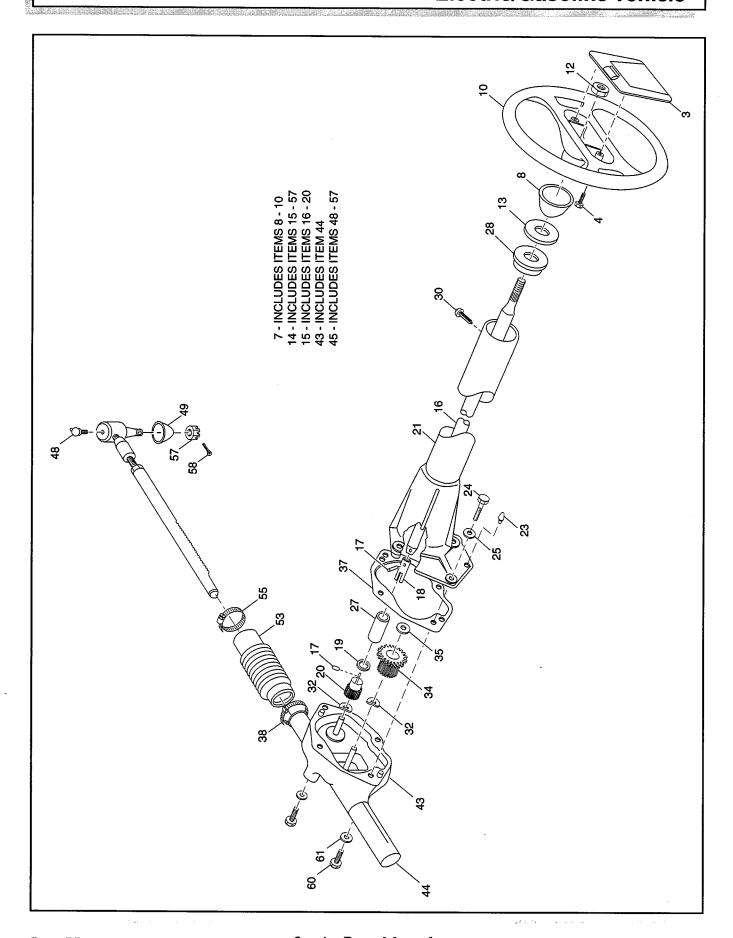

When ordering parts, please specify the model and serial number of the product. * Indicates a component that is not available as an individual part.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1			
2			
3	27102-G01	HOLDER, CLIP BOARD	. 1
4	18464-G1	SCREW, #8 X 7/8 LG	. 2
5			
6			
7	18325-G1	STEERING WHEEL ASSEMBLY (INCLUDES ITEMS 8 - 10)	. 1
8	23225-G1	HUB, COVER EXTENSION	. 1
9			
10	23172-G1	WHEEL, STEERING	. 1
11			
12	14390-G2	NUT, LOCK, 5/8 - 18	1
13	16772-G1	SEAL, STEERING WHEEL	. 1
14	19152-G1	STEERING UNIT ASSEMBLY (INCLUDES ITEMS 15 - 57)	1
15	17163-G1	STEERING SHAFT ASSEMBLY (INCLUDES ITEMS 16 - 20)	. 1
16	*	SHAFT, STEERING	. 1
17	*	PIN, DOWEL, 1/4	2
18	*	COUPLING	. 1
19	*	WASHER, THRUST	. 1
20	*	PINION, STEERING	. 1
21	19153-G1	STEERING COLUMN UNIT	. 1
22			
23	*	GREASE FITTING	. 1
24	00444-G8	SCREW, 5/16 - 24 X 1 LG.	. 4
25	00565-G8	WASHER, LOCK, 5/16	4
26			
27	17140-G1	SLEEVE	. 1
28	17161-G1	BUSHING	. 1
29			

STEERING

Electric/Gasoline Vehicle


THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
30	00118-G2	SCREW, #6 - 18 X 1/4 LG.	1
31			
32	51294-G1	WASHER, WAVE	2
33			
34	23279-G1	GEAR, REDUCTION	1
35	13059-G2	WASHER, THRUST	1
36			
37	19154-G1	GASKET, HOUSING	1
38	17618-G1	CLAMP, NYLON	1
39			
40			
41			
42			
43	13097-G1	HOUSING ASSEMBLY (INCLUDES ITEM 44)	1
44	13570-G2	COVER, RACK	1
45	15407-G1	RACK AND ROD END ASSEMBLY	
		(INCLUDES ITEMS 48 - 57)	1
46			
47			
48	18456-G1	GREASE-FITTING	1
49	*	RUBBER BOOT, TIE ROD END	1
50			
51			
52			
53	17617-G1	BELLOWS	1
54			Ì
55	11391-G1	CLAMP, HOSE	1
56			
57	50209-G1	NUT, SLOTTED, 7/16 - 20	1
58	10387-G2	PIN, COTTER, 3/16 X 1 LG.	1
	<u></u>		

When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.

ITEM	PART NO.	1	2 3			DESCRIPTION		QTY.
59					<u></u>			_
60	00444-G8	SCF	REW,	5/16	- 24 X 1	LG	••••••	3
61	00565-G8	WAS	SHER	, LO	CK, 5/16.		•••••••••••••••••••••••••••••••••••••••	3
	i							
		-						

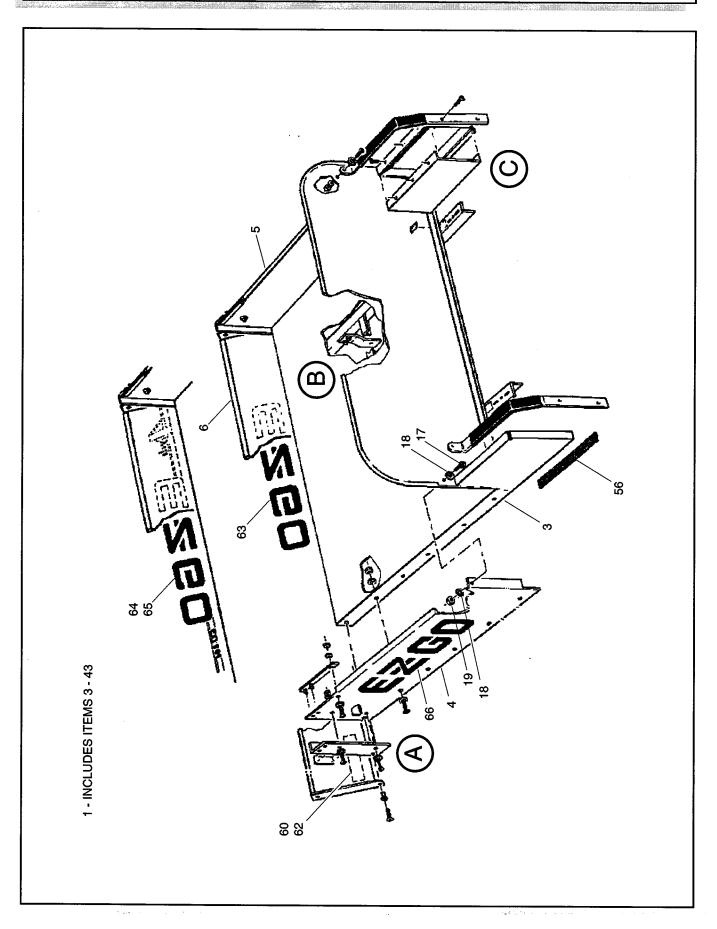

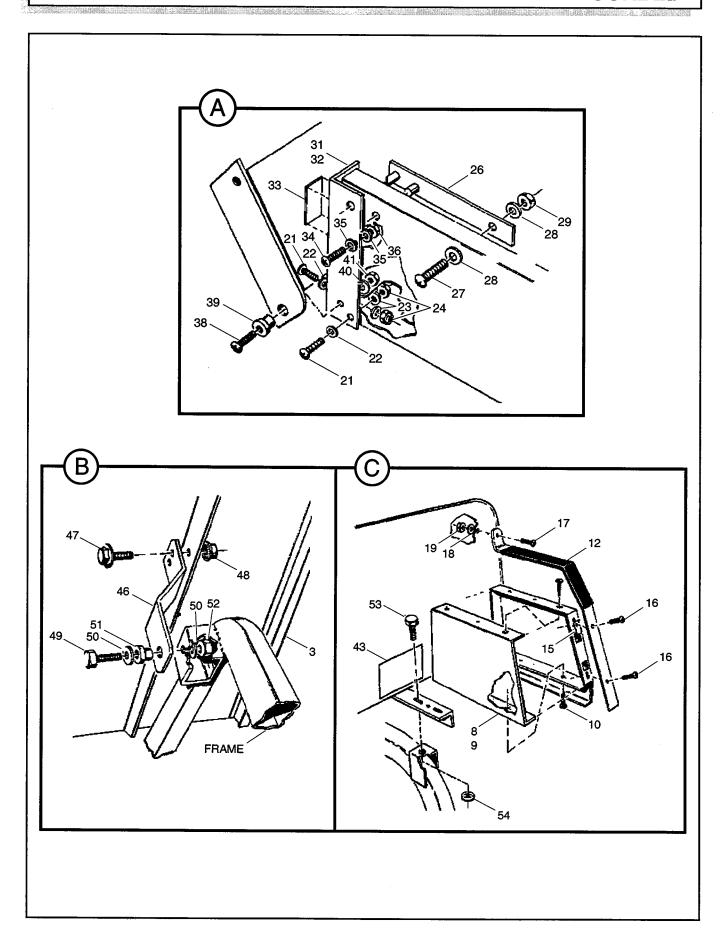


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	18218-G5	TRUCKBED ASSEMBLY (INCLUDES ITEMS 3 - 43)	1
2			
3	18205-G3	FLATBED	1
4	18198-G1	SIDE PANEL, PASSENGER SIDE	1
5	18198-G2	SIDE PANEL, DRIVER' S SIDE	1
6	27270-G03	TAILGATE	1
7			
8	18484-G3	SEAT PANEL, PASSENGER SIDE	1
9	18484-G4	SEATPANEL, DRIVER'S SIDE	1
10	18449-G1	SCREW SELF TAPPING, #8 - 32 X 1/2 LG	10
11			
12	19776-G1	RESTRAINT, HIP HANDHOLD	2
13			
14			
15	14776-G1	"J" NUT, 1/4 - 20	4
16	16705-G1	SCREW, 1/4 - 20 X 1 LG	4
17	16705-G3	SCREW, 1/4 - 20 X 3/4 LG	4
18	00915-G1	WASHER	6
19	14390-G4	NUT, LOCK, 1/4 - 20	2
20			
21	16705-G1	SCREW, 1/4 - 20 X 1 LG	12
22	00915-G1	WASHER	12
23	00559-G7	WASHER, 1/4	12
24	14390-G4	NUT, LOCK, 1/4 - 20	12
25			
26	18621-G1	LATCH, TAILGATE	2
27	16705-G3	SCREW, 1/4 - 20 X 3/4 LG	2
28	00915-G1	WASHER	2
29	14390-G4	NUT, LOCK, 1/4 - 20	2
30			

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	18470-G3	BRACKET, PASSENGER SIDE TAILGATE	. 1
32	18470-G4	BRACKET, DRIVER'S SIDE TAILGATE	1
33	14465-G1	STRIP, SUPPRESSOR	3
34	16705-G2	SCREW, 1/4 - 20 X 5/8 LG.	. 2
35	00915-G1	WASHER	4
36	14390-G4	NUT, LOCK, 1/4 - 20	2
37			
38	16705-G9	SCREW, 1/4 - 20 X 1 1/4 LG	. 2
39	18478-G1	BUSHING, TAILGATE	2
40	00559-G7	WASHER, 1/4	2
41	14390-G4	NUT, LOCK, 1/4 - 20	2
42			
43	27130-G01	LABEL, WARNING	. 2
44			
45			
46	18159-G1	BRACKET, BED PIVOT	. 2
47	13437-G4	SCREW, 3/8 - 16 X 1 LG	4
48	11027-G5	NUT, LOCK, 3/8 - 16	4
49	00665-G7	SCREW, 3/8 - 16 X 1 1/4 LG	2
50	00653-G1	WASHER, 3/8	4
51	18220-G1	BUSHING, PIVOT	2
52	00891-G5	NUT, LOCK, 3/8 - 16	2
53	13437-G4	SCREW, LOCK, 5/16 - 18 X 1 LG	2
54	18315-G1	FASTENER, 5/16	2
55	11840-G1	NUT, 5/16 - 18	2
56	14382-G1	STRIP, NOISE SUPPRESSOR	4
57			
58			
59	•		
60	19565-G1	DECAL, XT-500	. 1


THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
61			
62	19828-G2	DECAL, XI-500	1
63	19818-G1	DECAL, WHITE E-Z-GO	1
64	26516-G01	DECAL, 4-CYCLE GXI, E-Z-GO	1
65	26518-G01	DECAL, 4-CYCLE GXT, E-Z-GO	1
66	19818-G2	DECAL, BLACK E-Z-GO	1

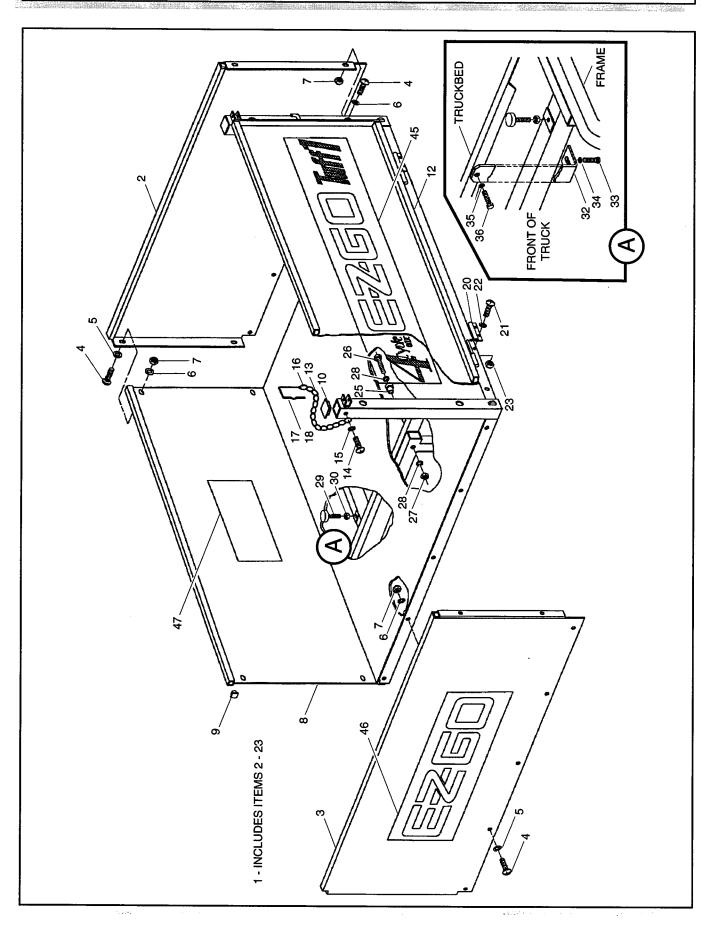

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
. 1	27683-G01	TRUCKBED ASSEMBLY (INCLUDES ITEMS 2 - 23)	. 1
2	27678-G01	SIDE PANEL, PASSENGER SIDE	. 1
3	27678-G02	SIDE PANEL, DRIVER'S SIDE	. 1
4	16705-G3	SCREW, 1/4 - 20 X 3/4 LG	18
5	00915-G1	WASHER, 1/4	14
6	00559-G7	WASHER, 1/4	. 18
7	14390-G4	NUT, LOCK, 1/4 - 20	. 18
8	27667-G01	TRUCKBED	1
9	27556-G01	INSERT, TUBE	. 2
10	27684-G01	INSERT, TUBE	2
11			
12	27661-G01	TAILGATE	1
13	27544-G01	CHAIN	. 2
14	00106-G6	SCREW, #12 - 24 X 3/4 LG	. 2
15	00915-G1	WASHER, 1/4	2
16	27593-G01	LINK, CONNECT	2
17	27675-G01	PIN, DRIVER'S SIDE BED LOCK	. 1
18	27675-G02	PIN, PASSENGER SIDE BED LOCK	
19			
20	27666-G01	HINGE	2
21	16705-G3	SCREW, 1/4 - 20 X 2 1/2 LG.	. 2
22	00559-G7	WASHER, 1/4	4
23	14390-G4	NUT, LOCK, 1/4 - 20	4
24			
25	27539-G01	BUSHING, PIVOT	2
26	00665-G3	SCREW, 3/8 - 16 X 2 1/2 LG	2
27	00891-G1	NUT, LOCK, 3/8 - 16	2
28	00653-G1	WASHER, 3/8	. 4
29	70113-G01	RUBBER BUMPER	2
30	00544-G3	NUT, JAM, 5/16 - 18	. 2

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31			
32	27687-G01	BRACKET, LOCK DOWN	. 2
33	00438-G4	SCREW, 5/16 - 18 X 1 1/2 LG	. 2
34	00571-G2	WASHER, 5/16	. 2
35	00565-G8	WASHER, LOCK, 5/16	. 2
36	00438-G6	SCREW, 5/16 - 18 X 3/4 LG	. 2
37			
38			
39			
40			
41			
42			
43			
44			
45	27744-G01	DECAL, TAILGATE TUFF1	1
46	19818-G1	DECAL, WHITE E-Z-GO	
47	27425-G01	LABEL, BED LOADING WARNING	
:			
	li.		

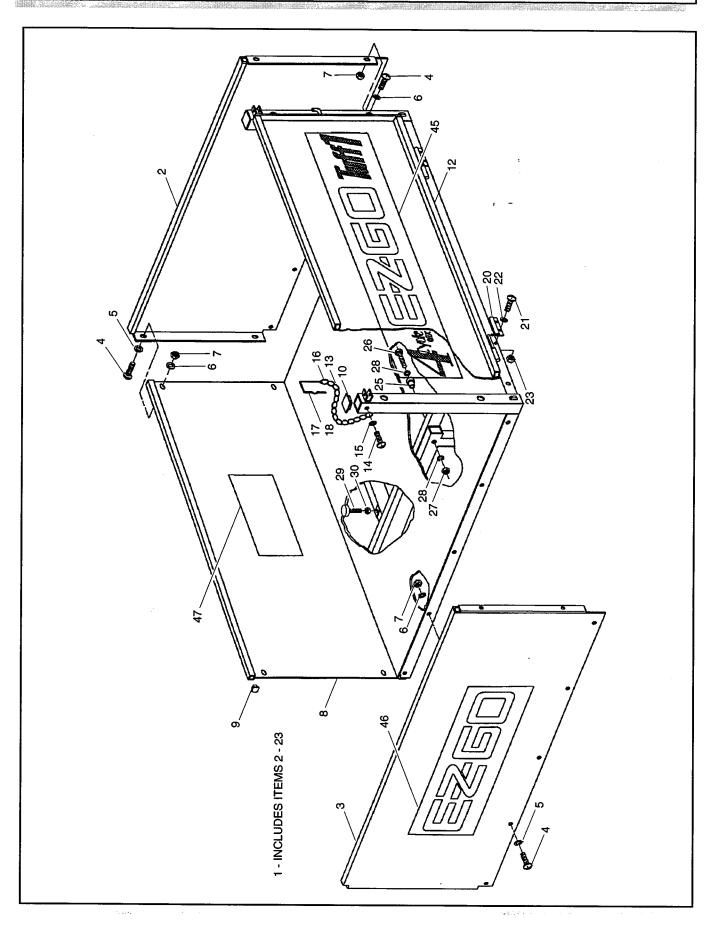

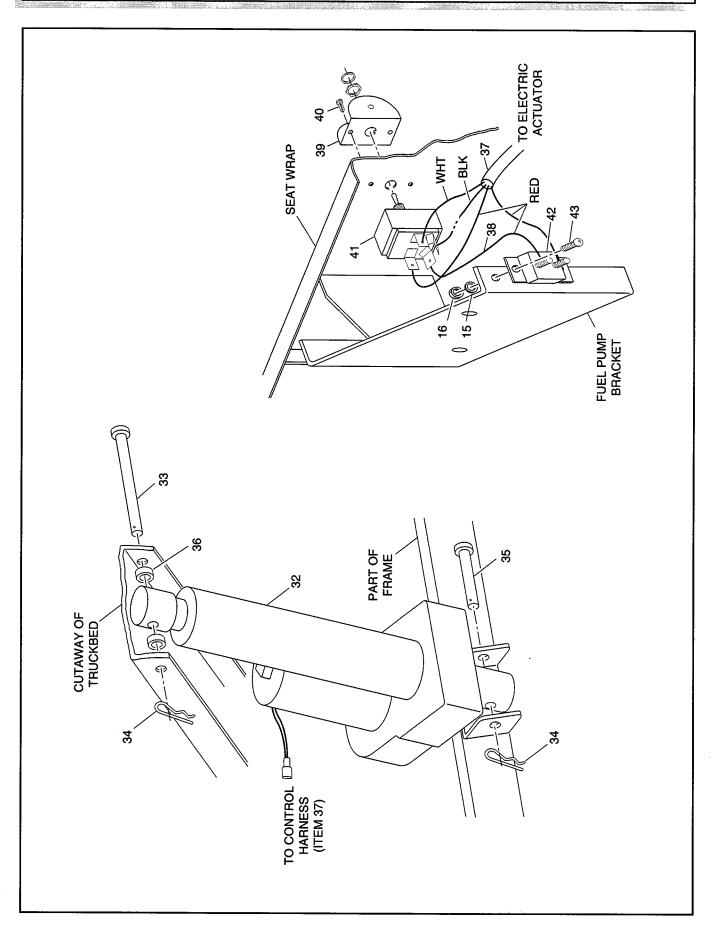


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	27683-G01	TRUCKBED ASSEMBLY (INCLUDES ITEMS 2 - 23)	1
2	27678-G01	SIDE PANEL, PASSENGER SIDE	1
3	27678-G02	SIDE PANEL, DRIVER'S SIDE	1
4	16705-G3	SCREW, 1/4 - 20 X 3/4 LG	18
5	00915-G1	WASHER, 1/4	14
6	00559-G7	WASHER, 1/4	18
7	14390-G4	NUT, LOCK, 1/4 - 20	18
8	27667-G01	TRUCKBED	1
9	27556-G01	INSERT, TUBE	2
10	27684-G01	INSERT, TUBE	2
11			
12	27661-G01	TAILGATE	1
13	27544-G01	CHAIN	2
14	00106-G6	SCREW, #12 - 24 X 3/4 LG	2
15	00915-G1	WASHER, 1/4	2
16	27593-G01	LINK, CONNECT	2
17	27675-G01	PIN, DRIVER'S SIDE BED LOCK	1
18	27675-G02	PIN, PASSENGER SIDE BED LOCK	
19			
20	27666-G01	HINGE	2
21	16705-G3	SCREW, 1/4 - 20 X 2 1/2 LG	2
22	00559-G7	WASHER, 1/4	4
23	14390-G4	NUT, LOCK, 1/4 - 20	4
24			
25	27539-G01	BUSHING, PIVOT	2
26	00665-G3	SCREW, 3/8 - 16 X 2 1/2 LG	2
27	00891-G1	NUT, LOCK, 3/8 - 16	2
28	00653-G1	WASHER, 3/8	4
29	70113-G01	RUBBER BUMPER	2
30	00544-G3	NUT, JAM, 5/16 - 18	2
		l	

Gasoline Vehicle

TRUCKBED AND ELECTRIC LIFT UNIT

33 1444 34 2523	2-G01 ACTUATOR, ELECTRIC	1 1 2
33 1444 34 2523	3-G10 PIN, CLEVIS	1 2
34 2523	3-G1 PIN, COTTER	2
	3-G11 PIN, CLEVIS	
35 1444		1
1 1	3-G01 SPACER	
36 2761		2
37 2761	I-G01 HARNESS, CONTROL	1
38 2597	4-G06 WIRE	1
39 2744	7-G01 TOGGLE GUARD	1
40 1057	0-G9 RIVET, 1/8	2
41 2768	0-G01 SWITCH, TOGGLE	1
42 2132	0-G2 BREAKER, CIRCUIT	1
43 0061	1-G4 SCREW, #8 - 18 X 1/2 LG	2
44		
45 2774	1-G01 DECAL, GXI/T-804 TUFF1, TAILGATE	1
46 1981		2
47 2742	5-G01 LABEL, BED LOADING WARNING	1
	·	

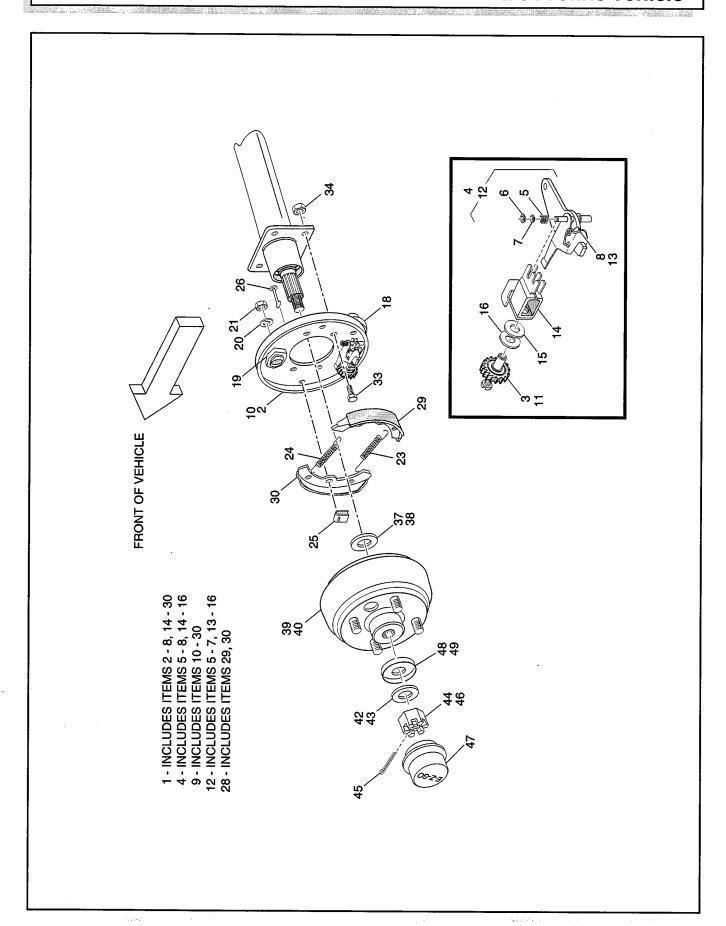

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	22997-G1	BRAKE ASSEMBLY, PASSENGER SIDE (INCLUDES ITEMS 2 - 8, 14 - 30)	1
2	22518-G1	BACKING PLATE	1
3	23360-G1	ADJUSTER	. 1
4	23357-G1	LEVER ASSEMBLY (INCLUDES ITEMS 5 - 8, 14 - 16)	1
5	*	SPRING	. 1
6	*	RETAINER	. 1
7	*	WASHER, SHOULDER	. 1
8	23536-G1	TORSION SPRING, PASSENGER SIDE (SILVER)	1
9	22997-G2	BRAKE ASSEMBLY, DRIVER'S SIDE (INCLUDES ITEMS 10 - 30)	1
10	22519-G1	BACKING PLATE	. 1
11	23361-G1	ADJUSTER	1
12	23358-G1	LEVER ASSEMBLY (INCLUDES ITEMS 5 - 7, 13 - 16)	. 1
13	23537-G1	TORSION SPRING, DRIVER'S SIDE (GOLD)	. 1
14	23363-G1	ADJUSTER BODY	. 1
15	23382-G1	WASHER, 1/4	
16	23362-G1	THRUST WASHER, 1/4	
17			
18	22519-G1	DUST COVER	. 1
19	23356-G1	ANCHOR BLOCK	. 1
20	00565-G1	WASHER, LOCK, 1/4	2
21	13632-G1	NUT, 6 MM	. 2
22			
23	23359-G1	SPRING, BRAKE ADJUSTER	1
24	17290-G1	SPRING, BRAKE ANCHOR	. 1
25	17291-G1	CLAMP, SHOE	. 2
26	17292-G1	PIN, SHOE CLAMP TENSION	2
27			
28	23364-G1	BRAKE SHOE SET (INCLUDES ITEMS 29, 30)	. 1
29	*	BRAKE SHOE, TRAILING	1

WHEEL BRAKE

Electric/Gasoline Vehicle

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.		
30	*	BRAKE SHOE, LEADING	1		
31					
32					
33	17083-G2	BOLT, 5/16 - 24 X 1 LG	8		
34	15126-G1	NUT, LOCK, 5/16 - 24			
35					
36					
37	15485-G1	WASHER, INNER WHEEL RIM (ELECTRIC VEHICLE)	2		
38	21809-G1	WASHER, INNER WHEEL RIM (GASOLINE VEHICLE)	2		
39	21807-G1	BRAKE DRUM (GASOLINE VEHICLE) WITH LUG BOLTS	2		
40	19186-G1	BRAKE DRUM (ELECTRIC VEHICLE) WITH LUG BOLTS	2		
41					
42	21830-G1	WASHER, OUTER WHEEL RIM (GASOLINE VEHICLE)	2		
43	15487-G1	WASHER, OUTER WHEEL RIM (ELECTRIC VEHICLE)	2		
44	00518-G8	NUT, SLOTTED, 3/4 - 16 (GASOLINE VEHICLE)			
45	10387-G1	PIN, COTTER, 1/8 X 1 1/2 LG.			
46	15483-G1	NUT, SLOTTED, 5/8 - 18 (ELECTRIC VEHICLE)			
47	12091-G1	CAP, SPINDLE	2		
48	24939-G2	ADAPTOR, SPINDLE CAP (GASOLINE VEHICLE)	2		
49	24939-G1	ADAPTOR, SPINDLE CAP (ELECTRIC VEHICLE)	2		

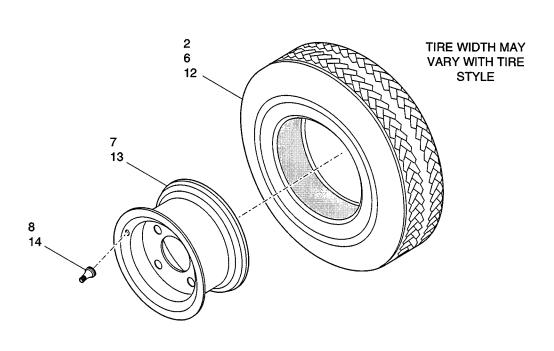

1 - INCLUDES ITEMS 2, 7, 8 5 - INCLUDES ITEMS 6 - 8 11 - INCLUDES ITEMS 12 - 14

Electric/Gasoline Vehicle

WHEELS AND TIRES

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION Q	OTY.	
1	27772-G03	18 X 8.50 X 8 TIRE AND WHEEL RIM ASSEMBLY, TURF-SAVER, XT-500 AND GXT-804 MODELS ONLY (INCLUDES ITEMS 2, 7, 8)	AR	
2	27772-G07	18 X 8.50 X 8 TIRE, TURF-SAVER		
3				
4				
5	27772-G01	18 X 8.50 X 8 TIRE AND WHEEL RIM ASSEMBLY, LINKS, XT-500 AND GXT-804 MODELS ONLY (INCLUDES ITEMS 6 - 8)	AR	
6	27772-G05	18 X 8.50 X 8 TIRE, LINKS	AR	
7	15169-G1	WHEEL RIM	AR	
8	11657-G1		AR	
9				
10				
11	27784-G02	18 X 5.70 X 8 TIRE AND WHEEL RIM ASSEMBLY, USA TRAIL, XI-500 AND GXI-804 MODELS ONLY (INCLUDES ITEMS12 - 14)	AR	
12	27784-G04	18.5 X 5.70 X 8 TIRE, USA TRAIL	AR	
13	26482-G01	WHEEL RIM	AR	
14	26482-G01	VALVE STEM	AR	

Electric/Gasoline Vehicle

SPECIAL TOOLS

SPECIAL TOOLS LISTING

SPECIAL TOOLS

ELECTRIC

TRUCK

Part No.

GASOLINE

TRUCK

Part No.

ELECTRIC/GASOLINE

TRUCK

Part No.

SPECIAL TOOLS

PAINT

CONTACT CUSTOMER REPRESENTATIVE FOR COLOR SPECIFICATIONS AND PART NUMBERS

LIMITED WARRANTY

CALIFORNIA EMISSION CONTROL WARRANTY STATEMENT

YOUR WARRANTY RIGHTS AND OBLIGATIONS

The California Air Resources Board and Fuji Heavy Industries Ltd. (herein "FUJI") are pleased to explain the emission control system warranty on your 1995 and later specialty vehicle engine (herein "engine"). In California, the engine must be designed, built and equipped to meet the State's stringent anti-smog standards. FUJI must warrant the emission control system on your engine for the period of time described below, provided there has been no abuse, neglect or improper maintenance of your engine.

Your emission control system may include parts such as the carburetor and the ignition system. Also included may be hoses, connectors and other emission-related assemblies.

Where a warrantable condition exists, FUJI will repair your engine at no cost to you including diagnosis, parts and labor.

MANUFACTURER'S WARRANTY COVERAGE:

The 1995 and later engines are warranted for two (2) years. If any emission related part on your engine is defective, the part will be repaired or replaced by FUJI.

OWNER'S WARRANTY RESPONSIBILITIES:

As the engine owner, you are responsible for the performance of the required maintenance listed in your Owner's Manual. FUJI recommends that you retain all receipts covering maintenance on your engine, but FUJI cannot deny warranty solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance.

As the engine owner, you should, however, be aware that FUJI may deny you warranty coverage if your engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications. You are responsible for presenting your engine to a dealer, distributor or warranty station authorized by E-Z-GO DIVISION OF TEXTRON, INC. Augusta, Georgia, (herein "E-Z-GO") to which FUJI supplies the engine as soon as a problem exists. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days.

If you have any questions regarding your warranty rights and responsibilities, you should contact the E-Z-GO Warranty Department at 1-800-241-5855.

LIMITED WARRANTY

on Emission Control Systems

- California Only -

FUJI, Tokyo, Japan, warrants to the owner of the 1995 and later engine that the engine (1) has been designed, built and equipped so as to conform at the time of manufacture with the applicable regulations of the California Air Resources Board, and (2) is free from defects in materials and workmanship which could cause it to fail to conform with those regulations as may be applicable in the terms and conditions stated below.

A. WARRANTY COMMENCEMENT DATE

The warranty period begins on the date the engine is delivered to a first retail purchaser.

B. LENGTH OF COVERAGE

FUJI warrants to a first retail purchaser and each subsequent purchaser that the engine is free from defects in materials and workmanship which could cause the failure of a warranted emission-related part for a period of two (2) years after the date of delivery to the first retail purchaser.

C. WHAT IS COVERED:

1. REPAIR OR REPLACEMENT PARTS

Repairs and replacement of any warranted part will be performed at no charge to you by an authorized dealer, distributor or a warranty station. You may contact the E-Z-GO Warranty Department at 1-800-241-5855 to get the nearest appropriate location where your warranty repairs are performed.

2. WARRANTY PERIOD

This warranty continues for a period of two (2) years and shall apply only to the repair, replacement or adjustment of the component parts which are not scheduled for replacement as required maintenance. Further, component parts which are scheduled only for regular inspection to the effect of "repair or replace as necessary" shall be warranted for the warranty period. Any warranted part which is scheduled for replacement as required maintenance shall be warranted for the period of time up to the first scheduled replacement point for that part.

3. DIAGNOSIS

You shall not be charged for diagnostic labor which leads to the determination that a warranted part is defective, if the diagnostic work is performed at an authorized dealer, distributor or warranty station.

4. CONSEQUENTIAL DAMAGES

LIMITED WARRANTY

If a warranted part failed causing damages to other engine components, consult a warranty station.

D. WHAT IS NOT COVERED

- 1. This limited warranty does not cover any part which malfunctions, fails or is damaged due to failure to follow the maintenance and operating instructions set forth in the 1995 and later Owner's Manual in-
 - (1) improper or inadequate scheduled engine inspection and maintenance
 - (2) improper or inadequate maintenance of any warranted parts
 - (3) improper installation, adjustment or repair of the engine or of any warranted part unless performed by an authorized dealer
 - (4) failure to follow recommendations on fuel use contained in the 1995 and later Owner's Manual
 - (5) repairs performed outside of the authorized warranty service facilities
 - (6) use of parts which are not authorized by FUJI.
- 2. Add-on or modified parts

This warranty does not cover any part which malfunctions, fails or is damaged due to alterations by changing, adding to or removing parts from the engine.

3. Expenses incurred by processing warranty claims

FUJI, any authorized dealer, distributors and warranty station shall not be liable for any loss of use of the engine, for any alternative usage, for any damage to goods, loss of time or inconvenience.

E. HOW TO FILE A CLAIM

All repairs qualifying under this Limited Warranty must be performed by a dealer who sold you the engine or distributors or warranty stations authorized by E-Z-GO. In the event that any emission-related part is found to be defective during the warranty period, you should notify E-Z-GO Warranty Department at 1-800-241-5855 and you will be given the appropriate warranty service facilities where the warranty repair is performed.

F. WHERE TO GET WARRANTY SERVICE

It is recommended that warranty service be performed by the authorized dealer who sold you the engine, although warranty service will be performed by any authorized dealers, distributors and warranty stations anywhere in the United States. When warranty repair is needed, the engine must be brought to an authorized dealer, distributorship or warranty station's place of business during normal business hours. In all cases, a reasonable time, not to exceed 30 days, must be allowed for the warranty repair to be completed after the engine is received by the authorized dealer, distributor or service station.

G. MAINTENANCE, REPLACEMENT AND REPAIR OF EMISSION-RELATED PARTS

Only warranted engine replacement parts approved by FUJI should be used in the performance of any warranty maintenance or repairs on emission-related parts. If other than authorized parts are used for maintenance, replacement or repair of components affecting emission control, you should assure yourself that such parts are warranted by their manufacturer to be equivalent to authorized parts in performance and durability. FUJI, however, assumes no liability under this warranty with respect to parts other than authorized parts. The use of non-authorized replacement parts does not invalidate the warranty on other components unless the non-authorized parts cause damage to warranted parts.

H. PARTS COVERED UNDER THE CALIFORNIA EMISSIONS WARRANTY

- (1) Fuel Metering System
 - (i) Carburetor and internal parts
 - (ii) Choke System
- (iii) Fuel filter (annual maintenance item)
 (2) Air Induction System
- - (i) Air filter element (annual maintenance item)
- (3) Ignition System
 - (i) Spark plug (annual maintenance item) (ii) Ignition Coil

 - (iii) Ignitor Complete (iv) Pulser Coil
- (4) Exhaust Manifold
- Miscellaneous Items Used in Above Systems
 - (i) Fuel hoses, clamps and sealing gaskets

I. MAINTENANCE STATEMENTS

It is your responsibility to have all scheduled inspection and maintenance services performed at the times recommended in the 1995 and later Owner's Manual and to retain proof that inspection and maintenance services are performed at the times when recommended. FUJI will not deny a warranty claim solely be-

LIMITED WARRANTY

cause you have no record of maintenance; however, FUJI may deny a warranty claim if your failure to perform required maintenance resulted in the failure of warranted part. The proof which you maintain should be given to each subsequent owner of the engine. You are responsible for performing the scheduled maintenance described below based on the procedures specified in the 1995 and later Owner's Manual. The scheduled maintenance below is based on the normal engine operating schedule.

PROCEDURE	INTERVAL
a) Check for sealing of fuel cap and proper operation of fuel gauge (at each fueling). Check that fuel cap vent is free of dirt	WEEKLY
b) Check engine for unusual noise, vibration acceleration.	MONTH (20 HOURS)
c) Check engine electrical system for coil/spark plug wire for cracks/loose connections.	3 MONTH (50 HOURS)
d) Check fuel system for leaks at tank cap, lines, filters, pump, carburetor. Check lines for cracks/deterioration.	3 MONTH (50 HOURS)
e) Check air cleaner filter element.	SEMIANNUAL (125 HOURS)
f) Replace engine oil, DO NOT OVERFILL. SAE 10W-30/10W-40 SF,SG,CC Oil	SEMIANNUAL (125-150 HOURS)
g) Clean oil filter in solvent (at oil change). Replace O- Rings if required.	SEMIANNUAL (125-150 HOURS)
h) Replace air cleaner filter element if required.	ANNUAL (250-300 HOURS)
i) Check fuel filter for dirt build up. (Replace as required)	ANNUAL (250-300 HOURS)
j) Check the spark plugs for gap 0.030. (Replace if required)	ANNUAL (250-300 HOURS)
k) Check timing belt tension, signs of wear/damage. Replace only if worn or damaged.	ANNUAL (250-300 HOURS)



E-Z-GO Division of Textron Inc. P.O. Box 388 Augusta, Georgia 30903-0388 Telephone 1-800-241-5855

Copyrighted Material
This manual may not be reproduced in whole or
in part without the express permission of
E-Z-GO Division of Textron Inc.
Technical Communications Department