




SERVICE PARTS MANUAL



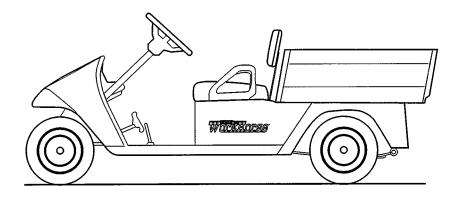

UTILITY VEHICLE

MANUAL: 28416-G01 MODEL YEAR: 1997 ISSUED:09/96

SERVICE PARTS MANUAL



UTILITY VEHICLE

SERVICE PARTS DEPARTMENT INSIDE USA PHONE 1-800-227-7029 FAX 1-800-752-6175

OUTSIDE USA PHONE 010-1-706-798-4311 FAX 010-1-706-771-4601

E-Z-GO DIVISION OF TEXTRON, INC., P.O.BOX 388, AUGUSTA, GEORGIA 30903-0388

LIMITED WARRANTY

WARRANTY

TO OBTAIN A COPY OF THE LIMITED WARRANTY THAT IS APPLICABLE TO YOUR VEHICLE, CALL OR WRITE YOUR LOCAL DISTRIBUTOR, BRANCH OR THE E-Z-GO WARRANTY DEPARTMENT.

THE USE OF NON E-Z-GO PARTS AND HARDWARE MAY VOID YOUR WARRANTY.

TAMPERING WITH OR ADJUSTING OF GOVERNOR TO PERMIT THE VEHICLE TO OPERATE AT ABOVE FACTORY SETTING OF 12 - 15 MPH WILL VOID YOUR VEHICLE WARRANTY

SECTIONS	Page No
How to use the E-Z-GO Service Manual	vii
Illustrated Parts Breakdown:	
Illustration	Page No
ACCELERATOR	A
Accelerator Pedal Box	A-1
Accelerator Pedal	
Accelerator Linkage	A-3
AIR FILTER	B
Air Cleaner Box, Air Filter, PCV Hose	B-1
BODY	C
Front Cowl, Instrument Panel, Floor Panel	C-1
Seat Frame, Splash Panels	
Floormat, Seat Wrap, Side Panels, Rocker Panels	
Seat Filler Panels, Rear Fenders, Rear Panel	
BRAKES	
Brake Pedal Dedal (with links)	
Brake Pedal (with lights) Brake Linkage	
Wheel Brake	
CARBURETOR	
Carburetor	
CLUTCHES	
Drive Clutch, Belts, Driven Clutch	
	•
DIRECTION SELECTOR	
Direction Selector	
ELECTRICAL SYSTEM	
Gauge Installation and Connections Fleetries Plate	
Electrical Plate Battery, Solenoid, Starter/Generator	
ENGINE AND MUFFLER	
Engine, Oil Filter, Spark Plugs, Muffler Thomas and other a	
ENGINE AND STARTER MOUNTING	
Front Mount, Rear Mount, Starter/Generator	K-1

=≠∠ □ TEXTRON

iii

Illustrated Parts Breakdown:

Illustration	Page No.
FRONT SUSPENSION	L
Front Axle, Spindle, Wheel Hub, Shock Absorber	L-1
FUEL SYSTEM	M
Fuel Tank, Fuel Gauge, Fuel Filter, Fuel Pump	M-1
GAUGES, HORN AND LIGHTING	N
• Horn	
• Headlight	
Brake Pedal Wiring, Taillight	
Ignition Switch, Indicator Light/Fuel Gauge, Turn Signal Assembly	N-4
REAR AXLE	P
Axle Shafts, Seals, Bearing	P-1
REAR SUSPENSION	Q
Spring, Shock Absorber	
SEATING	B
Seat Bottom, Seat Back, Hip Restraint	
STARTER/GENERATOR	
Armature, Coil, Brushes	
STEERING	
Steering Box, Steering Shaft/Column/Wheel, Tie Rods	
•	
TRUCKBED	
Manual Dump Bed Dead Beach Birst Marriag Bed Lines	
Bed Decals, Pivot Mounting, Bed Liner Tilt Latch, Bed Prop	
Electric Dump Bed	
Bed Decals, Pivot Mounting, Bed Liner	
Electric Circuit Breaker, Toggle Switch, Actuator	
Flat Bed, Bed Decals, Pivot Mounting	
Tilt Latch, Bed Prop	U-14
Cargo Bed	U-15
WHEELS AND TIRES	V
Tire and Wheel Assembly, Wheel Rim, Valve Stem	V-1

SPECIAL TOOLS	
Special Tools Listing	Appendix - A
ACCESSORIES	
Accessory Listing	Appendix - E
ACCESSORIES	
Accessory Installation Instructions	Appendix- C
Rear View Mirror Kit	
Spark Arrestor Kit	
Ramp Kit	
Van Box Kit	
Bed Liner Kit	
Electric Dump Kit	
Windshield Kit	
Turn Signal Kit	
Ashtray Kit	
Hour Meter Kit	
Ball Hitch Kit	
Clevis Hitch Kit	
Sun Top Without Bagrack Kit	
Work Light Kit	
3-Sided Soft Enclosure Kit	
Side Mirrors	
Rotating Beacon Light Kit	

Wheel Covers

Notes:					
epin - app - p					
-			31114-13-11		
	AA. A - V PAA 1				
		+			
		· · · · · · · · · · · · · · · · · · ·		<u> </u>	
			1.77.87.5V		· • • · · · · · · · · · · · · · · · · ·
					,
					<u> </u>
			···		

					·······
			F-00-1		
		· · ·		7	·
	· · · · · · · · · · · · · · · · · · ·			•	
	•.			7000	
				d-veld	
		74 KA11-A1			

HOW TO USE THE E-Z-GO SERVICE PARTS MANUAL

This manual is divided into several sections:

- GENERAL INFORMATION
- ILLUSTRATED PARTS BREAKDOWN FOR THE TXT GASOLINE POWERED UTILITY VEHICLE
- APPENDIX

The first section, GENERAL INFORMATION, contains the following information:

- WARRANTY INFORMATION
- GENERAL INDEX
- HOW TO USE THE E-Z-GO SERVICE PARTS MANUAL

The second section, ILLUSTRATED PARTS BREAKDOWN (IPB) FOR THE TXT GASOLINE POWERED UTILITY VEHICLE, contains illustrations and parts lists for all systems of your vehicle.

The third section, SERVICE ACCESSORIES AND SPECIAL TOOLS, contains a listing of E-Z-GO service accessories and special tools and that may be purchased from the company to aid in the servicing of the vehicle.

USE OF THE MANUAL

To use this manual, consult the GENERAL INDEX to locate the information or illustration required.


E-Z-GO manuals are revised periodically to coincide with vehicle changes. The manual will cover all models and model years stated on the cover page. New components that are interchangeable with the previous year are automatically revised and the issue date is changed.

Introduction of some revisions varies due to supply of components; therefore, it is possible that various combinations of components may be found that are not directly reflected by each illustration. Consult the illustration that best suits your situation and then contact the Service Parts Department. It is important that the serial number of your vehicle and its model number be supplied to Service Parts when ordering any replacement components.

Locate the serial number plate (see Body and Associated Parts located in the IPB section of this manual for its location) and note the complete number shown on the plate.

All relevant systems are listed in the General Index and has an alphabetical prefix. The illustration always appears first and is followed by its related parts list. Additional illustrations and parts lists with the same prefix indicate significant changes that have taken place since the last issue.

HOW TO USE THE E-Z-GO SERVICE PARTS MANUAL

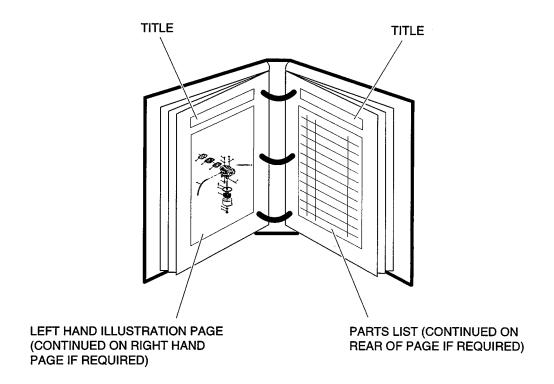

1. WHEN THE PART NUMBER IS NOT KNOWN

- Determine the function and application of the part required. Turn to the General Index and select the most appropriate title.
- Turn to the page number indicated and locate the desired part on the illustration.
- From the illustration, obtain the item number assigned to the desired part. Refer to the accompanying description for specific information regarding the part.

2. IF YOU KNOW THE PART NUMBER

Locate the part number or description in the appropriate column on the parts list page.


NOTE: It is suggested that you confirm that the part selected is correct by verifying it with the pictorial representation on the illustrated page.


Should an asterisk (*) appear in the part number column on the parts list page, read upwards until a part number is found. The part number is the lowest assembly sold by E-Z-GO and the asterisk (*) indicates that the part depicted is not available for sale by E-Z-GO.


NOTE: Descriptions are indented under the assembly that they are used on. That assembly is, in turn listed under the assembly that it is used on. This process is repeated until the highest final assembly is reached.

To facilitate the maintenance and repair of the vehicle, a Technician's Repair and Service Manual (P/N 28339-G01) is available from the E-Z-GO Service Parts Department.

ILLUSTRATED PARTS BREAKDOWN

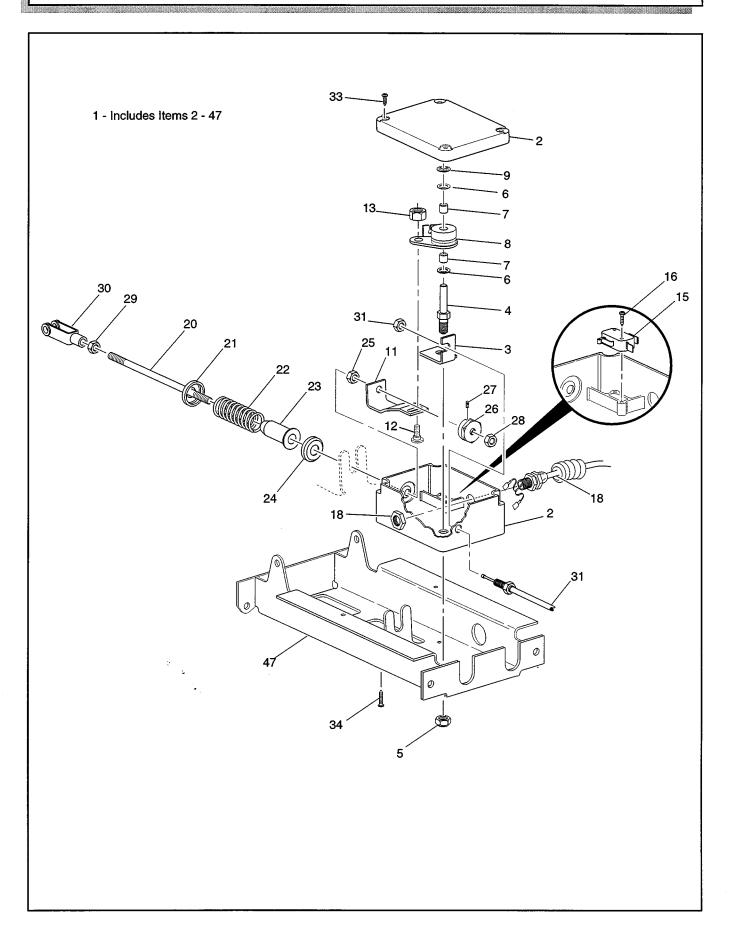

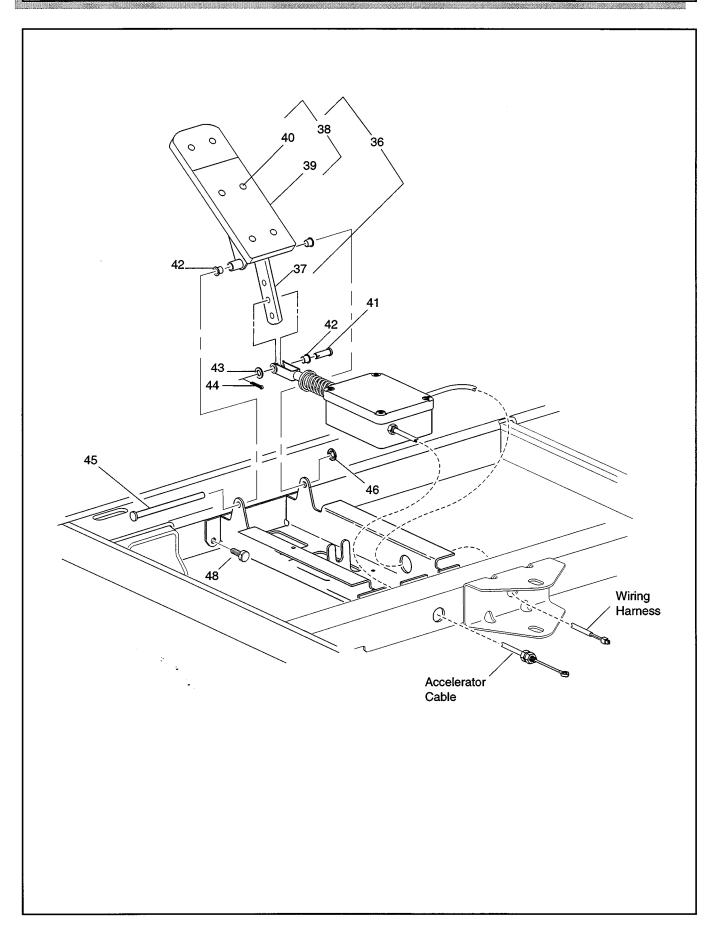

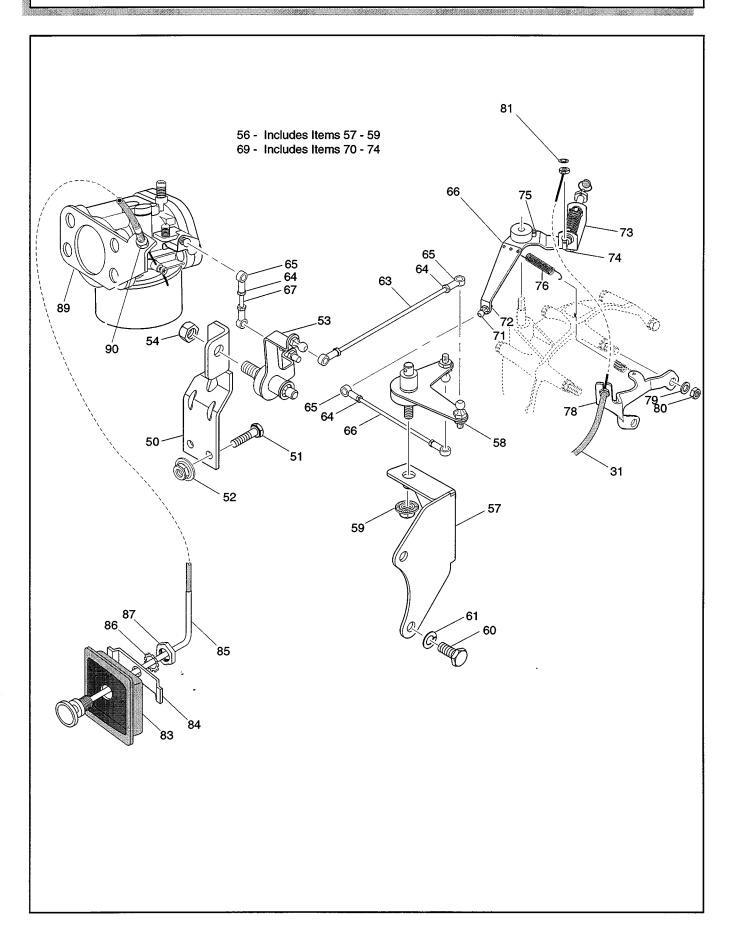


ACCELERATOR

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	72062-G03	ACCELERATOR PEDAL BOX ASSEMBLY (INCLUDES ITEMS 2 - 47)	. 1
2	25853-G02	PEDAL BOX AND COVER	1
3	72199-G01	PIVOT BRACKET	1
4	25768-G01	PIVOT ROD	1
5	14390-G1	LOCK NUT, 3/8 - 24	. 1
6	24621-G1	NYLON WASHER, 5/16"	. 2
7	23860-G1	BEARING	. 2
8	72066-G01	CONTROL ARM	1
9	12064-G1	PUSHNUT, 1/4"	1
10			
11	72074-G01	CONTROL ARM LINK	. 1
12	72225-G01	SHOULDER BOLT, SOCKET BUTTON HEAD	. 1
13	14390-G10	LOCK NUT, #10 - 24	. 1
14			
15	25861-G01	MICRO SWITCH	. 1
16	00982-G01	SCREW, #4 - 14 X 5/8" LG	. 2
17			
18	72201-G01	PEDAL BOX WIRING HARNESS (WITH NUT)	. 1
19			
20	72072-G01	ACCELERATOR ROD	1
21	17677-G2	SPRING RETAINER	1
22	73046-G01	COMPRESSION SPRING	1
23	17979-G1	ACCELERATOR ROD BUSHING	1
24	17677-G1	SPRING RETAINER	1
25	01009-G01	LOCK NUT, 5/16 - 24	1
26	72198-G01	MICRO SWITCH CAM	1
27	00487-G3	SETSCREW, 1/4 - 20 X 3/8" LG	1
28	00550-G4	LOCK NUT, 5/16 - 24	1
29	00532-G4	LOCK NUT, 5/16 - 24	. 1
30	10385-G4	CLEVIS YOKE	. 1


ACCELERATOR


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	72065-G02	ACCELERATOR CABLE (WITH NUT)	1
32			
33	00984-G01	SCREW, #8 - 32 X 1/2" LG	4
34	00684-G6	SCREW, #8 - 10 X 1/2" LG	4
35			
36	25799-G01	ACCELERATOR PEDAL ASSEMBLY (INCLUDES ITEMS 37 - 40)	1
37	*	ACCELERATOR PEDAL	1
38	27844-G01	ACCELERATOR PEDAL PAD KIT (INCLUDES ITEMS 39, 40)	1
39	27512-G01	ACCELERATOR PEDAL PAD	1
40	15766-G1	OVAL RIVET, 3/8 X 15/32" LG	6
41	10386-G3	CLEVIS PIN, 5/16 X 1" LG	1
42	17838-G1	BUSHING	3
43	17255-G1	TEFLON WASHER,5/16"	1
44	10387-G3	COTTER PIN, 3/32 x 3/4" LG	1
45	70134-G01	PEDAL PIVOT PIN	1
46	00986-G01	PUSHNUT, 19/64"	1
47	70116-G01	ACCELERATOR PEDAL BRACKET	1
48	00715-G2	BOLT, 5/16 - 18 X 3/4" LG	4
49			
50	72197-G01	PIVOT BRACKET	1
51	00414-G8	BOLT, 1/4 - 20 X 1" LG	2
52	14390-G4	LOCK NUT, 1/4 - 20	2
53	25760-G01	CARBURETOR LINKAGE BELLCRANK	1
54	14390-G1	LOCK NUT, 3/8 - 24	1
55			
56	25702-G01	GOVERNOR PIVOT BRACKET ASSEMBLY (INCLUDES ITEMS 57 - 59)	1
57	25655-G01	BELLCRANK BRACKET	1
58	25763-G01	GOVERNOR PIVOT	1
59	14390-G1	LOCK NUT, 3/8 - 24	1
60	00276-G6	BOLT, 5/16 - 24 X 3/4" LG	2


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
61	00565-G8	LOCK WASHER, 5/16"	. 2
62			
63	25737-G02	THROTTLE LINKAGE ROD (COMPLETE)	. 1
64	00526-G4	NUT, #10 - 32	. AR
65	24465-G1	BALL JOINT SOCKET	AR
66	25737-G03	GOVERNOR LINKAGE ROD	. 1
67	25737-G01	CARBURETOR LINKAGE ROD	. 1
68			
69	25690-G01	GOVERNOR BELLCRANK ASSEMBLY (INCLUDES ITEMS 70 - 74)	. 1
70	25765-G01	GOVERNOR BELLCRANK	. 1
71	24479-G1	BALL JOINT STUD	. 1
72	00734-G5	LOCK NUT, #10 - 32	. 1
73	22751-G2	GOVERNOR BRACKET	1
74	14390-G4	LOCK NUT, 1/4 - 20	. 1
75	00491-G4	SETSCREW, 1/4 - 20 X 1/2" LG	. 1
76	25738-G01	GOVERNOR TO ACCELERATOR BRACKET SPRING	. 1
77			
78	25653-G01	ACCELERATOR CABLE BRACKET	. 1
79	*	WASHER (PROVIDED ON DIFFERENTIAL)	. 2
80	*	NUT (PROVIDED ON DIFFERENTIAL)	. 2
81	12064-G3	PUSHNUT, 3/16"	. 1
82		3.	
83	72154-G01	CHOKE CABLE ADAPTER	. 1
84	72155-G02	ADAPTER RETAINER	. 1
85	72401-G02	CHOKE CONTROL ASSEMBLY (COMPLETE WITH NUTS)	. 1
86	00568-G4	LOCK WASHER, 9/16"	. 1
87	00545-G4	NUT, 9/16 - 18	. 1
88			
89	26728-G01	CHOKE BRACKET	. 1
90	00544-G4	NUT, 5/16 - 24	. 2

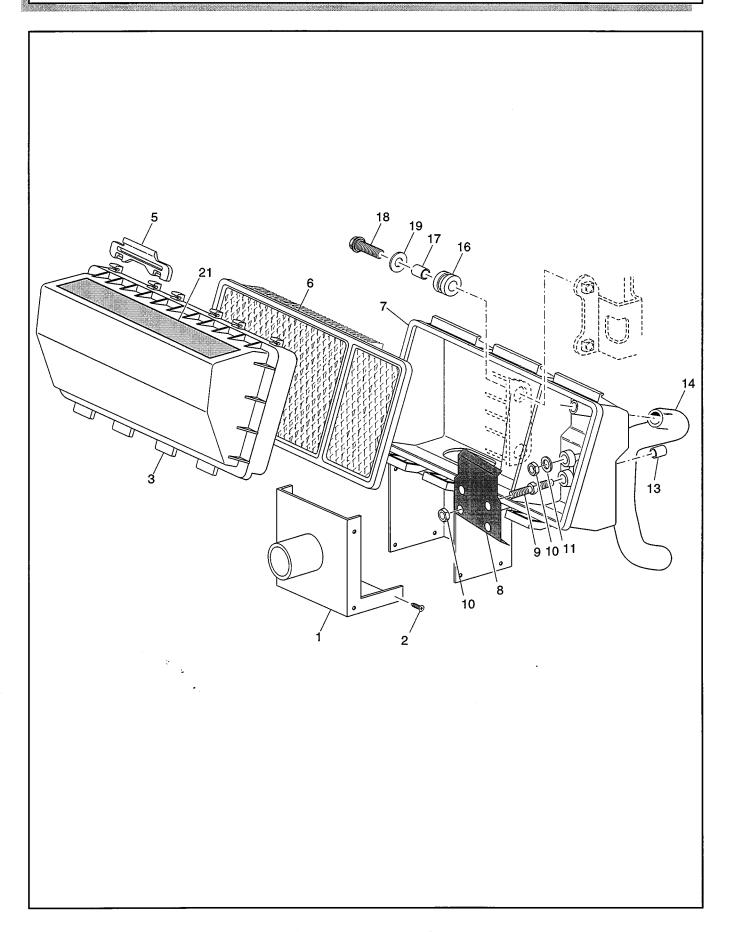


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	72146-G01	INLET TUBE	. 1
2	00614-G5	SCREW, #8 - 18 X 5/8" LG	6
3	72143-G01	COVER	1
4			
5	72148-G01	LATCH	. 3
6	72144-G01	ELEMENT	1
7	72142-G01	HOUSING	1
8	72529-G01	BAFFLE	1
9	72514-G01	STUD, M6 X 1.39MM LG	2
10	13632-G1	NUT, M6 X 1 MM	4
11	51400-G1	LOCK WASHER, 6 MM	2
12			
13	23726-G6	CARBURETOR MOUNT SPACER	4
14	72151-G01	PCV HOSE	1
15			
16	72147-G01	HOUSING MOUNT GROMMET	. 2
17	23726-G7	HOUSING MOUNT SPACER	. 2
18	26671-G01	BOLT WITH WASHER, M6 X 1 X 30 MM LG.	. 2
19	26701-G01	WASHER, 6.5 X 20 X 1.6 MM	. 2
20			
21	74093-G01	WARNING DECAL	1

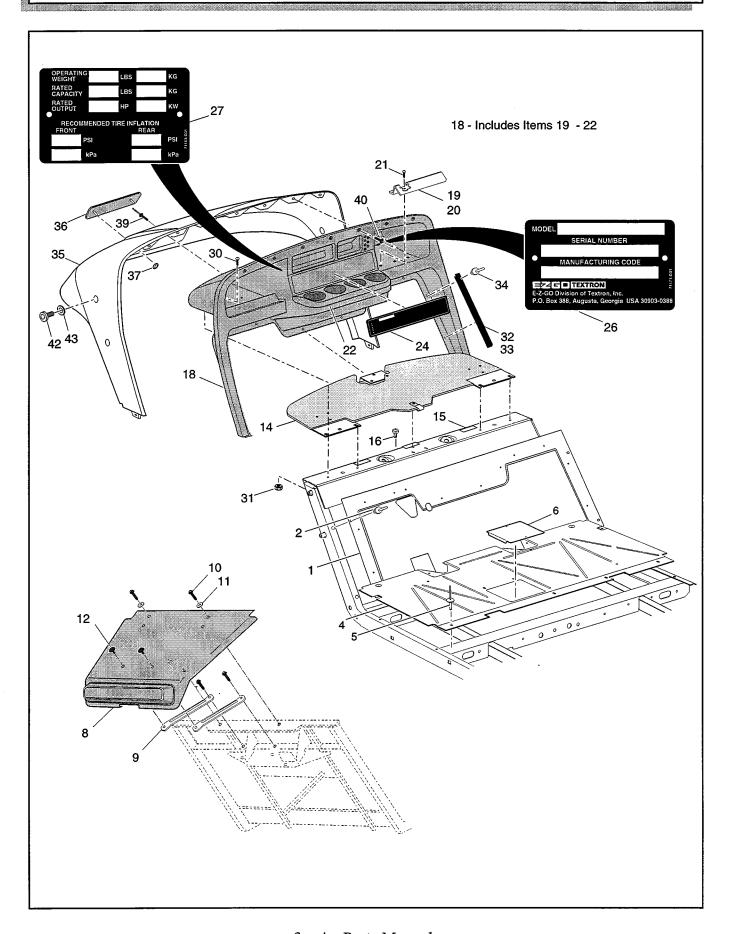

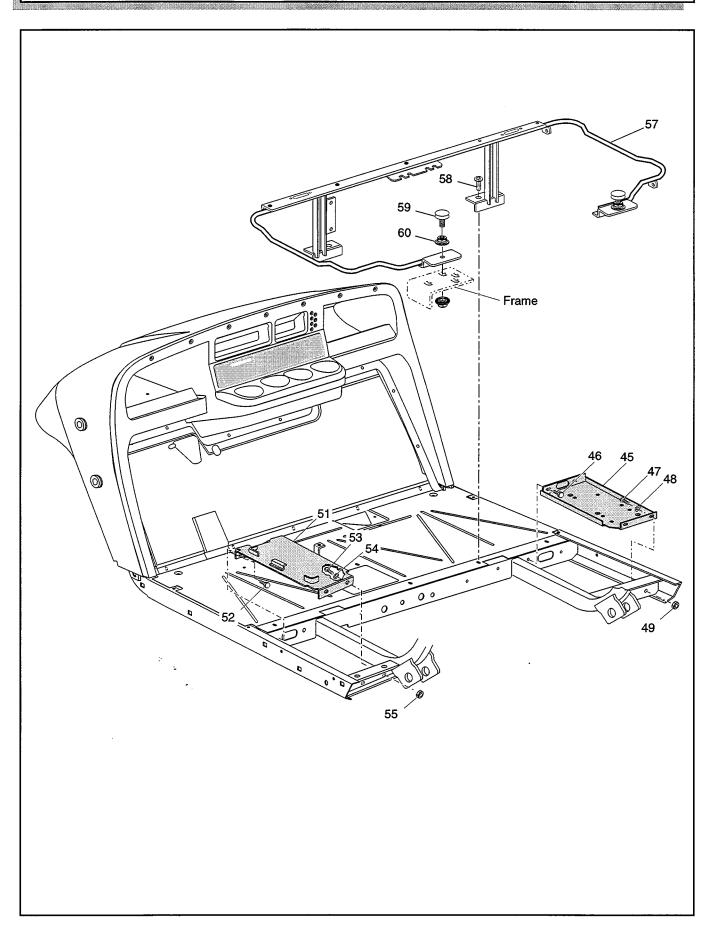

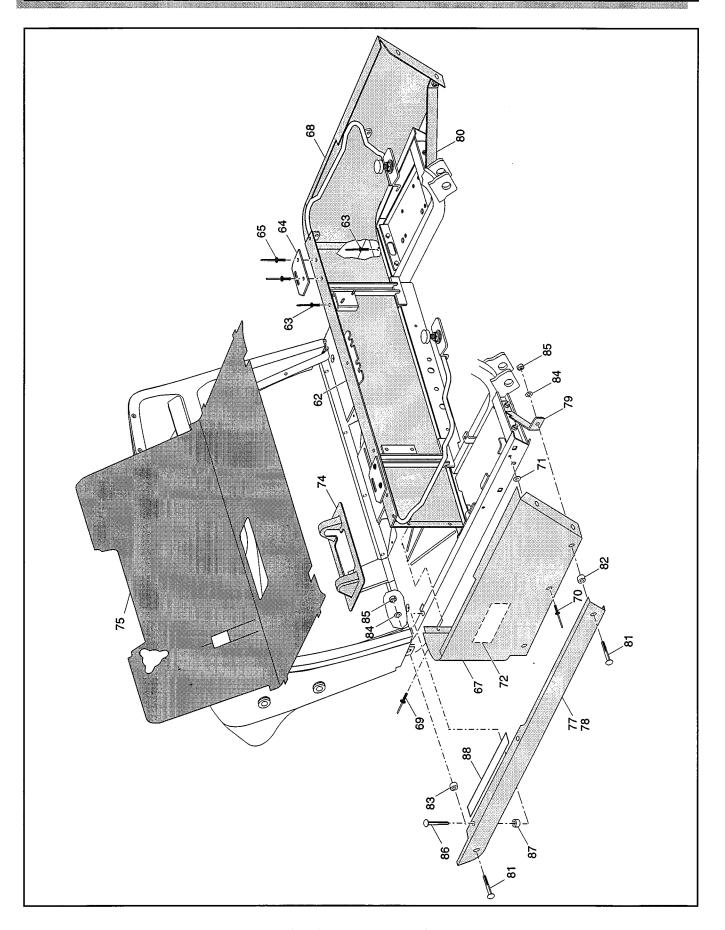

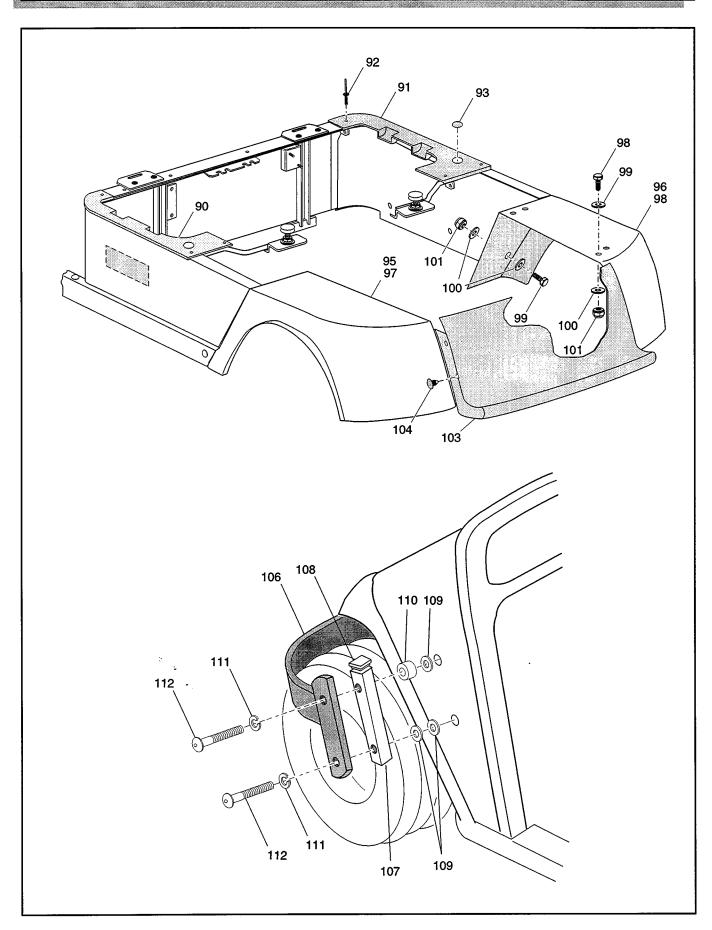


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	70047-G01	UPPER FLOORPAN	. 1
2	14601-G11	RIVET, 3/16 X 9/16" LG	. 9
3			
4	70132-G01	LOWER FLOORPAN	. 1
5	14601-G11	RIVET, 3/16 X 9/16" LG	7
6	70164-G01	SWITCH ACCESS COVER	. 1
7			
8	27166-G02	FRONT SHIELD	. 1
9	71015-G01	FRONT SHIELD BRACE	2
10	00114-G6	BOLT, 1/4 - 14 X 3/4" LG	4
11	16469-G7	WASHER, 1/4"	. 2
12	16816-G2	RATCHET FASTENER	. 2
13			
14	71143-G01	SPLASH PANEL	, 1
15	27919-G02	FOAM TAPE, 3/4 X 2" LG	. з
16	71102-G01	BOLT, 1/4 - 20 X 3/4" LG	. 1
17			
18	71151-G01	INSTRUMENT PANEL ASSEMBLY (INCLUDES ITEMS 19 - 22)	. 1
19	71153-G01	DEFLECTOR (PASSENGER SIDE)	1
20	71154-G01	DEFLECTOR (DRIVER SIDE)	. 1
21	00614-G5	SCREW, #8 - 18 X 5/8" LG	. 6
22	71158-G01	4 CUP INSERT	. 1
23			
24	71177-G01	SAFETY LABEL	. 1
25			
26	*	SERIAL NUMBER PLATE	. 1
27	*	CAPACITY PLATE	. 1
28	10570-G9	RIVET, 1/8 X 11/32" LG	. 4
29			
30	00740-G4	SCREW, #10 - 32 X 1/2" LG	. 4


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	00921-G8	NUT, #10 - 32	. 4
32	71115-G01	VINYL TRIM (PASSENGER SIDE)	. 1
33	71115-G02	VINYL TRIM (DRIVER SIDE)	. 1
34	14601-G13	RIVET, 5/32 X 9/16" LG	. 10
35	71051-G**	COWL	. 1
36	19817-G2	E-Z-GO NAMEPLATE (GOLD)	. 1
37	12064-G3	PUSHNUT, 3/16"	. 2
38			
39	14601-G13	RIVET, 5/32 X 9/16" LG	. 2
40	71055-G01	RIVET, 3/16 X 3/8" LG	. 7
41			
42	71056-G01	BOLT, 5/16 - 18 X 5/8" LG	. 4
43	00570-G2	WASHER, 5/16"	. 4
44			
45	70244-G02	SPLASH PANEL	. 1
46	00715-G2	BOLT, 5/16 - 18 X 13/16" LG	. 2
47	00438-G8	BOLT, 5/16 - 18 X 1" LG	. 2
48	00559-G8	WASHER, 5/16"	. 2
49	11098-G6	LOCK NUT, 5/16 - 18	. 2
50			
51	70245-G01	BATTERY TRAY	. 1
52	00715-G2	- BOLT, 5/16 - 18 X 13/16" LG	. 2
53	00438-G8	BOLT, 5/16 - 18 X 1" LG	. 2
54	00571-G2	WASHER, 5/16"	. 2
55	11098-G6	LOCK NUT, 5/16 - 18	. 2
56			
57	70384-G01	SEAT FRAME	. 1
58	70200-G01	SCREW, 3/8 - 16 X 1/4" LG	. 2
59	70113-G01	RUBBER BUMPER	. 2
60	11027-G1	LOCK NUT, 5/16 - 18	. 4


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
61			
62	71379-G**	SEAT WRAP PANEL	. 1
63	10570-G10	RIVET, 5/32 X 9/16" LG	8
64	71609-G01	HINGE PLATE	2
65	10570-G11	RIVET, 3/16 X 11/16" LG	4
66			
67	71674-G**	SIDE PANEL (DRIVER SIDE)	1
68	71674-G**	SIDE PANEL (PASSENGER SIDE)	. 1
69	10570-G10	RIVET, 5/32 X 9/16" LG	4
70	10570-G12	RIVET, 1/4 X 9/16" LG	4
71	16469-G7	FENDER WASHER, 1/4"	4
72	71196-G01	DECAL ("WORKHORSE")	2
73			
74	70135-G01	PEDAL PIVOT COVER	1
75	70048-G06	FLOORMAT	. 1
76			
77	71190-G01	ROCKER PANEL (DRIVER SIDE)	. 1
78	71190-G02	ROCKER PANEL (PASSENGER SIDE)	. 1
79	71191-G01	BRACE (DRIVER SIDE)	. 1
80	71191-G02	BRACE (PASSENGER SIDE)	. 1
81	16705-G9	CARRIAGE BOLT, 1/4 - 20 X 1 1/4" LG	. 4
82	19247-G2	- SPACER (13/32" THICK)	. 2
83	19247-G3	SPACER (9/32" THICK)	. 2
84	00559-G7	WASHER, 1/4"	
85	14390-G4	LOCK NUT, 1/4 - 20	8
86	16705-G1	CARRIAGE BOLT, 1/4 - 20 X 1" LG	. 4
87	23726-G2	SPACER (1/4" THICK)	. 4
88	71764-G01	SILL PLATE TREAD	Į.
89			
90	71588-G01	SEAT FILLER PANEL (DRIVER SIDE)	. 1


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
91	71588-G02	SEAT FILLER PANEL (PASSENGER SIDE)	. 1
92	10570-G10	RIVET, 5/32 X 9/16" LG	. 6
93	20271-G7	HOLE PLUG (VEHICLES WITHOUT TOP)	. 2
94			
95	71586-G01	FENDER (DRIVER SIDE)	. 1
96	71586-G02	FENDER (PASSENGER SIDE)	. 1
97	71586-G03	FENDER (WITH TAILLIGHT) (DRIVER SIDE)	1
98	71586-G04	FENDER (WITH TAILLIGHT) (PASSENGER SIDE)	1
99	00414-G7	BOLT, 1/4 - 20 X 7/8" LG	. 12
100	00559-G7	WASHER, 1/4"	24
101	14390-G4	LOCK NUT, 1/4 - 20	12
102			
103	71587-G01	REAR PANEL	. 1
104	71055-G01	RIVET, 3/16 X 3/8" LG	. 4
105			
106	74040-G01	BUMPER	1
107	74037-G01	SPACER TUBE	2
108	19859-G1	TUBE CAP	2
109	00570-G2	WASHER, 5/16"	. 6
110	75048-G01	SPACER	. 2
111	00905-G8	LOCK WASHER, 5/16"	4
112	71056-G02	⁻ BOLT, 5/16 - 18 X 2 5/8" LG	4

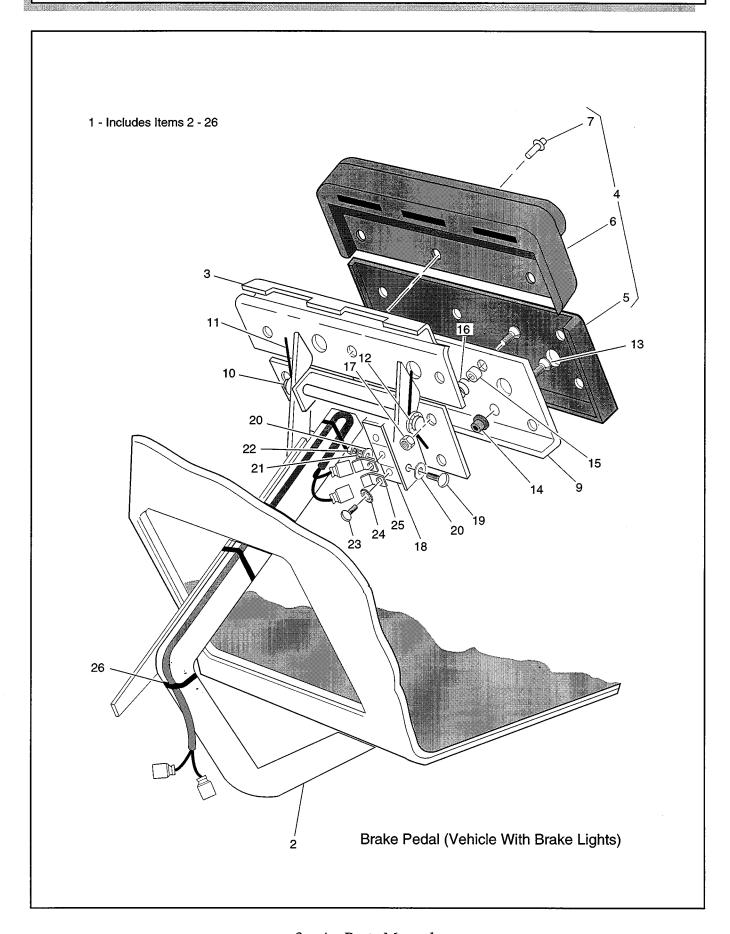

Gasoline Vehicle BRAKES

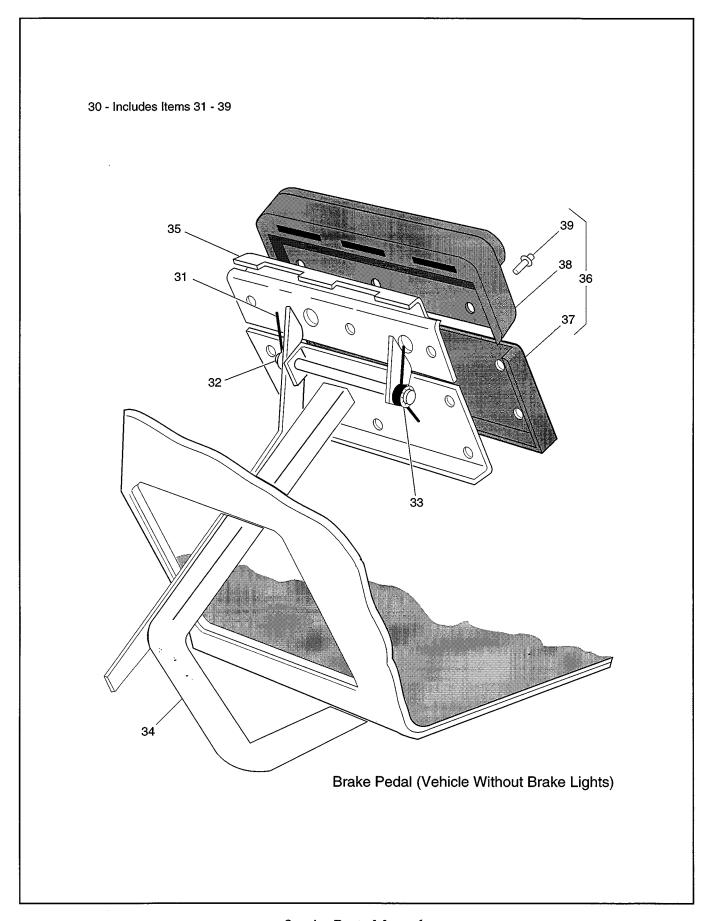

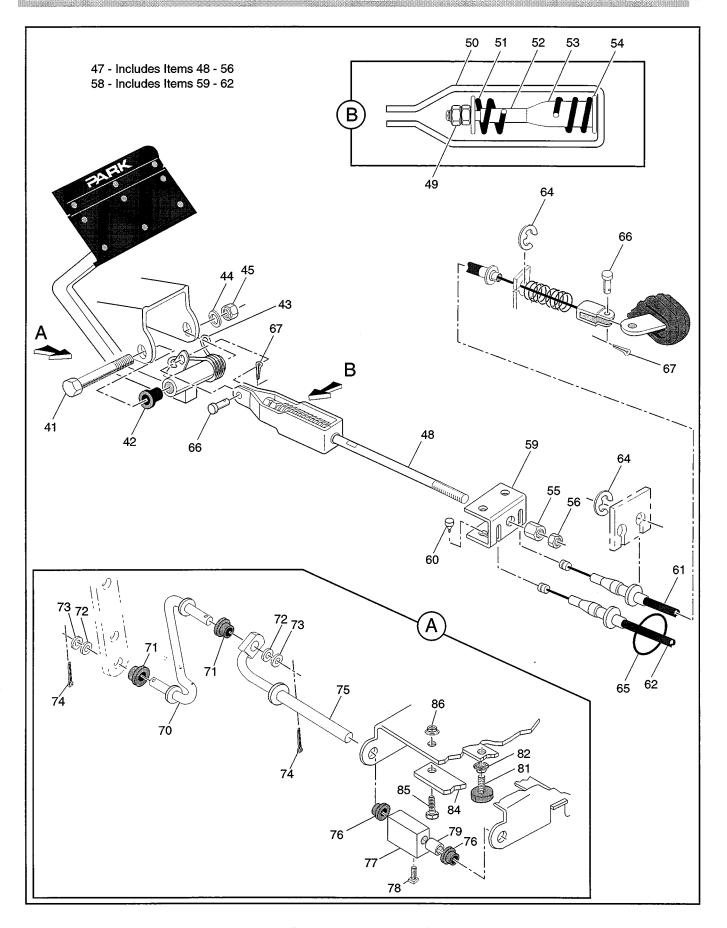

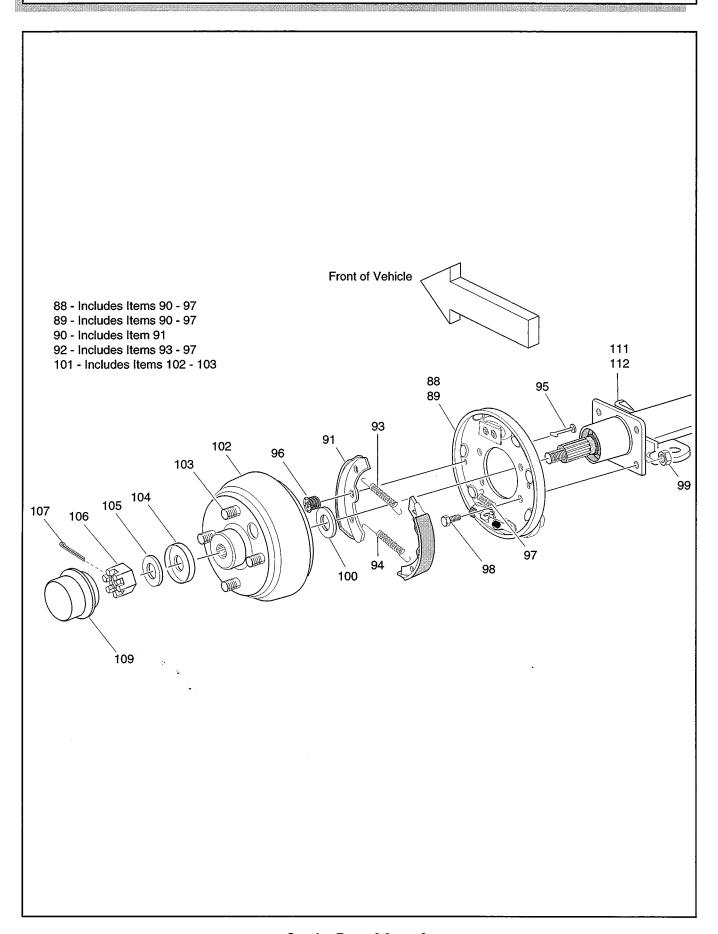

Gasoline Vehicle

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	70263-G01	BRAKE PEDAL ASSEMBLY (INCLUDES ITEMS 2 - 26) VEHICLES WITH BRAKE LIGHTS	1
2	*	BRAKE PEDAL	1
3	*	PARK BRAKE PEDAL	1
4	70274-G01	BRAKE/PARK BRAKE PEDAL PAD KIT (INCLUDES ITEMS 5 - 7)	1
5	*	SERVICE BRAKE PEDAL PAD	1
6	*	PARK BRAKE PAD	1
7	15766-G1	RIVET, 3/8 x 15/32" LG	9
8			
9	*	SERVICE BRAKE PEDAL PLATE	1
10	15932-G2	PIVOT PIN	1
11	11737-G1	TORSION SPRING	2
12	12064-G1	PUSHNUT, 5/16"	. 1
13	00737-G8	SCREW, #10 - 24 X 1" LG	4
14	00739-G1	RUBBER NUT, #10 - 24	2
15	22362-G3	BRAKE PEDAL STANDOFF	2
16	27137-G01	CONICAL SPRING	2
17	11098-G7	LOCK NUT, #10 - 24	2
18	10606-G8	MICRO SWITCH	1
19	00645-G2	SCREW, #6 - 32 X 1 1/4" LG	2
20	00559-G3	WASHER, #6	2
21	00565-G3	LOCK WASHER, #6	2
22	00525-G5	NUT, #6 - 32	2
23	*	BRASS SCREW	2
24	00567-G3	LOCK WASHER, #6	6
25	14628-G1	FASTON TAB, 5/16" X 5/16" LG	2
26	17618-G1	WIRE TIE	3
27			:
28			
29			
	900		

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.
When ordering parts, please specify the model and serial number of the product.
* Indicates a component that is not available as an individual part.
G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
30	70264-G01	BRAKE PEDAL ASSEMBLY (INCLUDES ITEMS 31 - 39) VEHICLES WITHOUT BRAKE LIGHTS	1
31	11737-G1	TORSION SPRING	2
32	15932-G2	PIVOT PIN	1
33	12064-G1	PUSHNUT, 5/16"	1
34	*	SERVICE BRAKE PEDAL	1
35	70265-G01	PARK BRAKE PEDAL	1
36	70274-G01	BRAKE/PARK BRAKE PEDAL PAD KIT (INCLUDES ITEMS 37 - 39)	1
37	*	SERVICE BRAKE PEDAL PAD	1
38	*	PARK BRAKE PEDAL PAD	1
39	15766-G1	RIVET, 3/8" X 15/32" LG	9
40			
41	70096-G01	SHOULDER BOLT, 3/8 - 16 X 3" LG	1
42	11079-G1	FLANGED BUSHING	2
43	70138-G01	TORSION SPRING	1
44	00643-G1	WASHER, 3/8"	1
45	11098-G5	NUT, 3/8 - 16	1
46			
47	70272-G04	COMPENSATOR ASSEMBLY (INCLUDES ITEMS 48 - 56)	1
48	25882-G04	LINKAGE ROD	1
49	00532-G4	NUT, 5/16 - 24	2
50	*	YOKE	1
51	23463-G1	COMPRESSION SPRING	1
52	23061-G2	TUBE	1
53	17979-G1	BUSHING	1
54	15121-G1	WASHER, 3/8"	2
55	00963-G01	SPHERICAL NUT, 5/16 - 24	1
56	11098-G9	LOCK NUT, 5/16 - 24	1
57			


Gasoline Vehicle

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.
When ordering parts, please specify the model and serial number of the product.
* Indicates a component that is not available as an individual part.
G** Indicates consult Customer Service Department for additional information.


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
58	70273-G03	EQUALIZER AND BRAKE CABLE ASSEMBLY (INCLUDES ITEMS 59 - 62)	1
59	28082-G01	EQUALIZER BRACKET	1
60	28083-G01	BRAKE COMPENSATOR BUMPER	2
61	*	BRAKE CABLE (PASSENGER SIDE)	1
62	*	BRAKE CABLE (DRIVER SIDE)	1
63			
64	12305-G1	RETAINING RING	4
65	12416-G1	WIRE TIE	2
66	10386-G3	CLEVIS PIN, 5/16" X 15/16" LG	3
67	10387-G3	COTTER PIN, 3/32" X 3/4" LG	5
68			
69			
70	70097-G01	KICK-OFF LINK	1
71	17838-G1	FLANGED BEARING	2
72	20835-G1	TEFLON WASHER	2
73	00559-G8	WASHER, 5/16"	2
74	10387-G3	COTTER PIN, 3/32" X 3/4" LG	2
75	70098-G01	KICK OFF CAM PIVOT	1
76	10097-G6	FLANGED BEARING	2
77	25103-G1	KICK-OFF CAM	1
78	00491-G4	SETSCREW, 1/4 - 20 X 1/2" LG	2
79	14134-G4	SPACER	1
80			
81	70113-G01	ADJUSTABLE BUMPER	1
82	11027-G1	LOCK NUT, 5/16 - 18	1
83			
84	70080-G01	CATCH BRACKET	1
85	00414-G6	BOLT, 1/4 - 20 X 3/4" LG	2
86	11027-G2	LOCK NUT, 1/4 - 20	2

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
87			
88	27942-G01	BRAKE ASSEMBLY (DRIVER SIDE) (INCLUDES ITEMS 90 - 97)	1
89	27942-G02	BRAKE ASSEMBLY (PASSENGER SIDE) (INCLUDES ITEMS 90 - 97)	1
90	27945-G01	BRAKE SHOE KIT (INCLUDES ITEM 91)	2
91	*	BRAKE SHOE	2
92	27944-G01	BRAKE SPRING KIT (INCLUDES ITEMS 93 - 97)	. 2
93	*	UPPER SPRING	. 1
94	*	LOWER SPRING	. 1
95	*	PIN	. 2
96	*	CUP AND SPRING	. 2
97	*	ADJUSTER SPRING	. 1
98	17803-G2	BOLT, 5/16 - 24 X 1" LG	. 8
99	15126-G1	LOCK NUT, 5/16 - 24	. 8
100	21809-G1	INNER BRAKE DRUM WASHER	. 2
101	21807-G1	BRAKE DRUM ASSEMBLY (INCLUDES ITEMS 102 - 103)	. 2
102	*	BRAKE DRUM	. 1
103	19862-G1	LUG BOLT	. 4
104	24939-G2	SPINDLE CAP ADAPTER	. 2
105	21830-G1	OUTER BRAKE DRUM WASHER	. 2
106	00518-G8	SLOTTED NUT, 3/4 - 16	. 2
107	10387-G1	COTTER PIN	. 2
108		-	
109	12091-G2	SPINDLE CAP	. 2
110			
111	72036-G02	BRAKE CABLE BRACKET (PASSENGER SIDE)	. 1
112	72237-G02	BRAKE CABLE BRACKET (DRIVER SIDE)	. 1

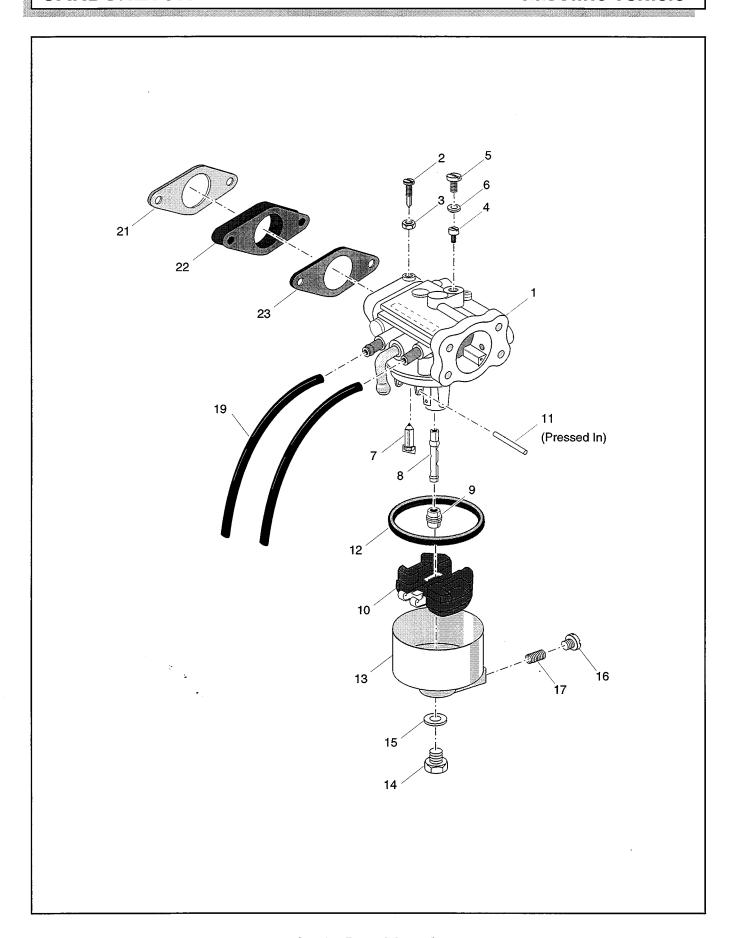

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	26645-G04	CARBURETOR ASSEMBLY (INCLUDES ITEMS 2 - 12)	1
2	26835-G01	PILOT SCREW	1
3	26847-G01	PILOT SCREW NUT	1
4	26649-G03	PILOT JET (#50)	1
5	26841-G01	PLUG	1
6	26842-G01	GASKET	1
7	26647-G01	NEEDLE VALVE	1
8	26837-G01	MAIN NOZZLE	1
9	26646-G07	MAIN JET (#90)	1
10	26648-G01	FLOAT	1
11	26840-G01	FLOAT PIN	1
12	26843-G01	FLOAT BOWL GASKET	1
13	26844-G01	FLOAT CHAMBER	1
14	26839-G01	BOWL SCREW	1
15	26838-G01	BOWL GASKET	1
16	26846-G01	DRAIN SCREW	1
17	26845-G01	SPRING	1
18			
19	26650-G01	CARBURETOR VENT TUBE	2
20			
21	26726-G01	CARBURETOR MOUNT GASKET	1
22	26637-G01	- CARBURETOR INSULATOR	1
23	26725-G01	CARBURETOR MOUNT GASKET	1

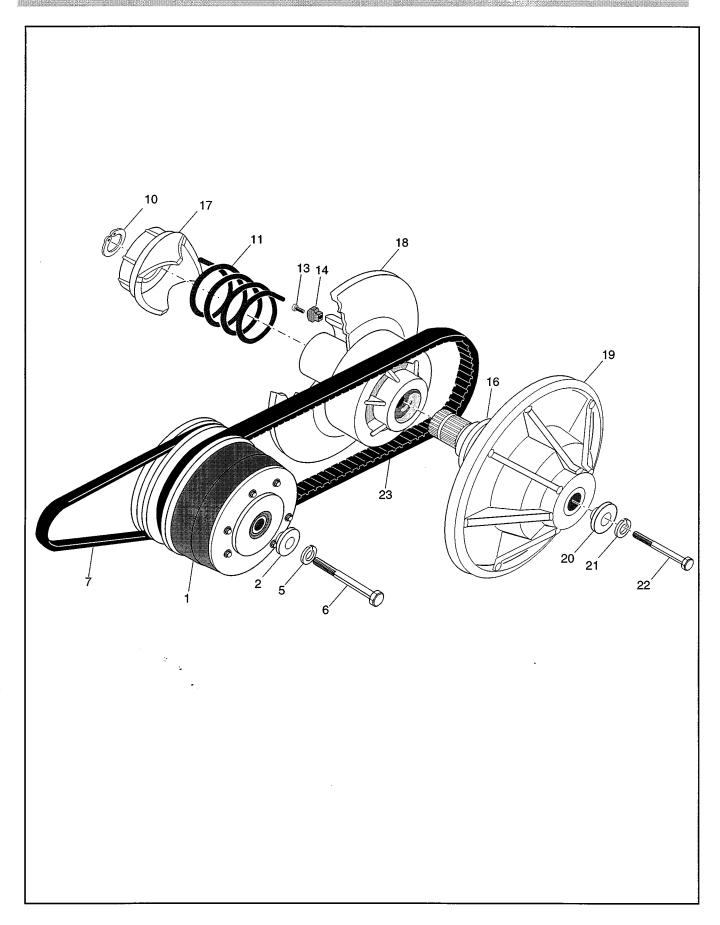


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	26952-G01	DRIVE CLUTCH	. 1
2	25757-G1	PILOT WASHER	. 1
3			
4			
5	00566-G2	LOCK WASHER, 7/16"	1
6	00473-G9	BOLT, 7/16 - 20 X 6 1/2" LG	. 1
7	26414-G01	STARTER / GENERATOR BELT	. 1
8			
9	26301-G02	DRIVEN CLUTCH ASSEMBLY (INCLUDES ITEMS 10 - 19)	1
10	27270-G01	HEAVY DUTY RETAINING RING	. 1
11	26304-G01	COMPRESSION SPRING	1
12			
13	00979-G01	SCREW, #10 - 24	. з
14	26479-G01	RAMP BUTTON	. з
15			
16	24600-G1	SPACER WASHER	. 1
17	*	CAM	1
18	*	MOVABLE SHEAVE	. 1
19	*	SHEAVE AND POST	. 1
20	25756-G1	RETAINING WASHER	. 1
21	00565-G8	LOCK WASHER, 5/16"	. 1
22	00441-G8	· BOLT, 5/16 - 18 X 4" LG	. 1
23	72024-G01	DRIVE BELT	ļ 1
24	**	DRIVE CLUTCH PULLER	. AR
		** SEE SERVICE ACCESSORIES AND SPECIAL TOOLS	

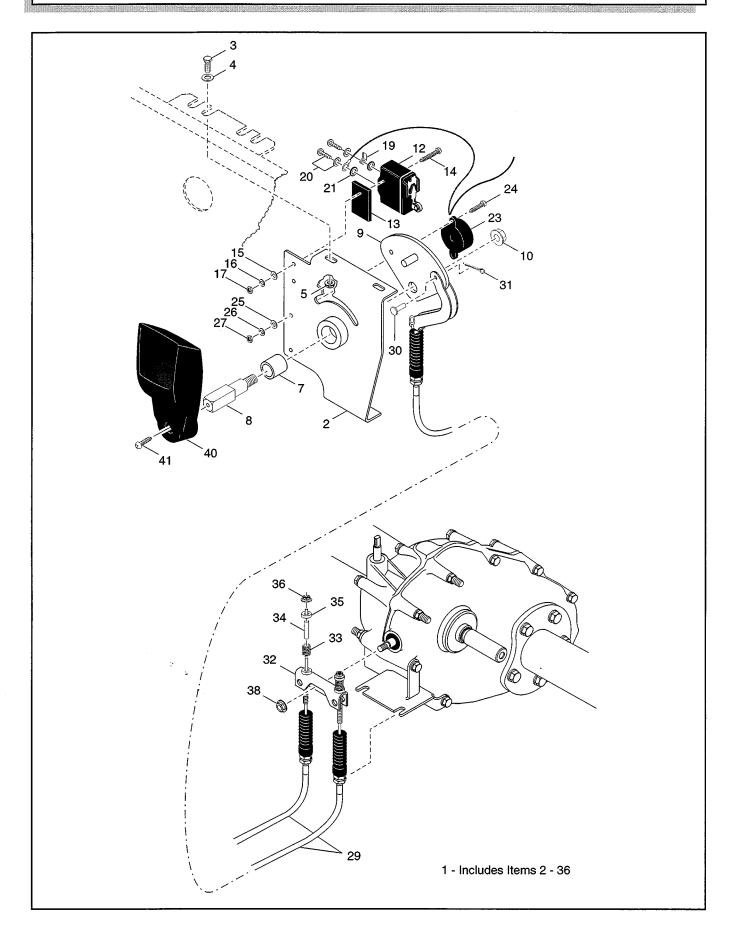


DIRECTION SELECTOR

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	25700-G06	DIRECTION SELECTOR ASSEMBLY (INCLUDES ITEMS 2 - 36)	. 1
2	25684-G01	DIRECTION SELECTOR BRACKET	1
3	00414-G6	SCREW, 1/4 - 20 X 3/4" LG	2
4	00559-G7	WASHER, 1/4"	. 2
5	11027-G2	LOCK NUT, 1/4 - 20	2
6			
7	25664-G1	BUSHING	. 1
8	27537-G01	DIRECTION SELECTOR SHAFT	1
9	25745-G01	DIRECTION SELECTOR CAM	1
10	14390-G1	LOCK NUT, 3/8 - 24	1
11			
12	10606-G1	MICRO SWITCH	1
13	27151-G01	MICRO SWITCH SPACER	1
14	00645-G2	SCREW, #6 - 32 X 1 1/4" LG	. 2
15	00559-G3	WASHER, #6	. 2
16	00565-G3	LOCK WASHER, #6	. 2
17	00525-G5	NUT, #6 - 32	. 2
18			
19	14628-G1	FASTON TAB	. 1
20	*	SCREW AND WASHER ASSEMBLY	. 2
21	00567-G3	LOCK WASHER, #6	. 2
22			
23	17940-G5	REVERSE WARNING	. 1
24	00138-G5	SCREW, #6 - 32 X 5/8" LG	. 2
25	00559-G3	WASHER, #6	2
26	00565-G3	LOCK WASHER, #6	. 2
27	00525-G5	NUT, #6 - 32	. 2
28			
29	72341-G01	SHIFTER CONTROL CABLE	. 2
30	23176-G1	CLEVIS PIN, 5/16 X 1/2" LG	. 2


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	10387-G8	COTTER PIN, 1/16 X 3/4" LG	. 2
32	25946-G01	PIVOT ARM	. 1
33	27764-G01	SPRING	. 2
34	23726-G5	SPACER	. 2
35	25727-G01	CUP WASHER	. 4
36	11098-G7	NUT, #10 - 24	. 2
37			
38	26830-G01	SHIFTER LEVER NUT, M8 X 1.25 MM	. 1
39			
40	71905-G01	DIRECTION SELECTOR HANDLE	. 1
41	00740-G4	SCREW, #10 - 32 X 1/2" LG	. 1

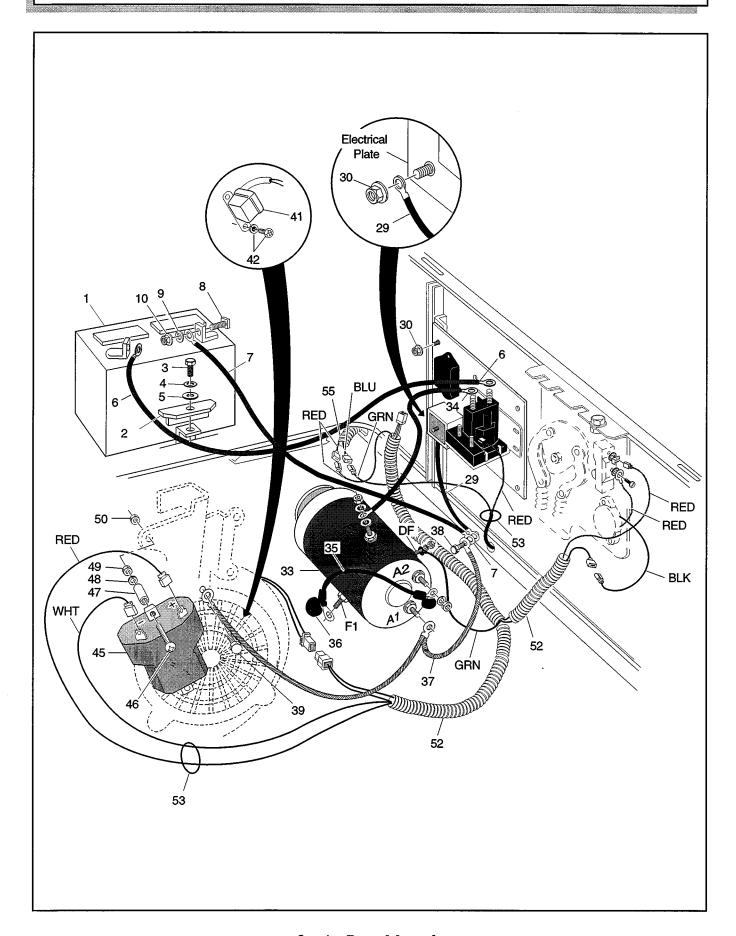

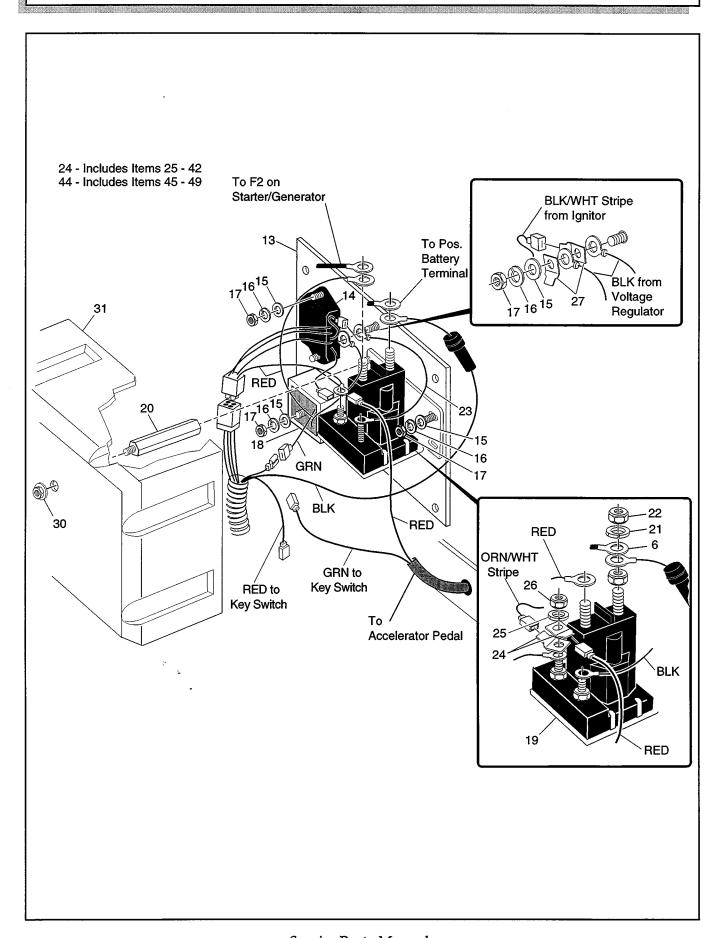

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	24775-G**	BATTERY (12 VOLT)	. 1
2	72101-G01	BATTERY HOLD DOWN	. 1
3	00952-G6	BOLT, 5/16 - 18 X 3/4" LG	. 1
4	00565-G8	LOCK WASHER, 5/16"	. 1
5	00571-G2	WASHER, 5/16"	. 1
6	25972-G33	BATTERY WIRE (POS - SOL)	. 1
7	25972-G12	BATTERY WIRE (NEG - GROUND)	. 1
8	*	BOLT, 5/16 - 18 X 3/4" LG.	. 2
9	: *	LOCK WASHER, 5/16"	. 2
10	*	NUT, 5/16 - 18	. 2
11			
12	27740-G03	ELECTRICAL PLATE ASSEMBLY (INCLUDES ITEMS 12 - 27)	. 1
13	27738-G01	ELECTRICAL PLATE	. 1
14	27746-G01	IGNITOR	. 1
15	00650-G7	WASHER, 1/4"	. 6
16	00565-G7	LOCK WASHER, 1/4"	. 6
17	00532-G1	NUT, 1/4 - 20	. 5
18	27739-G01	VOLTAGE REGULATOR	. 1
19	27153-G01	SOLENOID	. 1
20	72003-G01	COVER SPACER	. 1
21	00565-G8	LOCK WASHER, 5/16"	. 2
22	00544-G4	· NUT, 5/16 - 24	. 2
23	25978-G56	WIRE, 18 GAUGE, 5 3/4" LG	. 1
24	12914-G1	FASTON TAB, 5/16 x 5/16"	2
25	00565-G5	LOCK WASHER, #10	2
26	00526-G4	NUT, #10 - 32	2
27	12914-G2	FASTON TAB, 3/8 x 13/32"	2
28			
29	25976-G11	WIRE, 14 GAUGE, BLACK	1
30	11027-G2	LOCK NUT, 1/4 - 20	. з


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	72004-G01	ELECTRICAL PLATE COVER	. 1
32			
33	XXXXX-XX	STARTER / GENERATOR (SEE SECTION S)	. x
34	25972-G58	WIRE (SOL - F2)	. 1
35	25887-G01	WIRE, F1 - A2	. 1
36	16563-G1	TERMINAL COVER	. 3
37	20294-G3	GROUND CABLE	. 1
38	00715-G3	SCREW, 5/16 - 18 X 1 1/4" LG	. 1
39	26676-G01	SCREW, M6 X 1 X 23 MM LG	. 1
40			
41	26651-G02	IGNITION PICKUP ASSEMBLY (INCLUDES ITEM 42)	. 1
42	26707-G01	BOLT AND WASHER, M5 X .8 X 10 MM LG	. 1
43			
44	26652-G01	IGNITION COIL ASSEMBLY (INCLUDES ITEMS 45 - 49)	. 1
45	*	IGNITION COIL	. 1
46	*	SCREW	. 1
47	*	SPACER	. 1
48	*	LOCK WASHER	. 1
49	*	NUT	. 1
50	13632-G1	NUT, M6	2
51		·	
52	72344-G01	· CONTROL HARNESS	. 1
53	17618-G1	WIRE TIE	. 2
54			
55	27778-G01	IGNITION SWITCH HARNESS	. 1

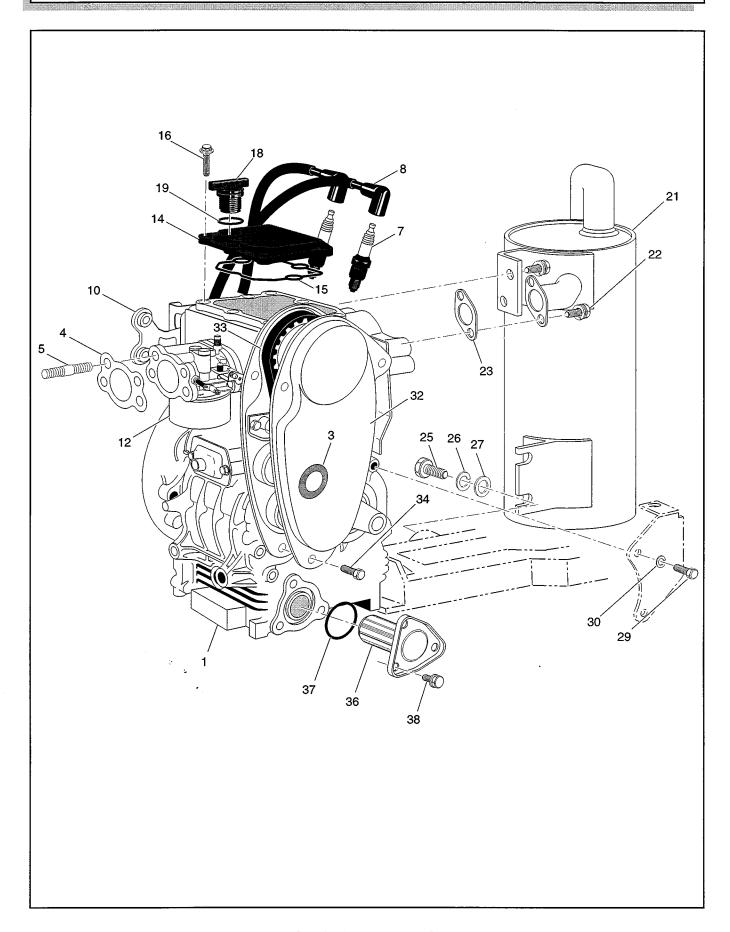

ENGINE AND MUFFLER

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	72500-G01	ENGINE, 350cc	. 1
2			
3	26631-G01	TIMING BELT COVER PLUG	1
4	26727-G01	CARBURETOR / AIR BOX GASKET	. 1
5	26667-G01	STUD	. 2
6			
7	25523-G4	SPARK PLUG (NGK BP5ES)	. 2
8	26733-G01	SPARK PLUG WIRE SET (2 WITH BOOTS)	. 1
9			
10	26657-G01	IGNITION COIL BRACKET	. 1
11			
12	XXXXX-XX	CARBURETOR (SEE SECTION E)	. x
13			
14	26600-G01	VALVE COVER	. 1
15	26719-G01	VALVE COVER GASKET	. 1
16	26676-G01	FLANGED BOLT, M6 X 1 X 23 MM LG	. 6
17			
18	26601-G01	OIL FILLER CAP	. 1
19	26720-G01	"O" RING	. 1
20			
21	72019-G01	MUFFLER	. 1
22	25532-G1	BOLT AND WASHER, M8 X 1.25 X 18 MM LG	. 4
23	25531-G1	EXHAUST GASKET	. 1
24			
25	00438-G8	BOLT, 5/16 - 18 X 1" LG	. 1
26	00565-G8	LOCK WASHER, 5/16"	. 1
27	00642-G8	WASHER, 5/16"	
28			
29	00276-G6	SCREW, 5/16 - 24 X 3/4" LG	. 2
30	00565-G8	LOCK WASHER, 5/16"	
30	00005-G8	LOOK WASHER, 9/10	. 2

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31			
32	26630-G01	TIMING BELT COVER	. 1
33	26626-G01	TIMING BELT	. 1
34	26678-G01	BOLT, M6 X 1 X 12 MM LG	3
35			
36	26591-G01	OIL FILTER	. 1
37	26710-G01	OIL FILTER "O" RING	1
38	26680-G01	BOLT AND WASHER, M6 X 1 X 12 MM LG	3

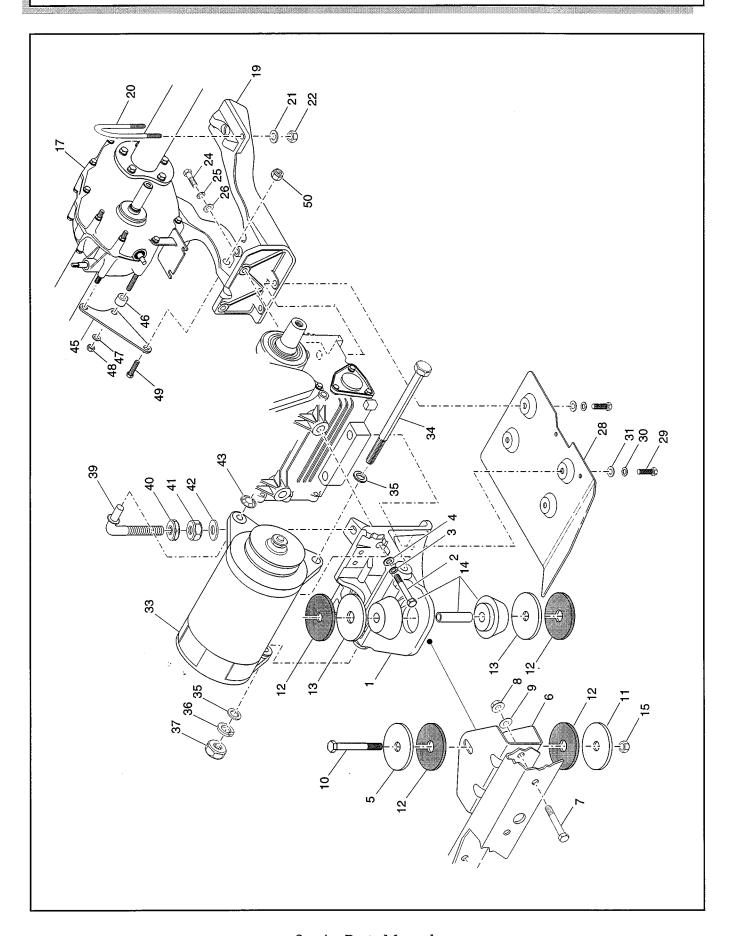

ENGINE AND STARTER MOUNTING

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	72010-G01	FRONT ENGINE MOUNT	. 1
2	00463-G4	BOLT, 7/16 - 14 X 1 1/2" LG	. 2
3	00566-G2	LOCK WASHER, 7/16"	. 2
4	00922-G3	WASHER, 7/16"	2
5	15121-G1	WASHER, 1 1/4" X 3/8"	. 1
6	72044-G01	MOUNT BRACKET	. 1
7	00428-G6	BOLT, 3/8 - 16 X 2 3/4" LG	. 2
8	11098-G5	LOCK NUT, 3/8 - 16	. 2
9	00643-G1	WASHER, 3/8"	. 2
10	00430-G4	BOLT, 3/8 - 16 X 4 1/2" LG	<u>.</u> 1
11	72051-G02	WASHER, 2 1/2 X 11/32 X 1/8"	. 1
12	72050-G01	PLASTIC WASHER	. 4
13	72051-G01	WASHER, 2 1/2 X 5/8 X 1/8"	. 2
14	72015-G01	ISOLATION MOUNT	. 1
15	11098-G5	LOCK NUT, 3/8 - 16	. 1
16			
17	XXXXX-XX	DIFFERENTIAL (SEE SECTION P)	. x
18			
19	72011-G01	REAR ENGINE MOUNT	. 1
20	72035-G01	"U" BOLT	. 2
21	00922-G3	WASHER, 7/16"	4
22	00734-G1	- LOCK NUT, 7/16 - 14	. 4
23			
24	00463-G4	BOLT, 7/16 - 14 X 1 1/2" LG	. 2
25	00566-G2	LOCK WASHER, 7/16"	. 2
26	00922-G3	WASHER, 7/16"	. 2
27			
28	27432-G02	ENGINE GUARD	1
29	00463-G4	BOLT, 7/16 - 14 X 1 1/2" LG	. 4
30	00566-G2	LOCK WASHER, 7/16"	4


Gasoline Vehicle

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	00922-G3	WASHER, 7/16"	4
32			
33	XXXXX-XX	STARTER / GENERATOR (SEE SECTION S)	1
34	00938-G4	BOLT, 1/2 - 13 X 8" LG	1
35	00560-G3	WASHER, 1/2"	2
36	00566-G3	LOCK WASHER, 1/2"	1
37	00533-G1	NUT, 1/2 - 13	1
38			
39	72045-G01	STARTER / GENERATOR ADJUSTER	1
40	00544-G5	JAM NUT, 3/8 - 16	1
41	00532-G5	NUT, 3/8 - 16	1
42	00560-G1	WASHER, 3/8"	1
43	12064-G1	PUSH NUT, 5/16"	1
44			
45	72017-G01	TRANSAXLE BRACKET	1
46	75048-G01	SPACER	1
47	26826-G01	LOCK WASHER, M8	2
48	26827-G01	NUT, M8 X 1.25 MM	2
49	00439-G2	BOLT, 5/16 - 18 X 1 1/4" LG	1
50	11098-G6	LOCK NUT, 5/16 - 18	1
	*		

Gasoline Vehicle

ENGINE AND STARTER MOUNTING



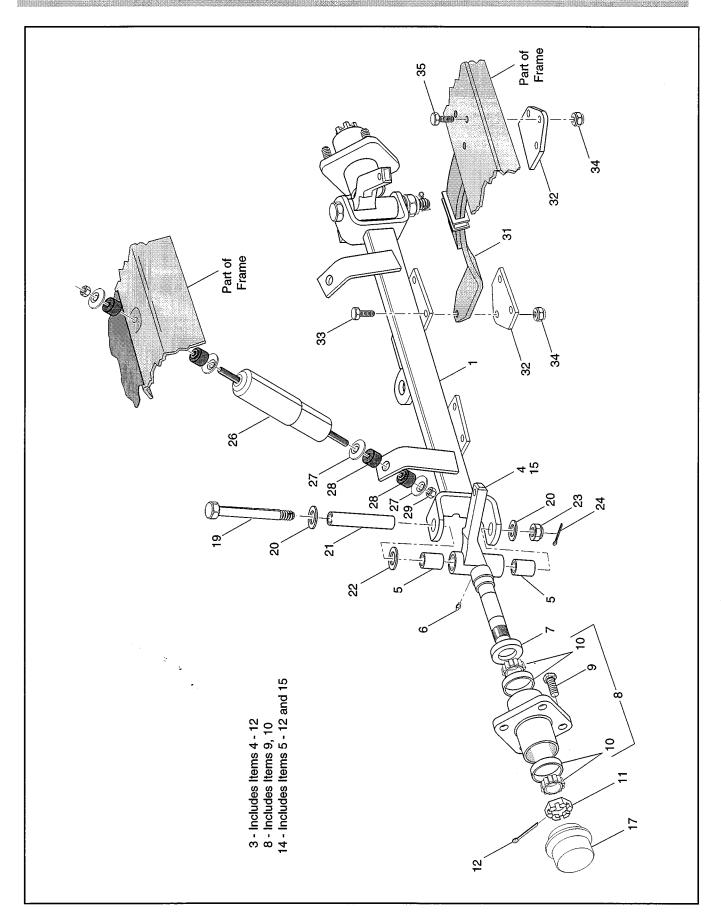

FRONT SUSPENSION

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	70001-G01	FRONT AXLE	. 1
2			
3	70220-G01	SPINDLE ASSEMBLY (DRIVER SIDE) (INCLUDES ITEMS 4 - 12)	. 1
4	*	SPINDLE (DRIVER SIDE)	. 1
5	16623-G1	BEARING	. 2
6	10389-G3	GREASE FITTING	. 1
7	25146-G1	GREASE SEAL	. 1
8	19932-G1	WHEEL HUB ASSEMBLY (INCLUDES ITEMS 17, 18)	. 1
9	19862-G1	WHEEL BOLT, 1/2 - 20	. 4
10	50892-G1	BEARING AND RACE ASSEMBLY (COMPLETE)	. 2
11	12093-G1	SLOTTED NUT, 17/32	. 1
12	00798-G8	COTTER PIN, 5/32 X 1 3/4" LG	. 1
13			
14	70221-G01	SPINDLE ASSEMBLY (PASSENGER SIDE) (INCLUDES ITEMS 5 - 12, 15)	. 1
15	*	SPINDLE (PASSENGER SIDE)	. 1
16			
17	12091-G2	SPINDLE CAP	. 2
18			
19	70327-G01	SPINDLE PIN, 1/2 - 13 X 5 1/2" LG	. 2
20	00571-G5	WASHER, 1/2"	. 4
21	70328-G01	SPINDLE PIN TUBE	. 2
22	16982-G1	THRUST WASHER	. 2
23	14390-G6	LOCK NUT, 1/2 -13	. 2
24	10387-G2	COTTER PIN, 3/32 X 1" LG	. 2
25			
26	70324-G01	SHOCK ABSORBER	. 2
27	10435-G1	SHOCK ABSORBER WASHER	. 8
28	10194-G1	RUBBER SHOCK ABSORBER BUSHING	. 8
29	00532-G6	NUT, 3/8 - 24	. 4
30			


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	70422-G01	LEAF SPRING (HEAVY DUTY)	. 2
32	70163-G02	SPRING PLATE	. 4
33	00463-G4	BOLT, 7/16 - 14 X 1 1/2" LG	. 6
34	00734-G1	LOCK NUT, 7/16 - 14	. 12
35	00463-G6	BOLT, 7/16 - 14 X 1 3/4" LG.	. 6
:			
	*	·	
	mi		<u> </u>

Page L-3


Gasoline Vehicle

FRONT SUSPENSION




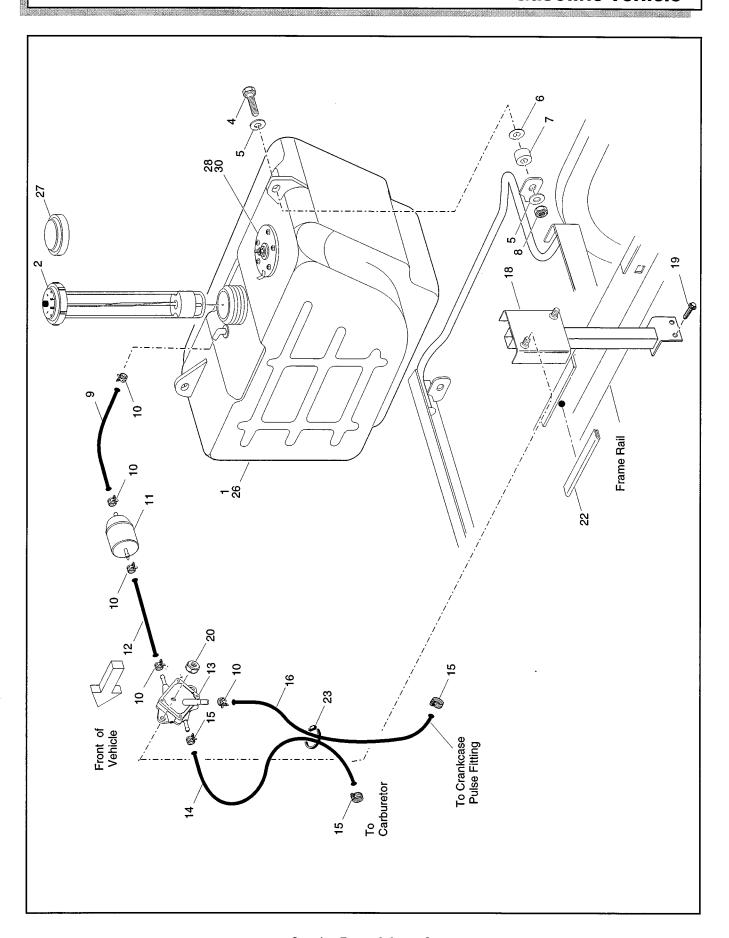


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	72092-G01	FUEL TANK (WITHOUT REMOTE SENDING UNIT)	. 1
2	14099-G2	FUEL TANK CAP (WITH GAUGE)	. 1
3			
4	00438-G8	BOLT, 5/16 - 18 X 1" LG	. 2
5	00559-G8	WASHER, 5/16"	. 4
6	15121-G1	WASHER, 1 1/4" X 3/8"	. 1
7	72234-G01	PLASTIC SPACER	. 1
8	11098-G6	LOCK NUT, 5/16 - 18	. 2
9	17470-G1	FUEL SYSTEM TUBE, 2 5/8" LG. (BULK)	. 1
10	18292-G1	TUBING CLAMP	. 5
11	72084-G0 1	FUEL FILTER	. 1
12	17470-G1	FUEL SYSTEM TUBE, 4" LG. (BULK)	. 1
13	72021-G01	FUEL PUMP	. 1
14	17470-G1	FUEL SYSTEM TUBE, 16" LG. (BULK)	AR
15	11391-G4	HOSE CLAMP	. з
16	27183-G01	PULSE TUBE, 16" LG. (SOLD IN 12" INCREMENTS)	AR
17			
18	72244-G01	FUEL PUMP MOUNT	. 1
19	00715-G2	SELF THREADING SCREW, 5/16 - 18 X 13/16" LG	. 2
20	11027-G2	LOCK NUT, 1/4 - 20	. 2
21	· · · · · · · · · · · · · · · · · · ·		
22	22280-G1	· VINYL TRIM, 14" LG. (BULK)	. 1
23	17618-G1	WIRE TIE	. 1
24			
25	72231-G01	FUEL TANK ASSEMBLY (INCLUDES ITEMS 26 - 28)	. 1
26	72092-G02	FUEL TANK	. 1
27	20039-G1	CAP	. 1
28	20048-G2	FUEL SENDER (ELECTRIC FUEL GAUGE)	. 1
29	72231-G02	FUEL TANK ASSEMBLY (INCLUDES ITEMS 26, 27, 30)	. 1
30	20048-G4	FUEL SENDER (LOW FUEL LIGHT)	. 1

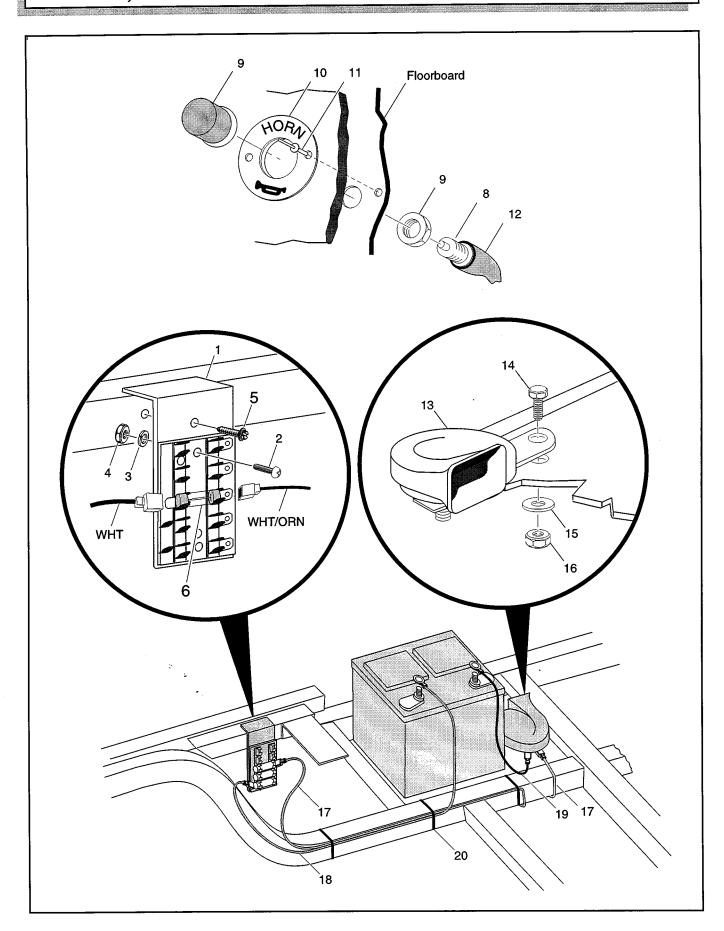


GAUGES, HORN AND LIGHTING

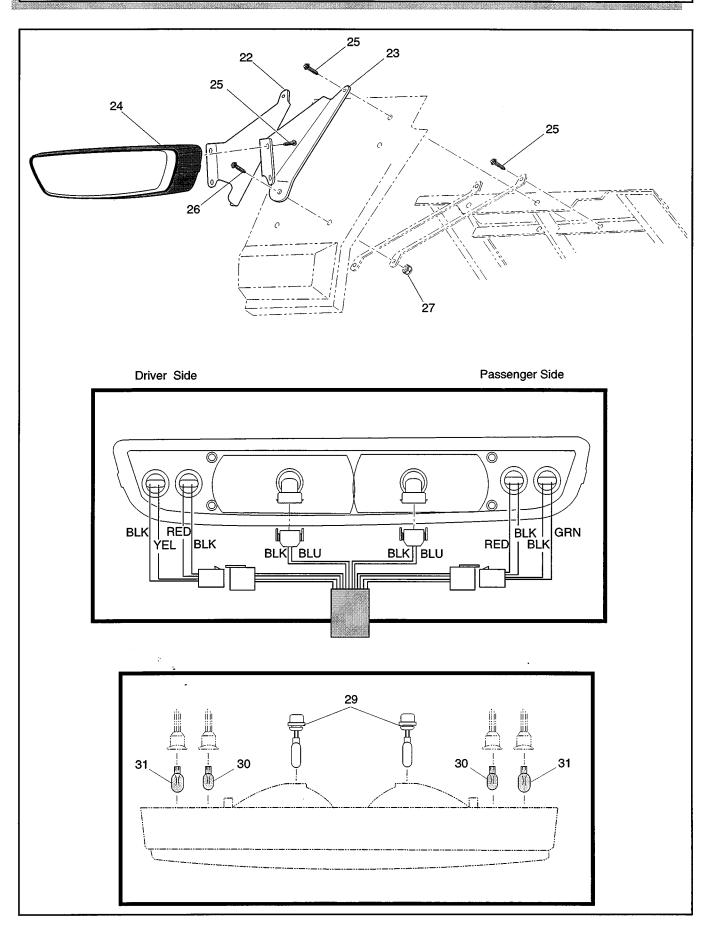

Gasoline Vehicle

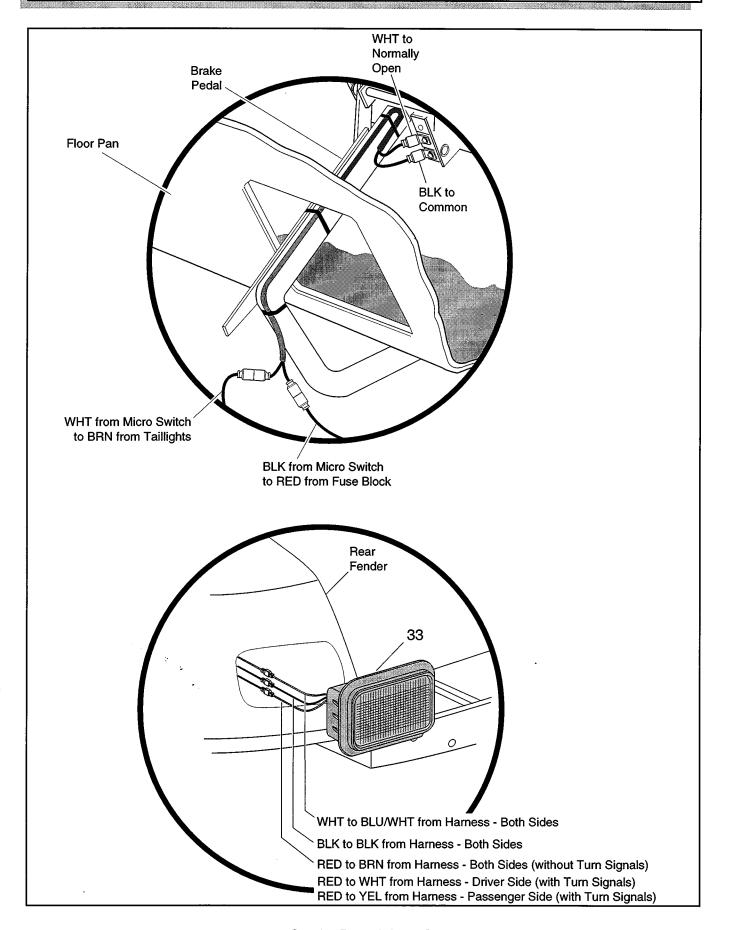


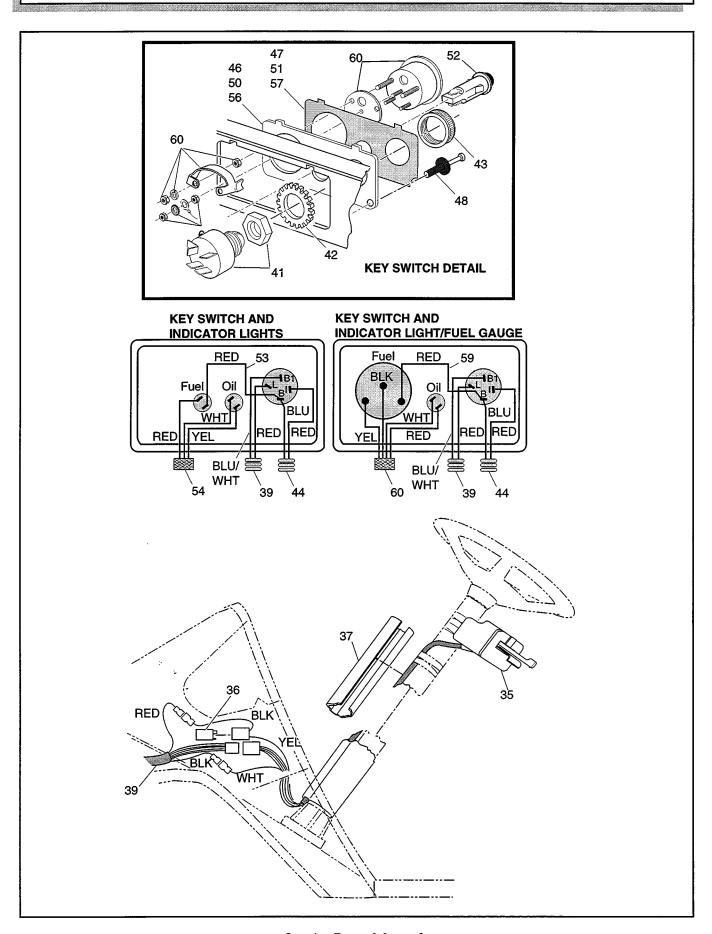


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	73204-G01	FUSE BLOCK AND BRACKET (INCLUDES ITEMS 2 - 4)	1
2	00138-G4	SCREW, #6-32 X 1/2" LG	2
3	00565-G3	LOCK WASHER, #6	2
4	00525-G5	NUT, #6-32	2
5	00106-G6	SELF THREADING SCREW, #12 - 24 X 3/4" LG	1
6	18392-G1	15 AMP FUSE	3
7			
8	17318-G1	HORN SWITCH	. 1
9	17318-G2	HORN SWITCH CAP AND NUT	. 1
10	19233-G1	HORN SWITCH PLATE	. 1
11	14601-G7	RIVET, 9/16" (STAINLESS STEEL)	. 2
12	27068-G01	HORN SWITCH BOOT	. 1
13	32860-G1	HORN	. 1
14	00414-G5	BOLT, 1/4 - 20 X 5/8" LG	. 1
15	00559-G8	WASHER, 5/16"	. 1
16	00891-G2	LOCK NUT, 1/4 - 20	. 1
17	73214-G01	HORN HARNESS	. 1
18	25974-G22	WIRE, 10 GAUGE	. 1
19	25977-G40	WIRE, 16 GAUGE	. 1
20	17618-G1	WIRE TIE	. 5
21	* .		
22	74002-G01	. HEADLIGHT AND TURN SIGNAL LIGHT BRACKET (PASSENGER SIDE)	. 1
23	74002-G02	HEADLIGHT AND TURN SIGNAL LIGHT BRACKET (DRIVER SIDE)	. 1
24	74001-G01	HEADLIGHT AND TURN SIGNAL LIGHT	. 1
25	00114-G6	SCREW, 1/4 - 14 X 3/4" LG	. 8
26	00414-G6	BOLT, 1/4 - 20 X 3/4" LG	. 2
27	11027-G2	LOCK NUT, 1/4 - 20	. 2
28			
29	74004-G01	REPLACEMENT HEADLIGHT BULB	. AR
30	74005-G01	REPLACEMENT MARKER LIGHT BULB	AR

GAUGES, HORN AND LIGHTING

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	74006-G01	REPLACEMENT TURN LIGHT BULB	/R
32			Į.
33	32739-G2	TAIL LIGHT	. 2
34			
35	17867-G1	TURN SIGNAL (WITH MOUNTING HARDWARE)	. 1
36	21640-G1	TURN SIGNAL FLASHER	
37	20965-G3	STEERING COLUMN COVER	. 1
38			:
39	74042-G01	LIGHT AND TURN SIGNAL HARNESS	1
40			
41	33639-G*	IGNITION SWITCH	. 1
42	00568-G6	LOCK WASHER, 3/4"	. 1
43	17137-G1	FACE NUT	. 1
44	27778-G01	IGNITION SWITCH HARNESS	1
45			
46	73030-G01	PLATE (IGNITION SWITCH)	. 1
47	71181-G01	DECAL (IGNITION SWITCH)	1
48	33623-G02	DRIVE RIVET	. 2
49			
50	73030-G03	PLATE (IGNITION SWITCH AND INDICATOR LIGHTS)	1
51	71183-G01	DECAL (IGNITION SWITCH AND INDICATOR LIGHTS)	1
52	23474-G1	- INDICATOR LIGHT	2
53	25978-G74	WIRE, 18 GAUGE, RED	1
54	74030-G01	HARNESS (INDICATOR LIGHTS)	1
55			
56	73030-G04	PLATE (IGNITION SWITCH AND LOW OIL LIGHT, FUEL GAUGE)	1
57	71127-G01	DECAL (IGNITION SWITCH AND LOW OIL LIGHT, FUEL GAUGE)	1
58	21553-G01	FUEL GAUGE	1
59	25978-G122	WIRE, 18 GAUGE, RED	. 1
60	74029-G01	HARNESS (INDICATOR LIGHT AND FUEL GAUGE)	. 1

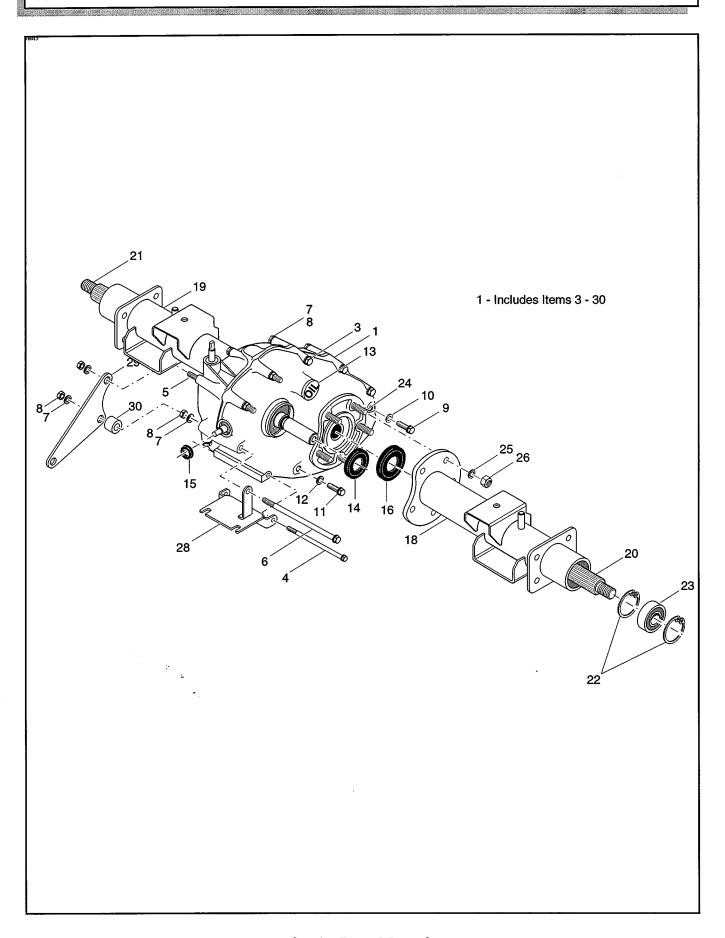


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	722461-G01	REAR AXLE (13.32:1) (INCLUDES ITEMS 3 - 35)	. 1
2			
3	26823-G01	FLANGED BOLT, M8 X 1.25 X 100 MM LG	. 7
4	26824-G01	FLANGED BOLT, M8 X 1.25 X 110 MM LG	. 1
5	72053-G01	BOLT, M8 X 1.25 X 120 MM LG	. 1
6	72052-G01	FLANGED BOLT, M8 X 1.25 X 130 MM LG	. 1
7	26826-G01	LOCK WASHER, M8	. 14
8	26827-G01	NUT, M8 X 1.25 MM	. 14
9	26768-G01	OIL CHECK PLUG	. 1
10	26769-G01	GASKET, 8 MM	. 1
11	26770-G01	OIL DRAIN PLUG	. 1
12	26771-G01	GASKET, 14 MM	1
13	26772-G01	OIL FILLER PLUG	. 1
14	26761-G01	INPUT SHAFT SEAL	. 1
15	26762-G01	SHIFTER SHAFT SEAL	. 1
16	26766-G01	AXLE SHAFT SEAL	. 2
17			
18	**** - G**	AXLE TUBE (DRIVER SIDE)	. 1
19	**** - G**	AXLE TUBE (PASSENGER SIDE)	. 1
20	72056-G01	AXLE SHAFT (DRIVER SIDE)	. 1
21	72057-G01	AXLE SHAFT (PASSENGER SIDE)	1
22	26814-G01	RETAINING RING	4
23	26811-G01	SEALED BALL BEARING	2
24	26667-G01	STUD, M10 X 1.5 X 40 MM LG	5
25	26828-G01	WASHER, 10 MM	10
26	26829-G01	NUT, 10 MM X 1.5 MM	. 10
27			
28	26815-G01	SHIFTER CABLE BRACKET	1
29	72017-G01	REAR AXLE BRACKET	1
30	75048-G01	SPACER	1

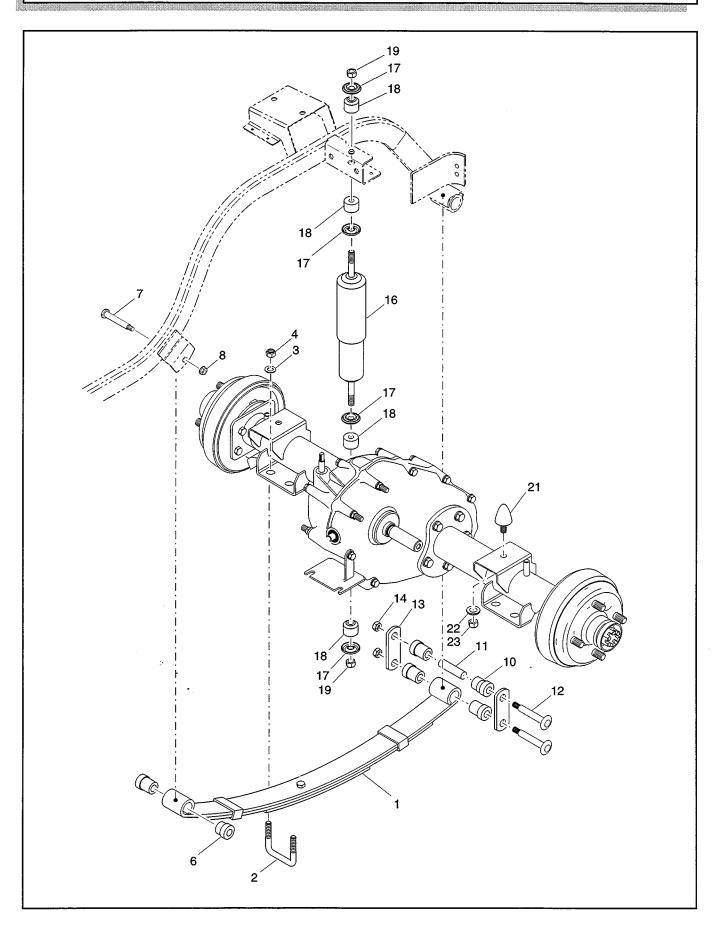


REAR SUSPENSION

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	74207-G01	HEAVY DUTY LEAF SPRING	. 2
2	74029-G01	U-BOLT, 3/8 - 16	. 4
3	00560-G1	WASHER, 3/8"	. 8
4	11098-G5	LOCK NUT, 3/8 - 16	. 8
5			
6	70291-G01	RUBBER BUSHING	. 12
7	14158-G1	SHOULDER BOLT, 3/16 x 3 1/4" LG	. 2
8	12262-G1	FLANGED LOCK NUT, 3/8 - 16	. 2
9			
10	10194-G1	RUBBER BUSHING	. 8
11	70289-G02	SPACER	. 4
12	00429-G4	BOLT, 3/8 - 16 X 3 1/2" LG.	. 4
13	70290-G01	SHACKLE PLATE	. 4
14	11098-G5	LOCK NUT, 3/8 - 16	. 1
15			
16	70324-G01	SHOCK ABSORBER	. 2
17	10435-G1	SHOCK ABSORBER WASHER	. 8
18	10194-G1	SHOCK ABSORBER RUBBER BUSHING	. 8
19	00532-G6	NUT, 3/8 - 24	. 4
20			
21	70492-G01	RUBBER BUMPER	. 2
22	00968-G01	· LOCK WASHER, M10	. 2
23	00974-G01	NUT, M10	. 2

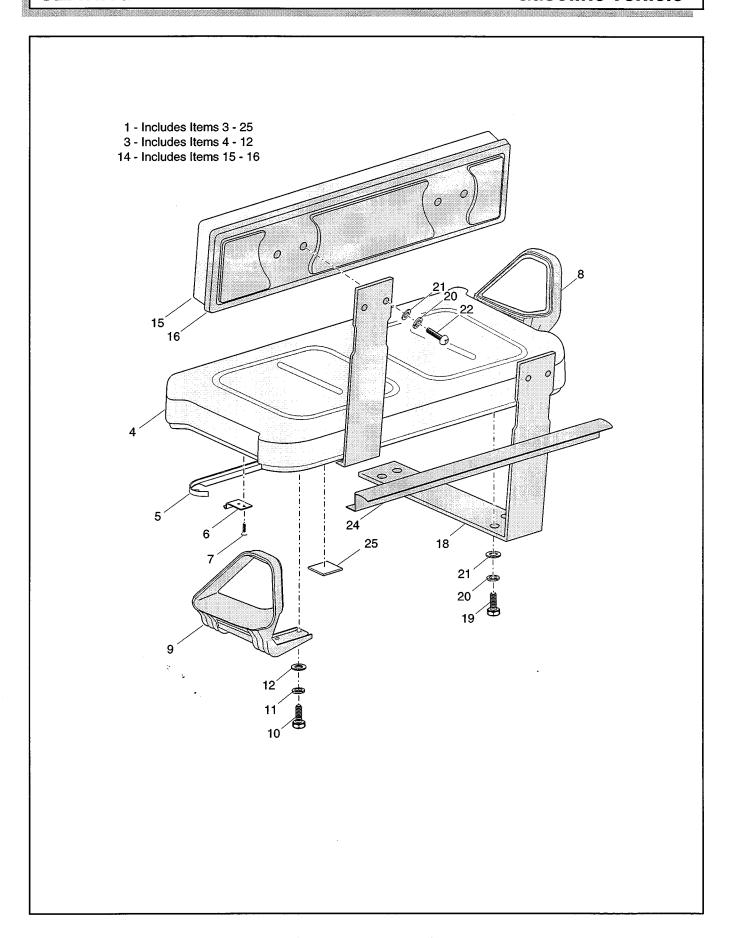

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	71665-G**	SEAT ASSEMBLY (INCLUDES ITEMS 3 - 25)	. 1
2			
3	71664-G**	SEAT BOTTOM ASSEMBLY (INCLUDES ITEMS 4 - 12)	. 1
4	71602-G**	SEAT BOTTOM COVER	. 1
5	71012-G01	SEAT BOTTOM VINYL TRIM	. 1
6	71610-G01	SEAT HINGE	. 2
7	00720-G08	SCREW, #12 - 14 X 1" LG	. 6
8	71701-G01	PASSENGER SIDE HIP RESTRAINT	. 1
9	71702-G01	DRIVER SIDE HIP RESTRAINT	. 1
10	00414-G8	BOLT, 1/4 - 20 X 1" LG	. 8
11	00565-G7	LOCK WASHER, 1/4"	. 8
12	00559-G7	WASHER, 1/4"	. 8
13			
14	27546-G**	SEAT BACK ASSEMBLY (INCLUDES ITEMS 15 - 16)	. 1
15	18144-G**	SEAT BACK COVER	. 1
16	18868-G3	PLASTIC SEAT BACK COVER	. 1
17			
18	71662-G01	SEAT BACK SUPPORT BRACKET	. 2
19	00414-G8	BOLT, 1/4 - 20 X 1" LG	. 8
20	00567-G7	LOCK WASHER, 1/4"	. 12
21	00559-G7	WASHER, 1/4"	. 12
22	16705-G1	- BOLT, 1/4-20 X 1" LG	. 4
23			
24	71762-G01	SEAL	. 1
25	17074-G1	PAD	. 2

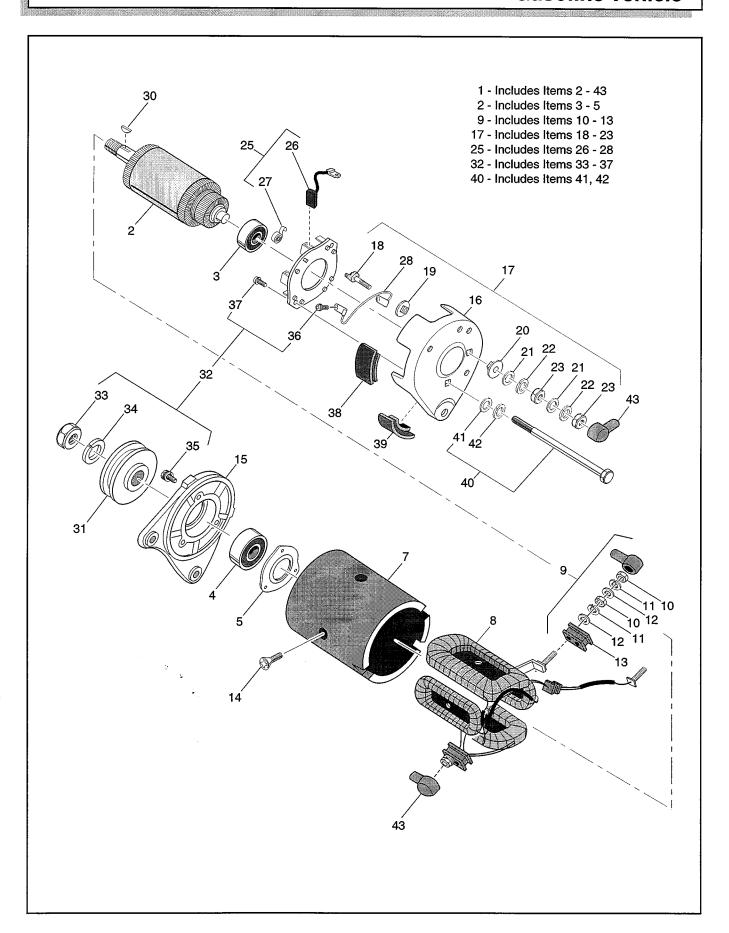

STARTER/GENERATOR

THE USE OF NON U.L. PARTS WILL VOID ANY U.L. LISTING. When ordering parts, please specify the model and serial number of the product. * Indicates a component that is not available as an individual part. G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	27065-G01	STARTER / GENERATOR, COMPLETE (INCLUDES ITEMS 2 - 43)	. 1
2	26870-G01	ARMATURE ASSEMBLY (INCLUDES ITEMS 3 - 5)	. 1
3	26871-G01	REAR BALL BEARING	1
4	26872-G01	FRONT BALL BEARING	. 1
5	26873-G01	BEARING HOLDER	. 1
6			
7			
8	26875-G01	FIELD COIL	1
9	26876-G01	"F" INSULATING BRUSH ASSEMBLY (INCLUDES ITEMS 10 - 13)	2
10	*	NUT	2
11	*	LOCK WASHER	2
12	*	WASHER	2
13	*	INSULATOR	1
14	26877-G01	POLE CORE SET SCREW	4
15	26878-G01	FRONT COVER	1
16	16885-G1	REAR COVER	1
17	26880-G01	"A" TERMINAL ASSEMBLY (INCLUDES ITEMS 18 - 23)	2
18	*	TERMINAL	2
19	*	INSULATOR	2
20	*	INSULATOR	2
21	*	WASHER	4
22	*	LOCK WASHER	4
23	*	NUT	4
24			
25	26881-G01	BRUSH HOLDER ASSEMBLY (INCLUDES ITEMS 26 - 28)	1
26	26658-G01	BRUSH	4
27	26882-G01	BRUSH SPRING	4
28	26883-G01	BRUSH CONNECTOR	2
29			
30	26884-G01	KEY	1

THE USE OF NON U.L. PARTS WILL VOID ANY U.L. LISTING.


When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	26885-G01	PULLEY	. 1
32	26886-G01	PULLEY HARDWARE KIT (INCLUDES ITEMS 33 - 37)	. 1
33	*	NUT	. 1
34	*	LOCK WASHER	. 1
35	*	SCREW	. 3
36	*	SCREW	. 4
37	*	SCREW	. 2
38	26887-G01	BRUSH 1 COVER	. 2
39	26888-G01	BRUSH 2 COVER	. 3
40	26889-G01	BOLT AND WASHER ASSEMBLY (INCLUDES ITEMS 41, 42)	. 2
41	*	WASHER	. 2
42	*	LOCK WASHER	. 2
43	16896-G1	TERMINAL COVER KIT	. 4


STARTER/GENERATOR

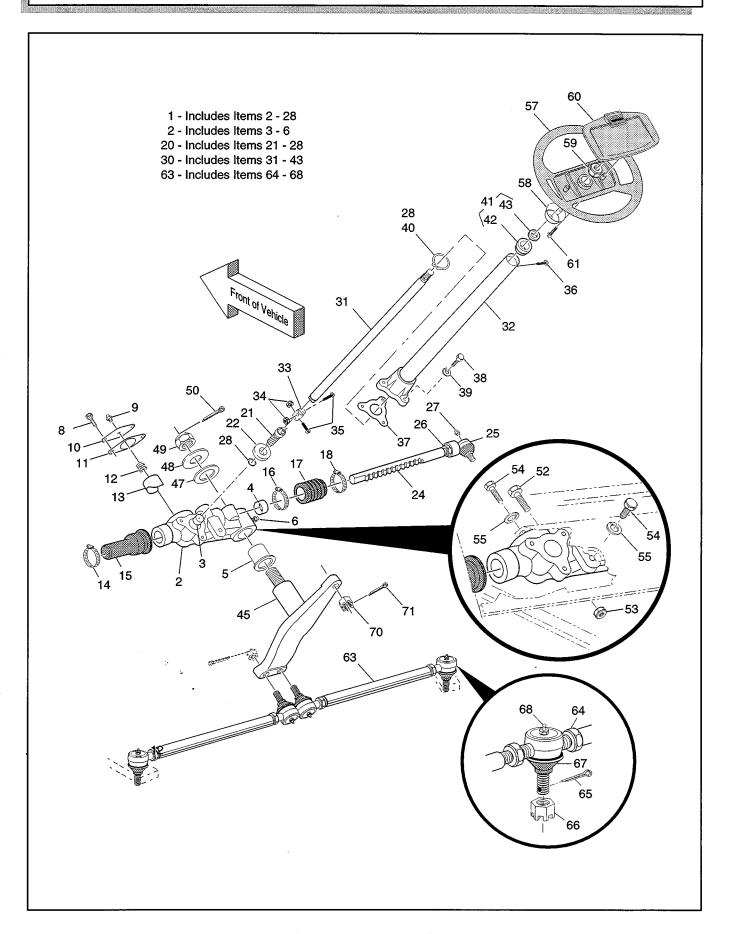



ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	70314-G01	STEERING BOX ASSEMBLY (COMPLETE) (INCLUDES ITEMS 2 - 10)	1
2	75364-G01	STEERING HOUSING (INCLUDES ITEMS 3-6)	1
3	*	SLEEVE BEARING	1
4	*	SLEEVE BEARING	1
5	*	FLANGED BEARING	1
6	10389-G3	GREASE FITTING	1
7			
8	00426-G6	BOLT, 3/8 - 16 X 3/4" LG	2
9	18456-G1	90° GREASE FITTING	1
10	70177-G01	RACK GUIDE COVER	1
11	70225-G01	GASKET	1
12	70178-G01	COMPRESSION SPRING	1
13	70179-G01	RACK GUIDE	1
14	11391-G1	CLAMP	1
15	70041-G01	RACK COVER	1
16	11391-G1	GEAR CLAMP	1
17	70183-G01	BELLOWS	1
18	11391-G5	GEAR CLAMP	1
19			
20	70299-G01	STEERING GEAR KIT (INCLUDES ITEMS 21 - 28)	1
21	*	GEAR PINION	1
22	*	- BALL BEARING	1
23	*	EXTERNAL RETAINING RING	1
24	*	STEERING RACK	1
25	*	RACK BALL END (WITH NUT)	1
26	*	NUT, 7/16 - 20	1
27	*	90° GREASE FITTING	2
28	*	INTERNAL RETAINING RING	1
29			
30	70360-G01	STEERING SHAFT/COLUMN KIT (INCLUDES ITEMS 31 - 43)	1

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	14322-G3	STEERING SHAFT	1
32	70333-G01	STEERING COLUMN	1
33	70226-G01	COUPLING	1
34	00550-G1	LOCK NUT, 1/4 - 20	2
35	70227-G01	BOLT, 1/4 - 20 X 7/8" LG	2
36	00118-G2	SCREW, #6 - 18 X 1/4" LG	1
37	70223-G01	STEERING HOUSING GASKET	1
38	00876-G2	BOLT, 3/8 - 16 X 1 1/4" LG	3
39	00878-G1	LOCK WASHER, 3/8"	3
40	70189-G01	INTERNAL RETAINING RING	1
41	17161-G1	BUSHING/SEAL KIT (INCLUDES ITEMS 42, 43)	1
42	*	STEERING COLUMN BUSHING	1
43	*	SHAFT SEAL	1
44			
45	70184-G01	IDLER	1
46			
47	70216-G01	THRUST WASHER, 1 1/2" I.D	1
48	70195-G01	THRUST WASHER, 7/8"	1
49	00734-G6	LOCK NUT, 7/8 - 9	1
50	00798-G8	COTTER PIN, 5/32" X 1 3/4" LG	1
51	**************************************		
52	00470-G4	-BOLT, 7/16 - 20 X 2 1/2" LG	1
53	00734-G3	LOCK NUT, 7/16 - 20	1
54	00462-G7	BOLT, 7/16 - 14 X 7/8" LG	2
55	00566-G2	LOCK WASHER, 7/16"	2
56			
57	18325-G1	STEERING WHEEL (INCLUDES ITEM 58)	1
58	*	HUB COVER	1
59	14390-G2	LOCK NUT, 5/8 - 18	1
60	27102-G01	CLIPBOARD	1

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
61	00999-G01	SCREW, #8 - 18 X 7/8" LG.	. 2
62			
63	70074-G01	TIE ROD ASSEMBLY (INCLUDES ITEMS 64 - 68)	. 2
64	18434-G2	NUT, 9/16 - 18	. 2
65	10387-G2	COTTER PIN, 3/32" X 1" LG	. 2
66	50209-G1	SLOTTED NUT, 7/16 - 20	. 2
67	50641-G1	RUBBER BOOT	. 2
68	10389-G3	GREASE FITTING	. 2
69			
70	50209-G1	SLOTTED NUT, 7/16 - 20	. 1
71	10387-G2	COTTER PIN, 3/32" X 1" LG	. 3

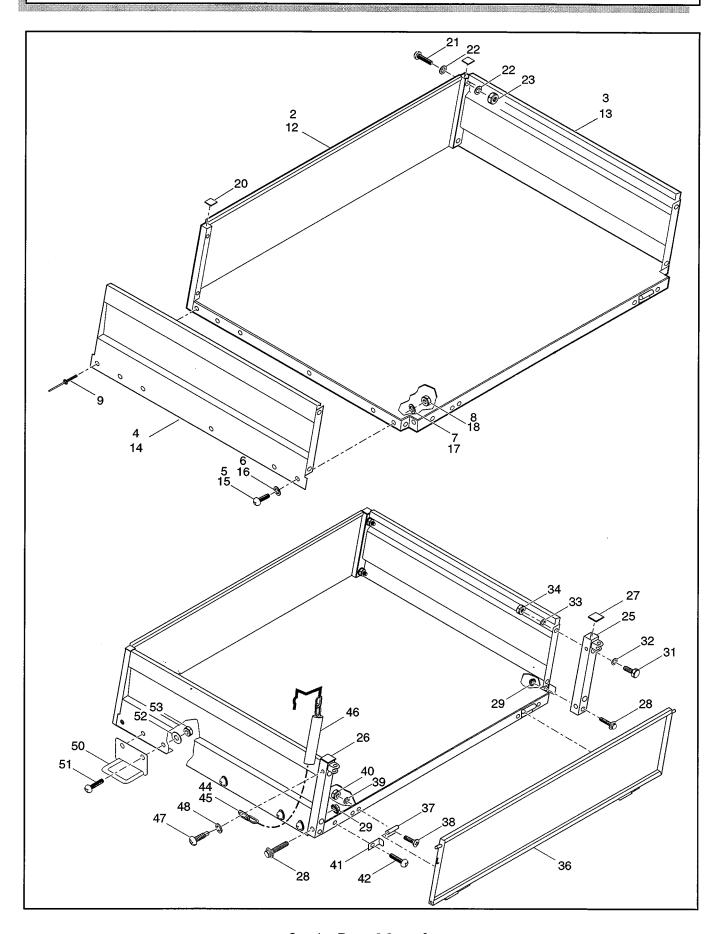

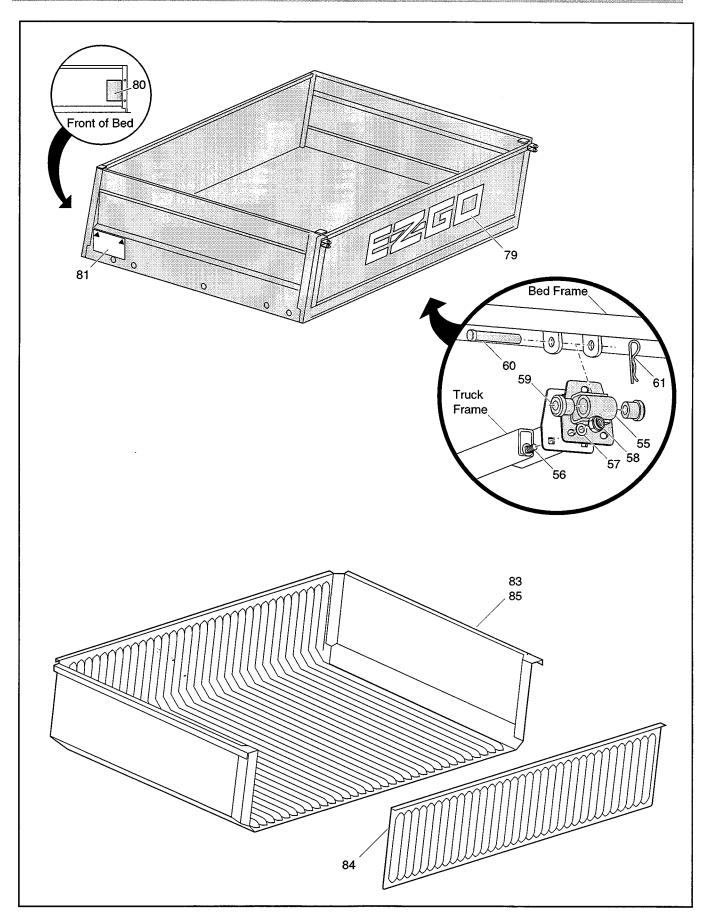

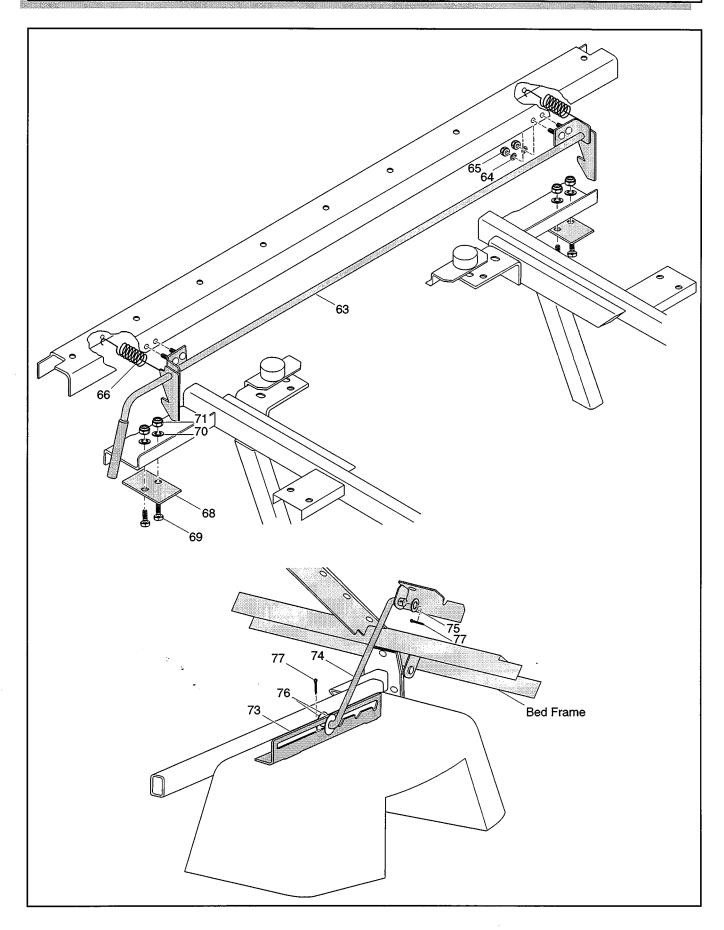

TRUCK BED, MANUAL LIFT


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	71711-G03	TRUCK BED ASSEMBLY (40") (MANUAL DUMP) (INCLUDES ITEMS 2 - 9, 20 - 53)	. 1
2	71719-G01	BED FRAME (40")	1
3	71714-G01	SIDE PANEL (40", PASSENGER SIDE)	. 1
4	71714-G02	SIDE PANEL (40", DRIVER SIDE)	. 1
5	16705-G3	BOLT, 1/4-20 X 3/4" LG	. 8
6	00915-G1	BONDED WASHER, 1/4"	. 8
7	00559-G7	WASHER, 1/4"	. 8
8	14390-G4	LOCK NUT, 1/4-20	. 8
9	14601-G8	RIVET, 3/8" X 11/16" LG	. 2
10			
11	71711-G04	TRUCK BED ASSEMBLY (48") (MANUAL DUMP) (INCLUDES ITEMS 9, 12 - 53)	. 1
12	71719-G02	BED FRAME (48")	. 1
13	71742-G01	SIDE PANEL (48", PASSENGER SIDE)	. 1
14	71742-G02	SIDE PANEL (48", DRIVER SIDE)	. 1
15	16705-G3	BOLT, 1/4-20 X 3/4" LG	. 10
16	00915-G1	BONDED WASHER, 1/4"	. 10
17	00559-G7	WASHER, 1/4"	. 10
18	14390-G4	LOCK NUT, 1/4-20	. 10
19			
20	71717-G01	TUBE CAP (1" SQUARE)	. 2
21	16705-G6	BOLT, 1/4-20 X 1 3/4" LG	. 4
22	00915-G1	BONDED WASHER, 1/4"	. 8
23	14390-G4	LOCK NUT, 1/4-20	. 4
24			
25	71712-G01	POST (PASSENGER SIDE)	. 1
26	71712-G02	POST (DRIVER SIDE)	. 1
27	71718-G01	TUBE CAP (1 1/2" SQUARE)	. 2
28	13437-G8	BOLT, 3/8-16 X 2" LG	. 4
29	11027-G5	LOCK NUT, 3/8-16	. 4


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
30			
31	16705-G3	BOLT, 1/4-20 X 3/4" LG	. 4
32	00915-G1	BONDED WASHER, 1/4"	. 4
33	00559-G7	WASHER, 1/4"	. 4
34	14390-G4	LOCK NUT, 1/4-20	. 4
35			
36	71732-G01	TAILGATE	. 1
37	27666-G01	HINGE	. 2
38	01002-G08	BOLT, 1/4-20 X 1" LG	. 4
39	00559-G7	WASHER, 1/4"	. 4
40	14390-G4	LOCK NUT, 1/4-20	. 4
41	71748-G01	TAILGATE KEEPER	. 1
42	16705-G3	BOLT, 1/4-20 X 3/4" LG	. 1
43			
44	28288-G01	BED LOCK (PASSENGER SIDE)	. 1
45	28288-G02	BED LOCK (DRIVER SIDE)	. 1
46	71763-G01	VINYL TUBING	. 2
47	00106-G6	SELF-TAPPING SCREW, #12-24 X 3/4" LG	2
48	00915-G1	BONDED WASHER, 1/4"	2
49			
50	71794-G01	LIFT HANDLE	. 1
51	00976-G08	- SCREW, 5/16-18 X 1" LG	. 2
52	00559-G8	WASHER, 5/16"	. 2
53	11098-G6	LOCK NUT, 5/16-18	. 2
54			
55	70396-G01	BED PIVOT	. 2
56	00764-G2	CARRIAGE BOLT, , 5/16 X 1" LG	. 6
57	00559-G8	WASHER, 5/16"	. 6
58	11098-G6	LOCK NUT, 5/16-18	. 6
59	70291-G01	FLANGED BUSHING	. 4


When ordering parts, please specify the model and serial number of the product. * Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
60	21682-G1	CLEVIS PIN	. 2
61	21683-G1	COTTER PIN	. 2
62			
63	71692-G01	BED LATCH	. 1
64	00559-G7	WASHER, 1/4"	. 4
65	14390-G4	LOCK NUT, 1/4-20	. 4
66	71707-G01	EXTENSION SPRING	2
67			
68	71766-G01	CATCH BRACKET	. 2
69	00414-G6	BOLT, 1/4-20 X 3/4" LG	. 4
70	00559-G7	WASHER, 1/4"	. 4
71	14390-G4	LOCK NUT, 1/4-20	. 4
72			
73	71673-G01	PROP BRACKET	. 1
74	71657-G01	PROP ROD	. 1
75	00560-G1	WASHER, 3/8"	. 1
76	15121-G1	WASHER, 3/8" (1 1/4" OD)	. 2
77	10387-G3	COTTER PIN, 3/32 X 3/4" LG	. 2
78			
79	71795-G01	E-Z-GO DECAL (WHITE)	. 1
80	71200-G01	LOAD WARNING LABEL	. 1
81	71771-G01	- TILT WARNING LABEL	. 1
82			
83	74033-G01	BED LINER, 40"	. 1
84	74036-G0 1	TAILGATE LINER	. 1
85	74033-G02	BED LINER, 48"	. 1

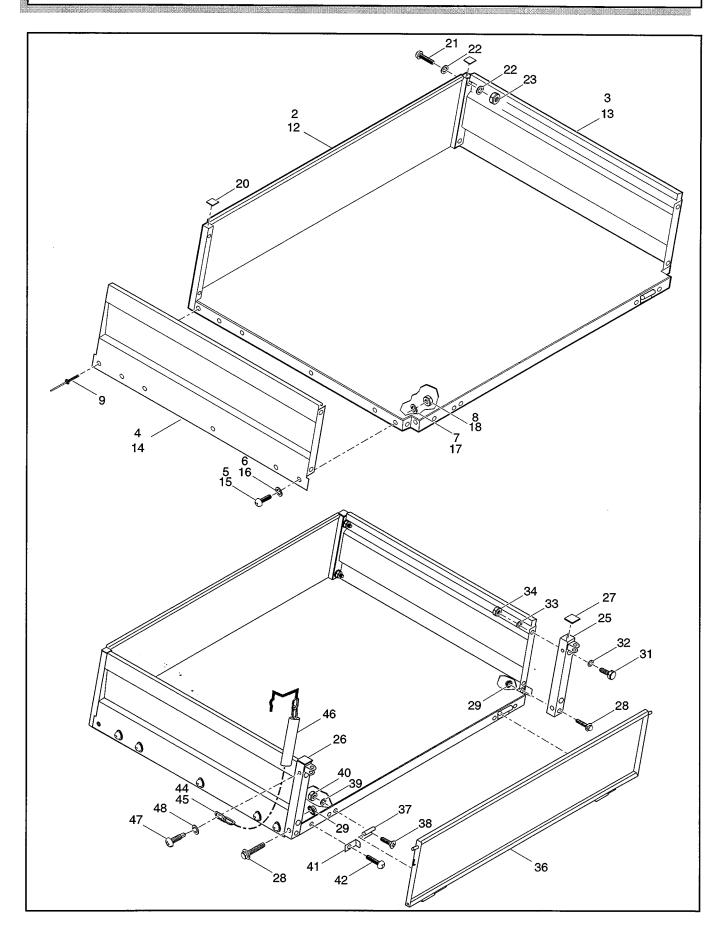

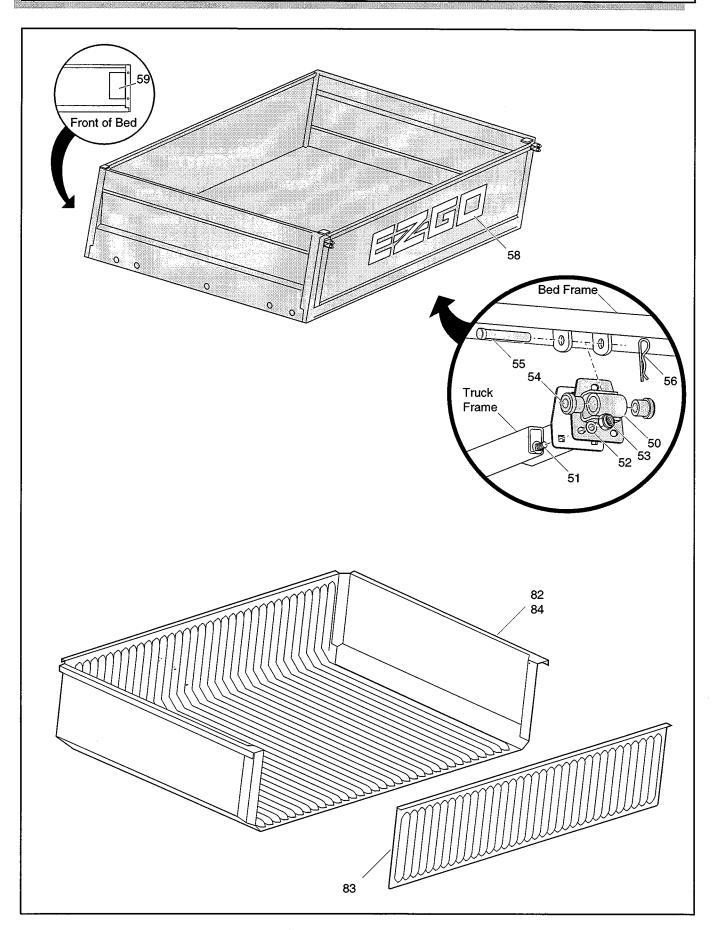

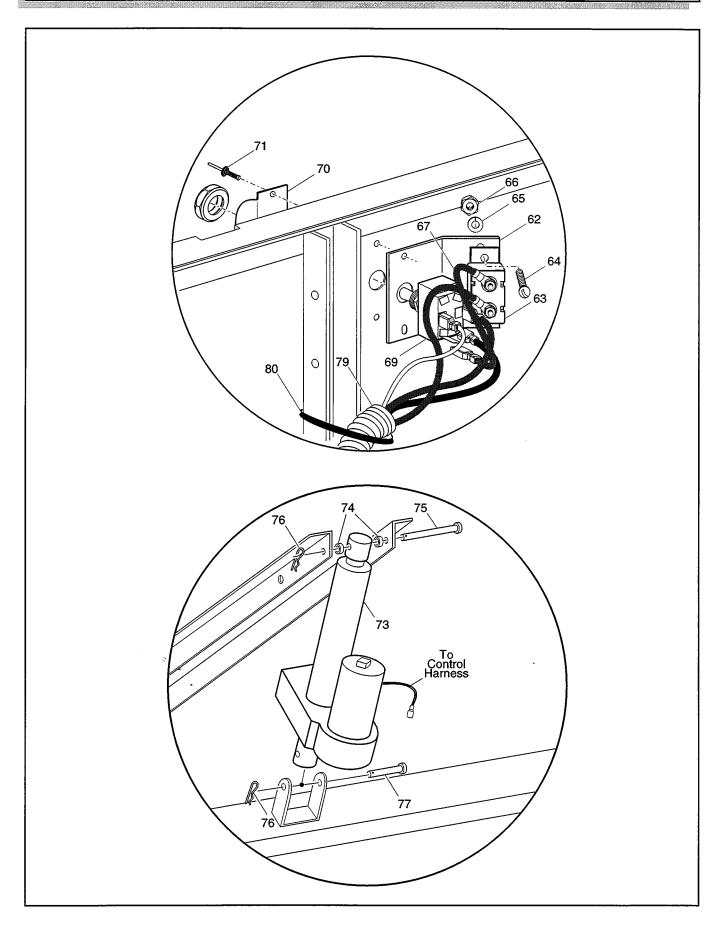


TRUCK BED, ELECTRIC LIFT


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	71711-G01	TRUCK BED ASSEMBLY (40") (ELECTRIC DUMP) (INCLUDES ITEMS 2 - 9, 20 - 48)	1
2	71719-G01	BED FRAME (40")	. 1
3	71714-G01	SIDE PANEL (40", PASSENGER SIDE)	1
4	71714-G02	SIDE PANEL (40", DRIVER SIDE)	1
5	16705-G3	BOLT, 1/4-20 X 3/4" LG	10
6	00915-G1	BONDED WASHER, 1/4"	10
7	00559-G7	WASHER, 1/4"	10
8	14390-G4	LOCK NUT, 1/4-20	10
9	14601-G8	RIVET, 3/8" X 11/16" LG	2
10			
11	71711-G02	TRUCK BED ASSEMBLY (48") (ELECTRIC DUMP) (INCLUDES ITEMS 12 - 48)	9, 1
12	71719-G02	BED FRAME (48")	. 1
13	71742-G01	SIDE PANEL (48", PASSENGER SIDE)	1
14	71742-G02	SIDE PANEL (48", DRIVER SIDE)	1
15	16705-G3	BOLT, 1/4-20 X 3/4" LG	12
16	00915-G1	BONDED WASHER, 1/4"	12
17	00559-G7	WASHER, 1/4"	. 12
18	14390-G4	LOCK NUT, 1/4-20	. 12
19			
20	71717-G01	TUBE CAP (1" SQUARE)	. 2
21	16705-G6	BOLT, 1/4-20 X 1 3/4" LG	. 4
22	00915-G1	BONDED WASHER, 1/4"	8
23	14390-G4	LOCK NUT, 1/4-20	. 4
24			
25	71712-G01	POST (PASSENGER SIDE)	., 1
26	71712-G02	POST (DRIVER SIDE)	. 1
27	71718-G01	TUBE CAP (1 1/2" SQUARE)	
28	13437-G8	BOLT, 3/8-16 X 2" LG	. 4
29	11027-G5	LOCK NUT, 3/8-16	. 4


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
30			
31	16705-G3	BOLT, 1/4-20 X 3/4" LG	4
32	00915-G1	BONDED WASHER, 1/4"	4
33	00559-G7	WASHER, 1/4"	. 4
34	14390-G4	LOCK NUT, 1/4-20	. 4
35			
36	71732-G01	TAILGATE	. 1
37	27666-G01	HINGE	. 2
38	01002-G08	BOLT, 1/4-20 X 1" LG	. 4
39	00559-G7	WASHER, 1/4"	. 4
40	14390-G4	LOCK NUT, 1/4-20	. 4
41	71748-G01	TAILGATE KEEPER	. 1
42	16705-G3	BOLT, 1/4-20 X 3/4" LG	. 1
43			
44	28288-G01	BED LOCK (PASSENGER SIDE)	. 1
45	28288-G02	BED LOCK (DRIVER SIDE)	. 1
46	71763-G01	VINYL TUBING	. 2
47	00106-G6	SELF-TAPPING SCREW, #12-24 X 3/4" LG	2
48	00915-G1	BONDED WASHER, 1/4"	. 2
49			
50	70396-G01	BED PIVOT	. 2
51	00764-G2	- CARRIAGE BOLT, , 5/16 X 1" LG	. 6
52	00559-G8	WASHER, 5/16"	. 6
53	11098-G6	LOCK NUT, 5/16-18	. 6
54	70291-G01	FLANGED BUSHING	. 4
55	21682-G1	CLEVIS PIN	. 2
56	21683-G1	COTTER PIN	. 2
57			
58	71795-G01	E-Z-GO DECAL (WHITE)	. 1
59	71200-G01	LOAD WARNING LABEL	. 1

TRUCK BED, ELECTRIC LIFT

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
60			
61			
62	74165-G01	BRACKET	. 1
63	21320-G3	CIRCUIT BREAKER	1
64	00150-G4	SCREW, #10-24 X 1/2" LG	. 2
65	00565-G5	WASHER, #10	. 2
66	00526-G3	NUT, #10-24	. 2
67	25976-G14	WIRE	. 1
68			
69	27680-G01	TOGGLE SWITCH	. 1
70	27447-G01	TOGGLE GUARD	. 1
71	10570-G9	RIVET, 1/8" X 11/32" LG.	. 2
72			
73	27612-G02	ELECTRIC ACTUATOR	. 1
74	27613-G01	SPACER	. 2
75	14443-G10	CLEVIS PIN, 1/2" X 3" LG	. 1
76	25233-G1	COTTER PIN	. 2
77	14443-G11	CLEVIS PIN, 1/2" X 1 7/8" LG	. 1
78			
79	74163-G01	HARNESS	. 1
80	17618-G1	NYLON CLAMP	. 8
81			
82	74033-G01	BED LINER, 40"	1
83	74036-G01	TAILGATE LINER	. 1
84	74033-G02	BED LINER, 48"	. 1

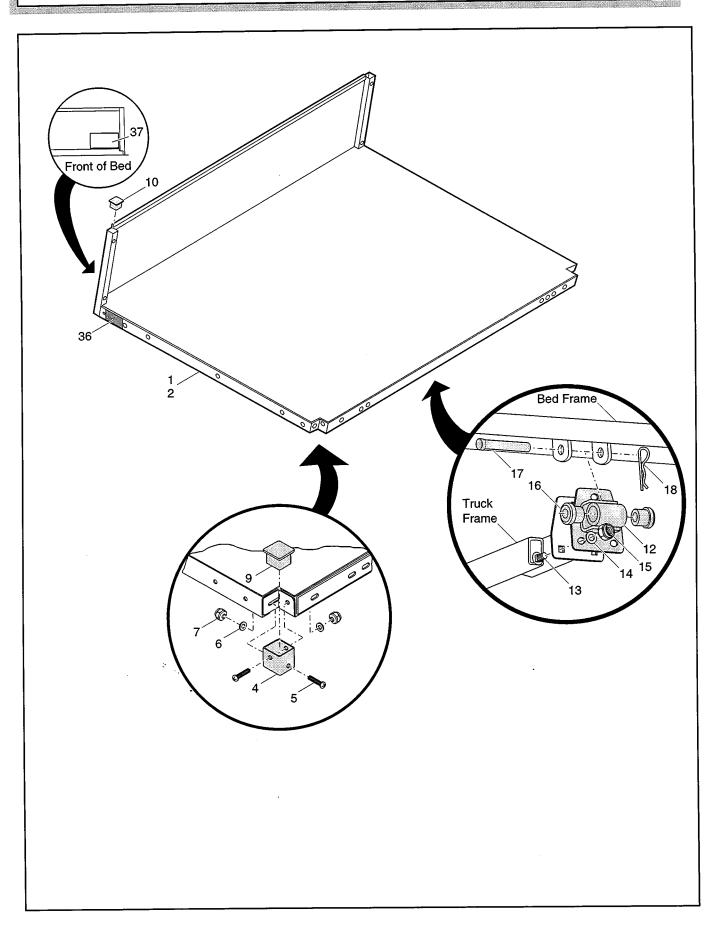

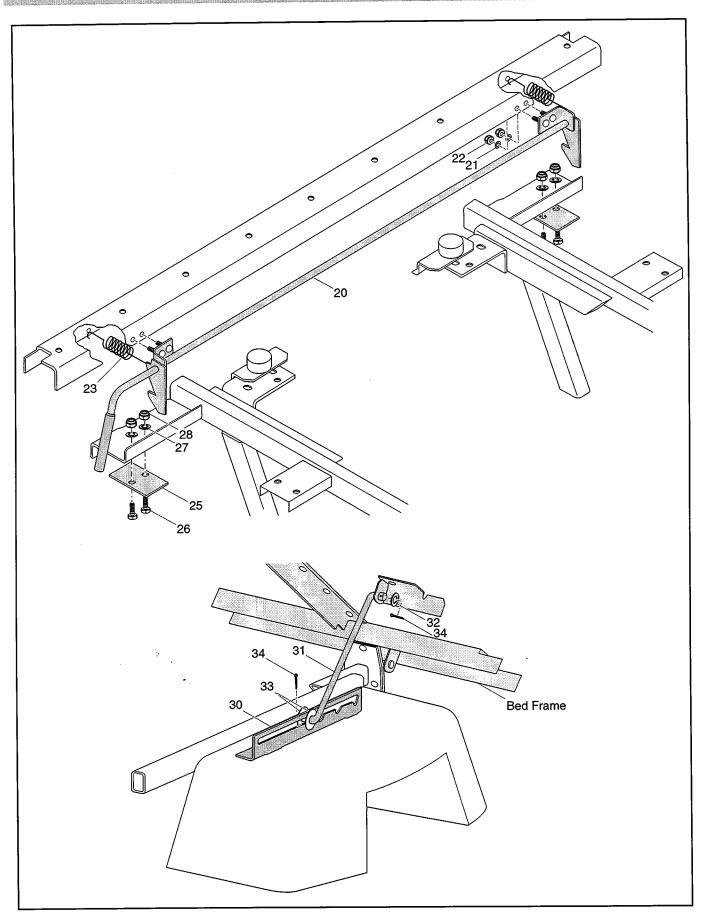

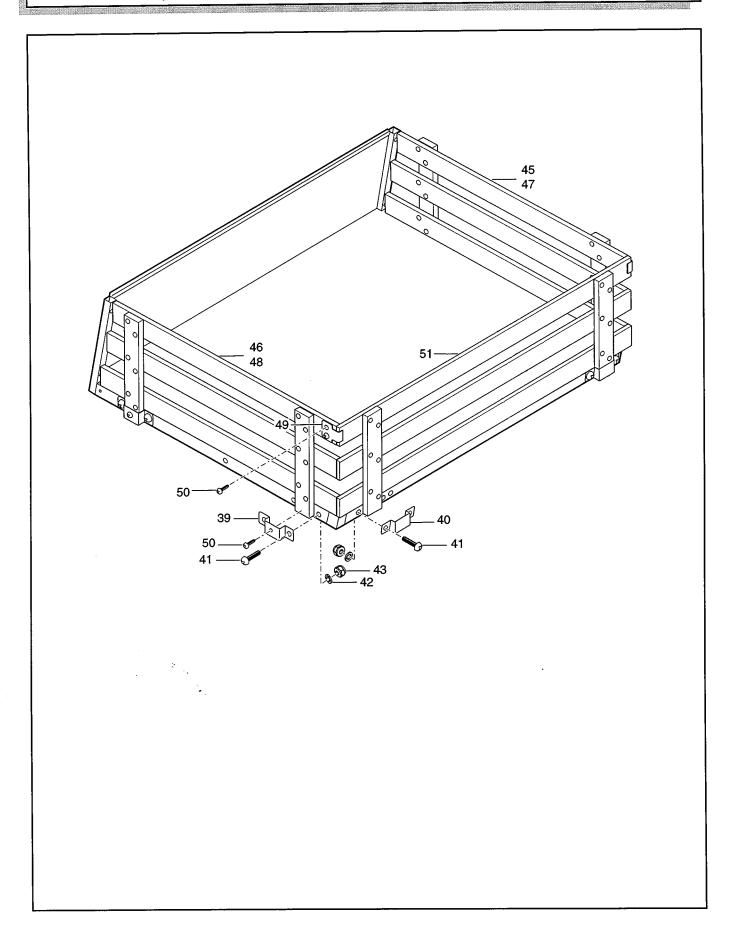


When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	71719-G01	BED (40")	. 1
2	71719-G02	BED (48")	. 1
3			
4	71772-G01	CORNER TUBE	2
5	00762-G8	SCREW, 5/16 - 18 X ?? LG	
6	00559-G8	WASHER. 5/16"	
7	00550-G3	NUT, 5/16 - 18	. 4
8			
9	71718-G01	TUBE CAP	. 2
10	71717-G01	TUBE CAP	. 2
11			
12	70396-G01	BED PIVOT	. 2
13	00764-G2	CARRIAGE BOLT, , 5/16 X 1" LG	6
14	00559-G8	WASHER, 5/16"	
15	11098-G6	LOCK NUT, 5/16-18	6
16	70291-G01	FLANGED BUSHING	4
17	21682-G1	CLEVIS PIN	2
18	21683-G1	COTTER PIN	. 2
19			
20	71692-G01	BED LATCH	1
21	00559-G7	WASHER, 1/4"	4
22	14390-G4	- LOCK NUT, 1/4-20	4
23	71707-G01	EXTENSION SPRING	2
24			
25	71766-G01	CATCH BRACKET	. 2
26	00414-G6	BOLT, 1/4-20 X 3/4" LG	4
27	00559-G7	WASHER, 1/4"	
28	14390-G4	LOCK NUT, 1/4-20	4
29			
30	71673-G01	PROP BRACKET	. 1

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	71657-G01	PROP ROD	1
32	00560-G1	WASHER, 3/8"	1
33	15121-G1	WASHER, 3/8" (1 1/4" OD)	2
34	10387-G3	COTTER PIN, 3/32 X 3/4" LG	2
35			
36	71777-G01	WARNING DECAL	
37	71200-G01	LOAD WARNING LABEL	1
38			
39	74157-G01	SIDE RAIL SUPPORT	4
40	74161-G01	BACK RAIL SUPPORT	2
41	16705-G3	SCREW, 1/4-20 X 3/4" LG	12
42	00559-G7	WASHER, 1/4"	12
43	14390-G4	NUT, 1/4-20	12
44			
45	74167-G01	SIDE CARGO RACK (40") (PASSENGER SIDE)	1
46	74167-G02	SIDE CARGO RACK (40") (DRIVER SIDE)	1
47	74168-G01	SIDE CARGO RACK (48") (PASSENGER SIDE)	1
48	74168-G02	SIDE CARGO RACK (48") (DRIVER SIDE)	. 1
49	74079-G01	TAILGATE RETAINER BRACKET	. 2
50	00666-G6	SCREW, #10 X 3/4" LG	. 8
51	74162-G03	REAR CARGO RACK	. 1

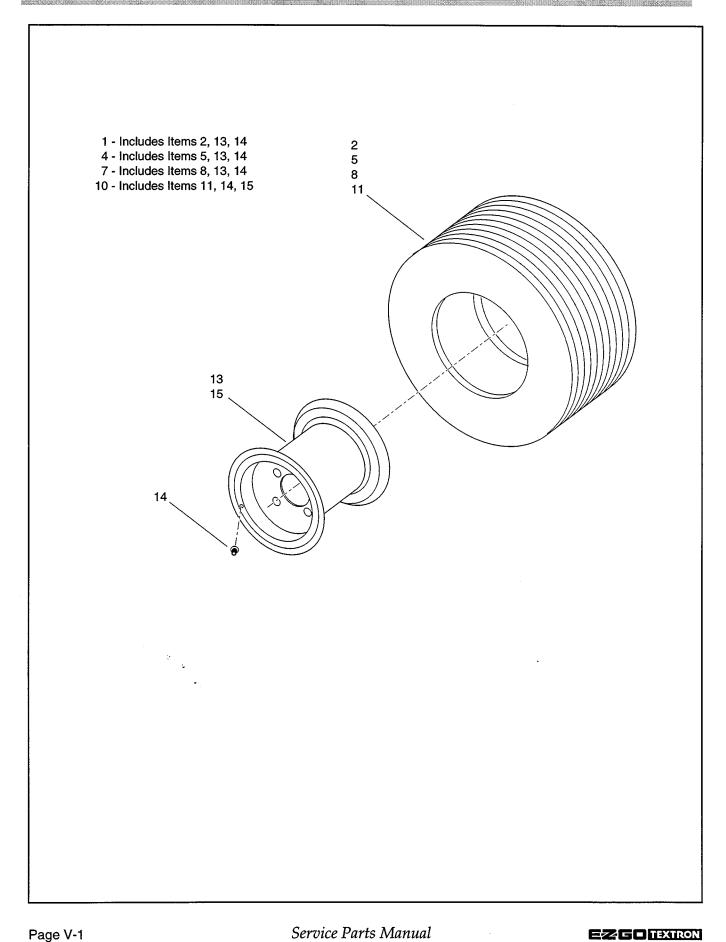

WHEELS ANDTIRES

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	27772-G03	18 X 8.5 - 8 CARLISLE TIRE AND WHEEL ASSEMBLY, TURF SAVER (INCLUDES ITEMS 2, 13, 14)	AR
2	27772-G07	18 X 8.5 - 8 CARLISLE TIRE, TURF SAVER	AR
3			-
4	27772-G01	18 X 8.5 - 8 CARLISLE TIRE AND WHEEL ASSEMBLY, LINKS (INCLUDES ITEMS 5, 13, 14)	AR
5	27772-G05	18 X 8.5 - 8 CARLISLE TIRE, LINKS	AR
6			
7	27775-G01	18.5 X 8.5 - 8 CARLISLE TIRE AND WHEEL ASSEMBLY, USA TRAIL (INCLUDES ITEMS 7, 13, 14)	AR
8	27775-G02	18.5 X 8.5 - 8 CARLISLE TIRE, USA TRAIL	AR
9			
10	27784-G01	5.70 - 8 CARLISLE TIRE AND WHEEL ASSEMBLY, USA TRAIL (INCLUDES ITEMS 11, 14, 15)	AR
11	27784-G03	5.70 - 8 CARLISLE TIRE, USA TRAIL	AR
12			
13	15169-G1	WHEEL RIM, 4 LUG, STANDARD	AR
14	11657-G1	VALVE STEM	AR
15	33678-G01	WHEEL RIM, 4 LUG	AR
1		·	
		•.	
l			
, ;			

SPECIAL TOOLS

SPECIAL TOOLS LISTING

SPECIAL TOOLS

Part No.

SPECIAL TOOLS

DRIVE CLUTCH PULLER	19779-G2
FLYWHEEL PULLER	
CAM PULLEY TOOL	27851-G01
CURRENT INDICATOR	
MULTI-METER, DIGITAL	2748 1-G 01
CRIMPING TOOL	27765-G01
SLIDE HAMMER (AXLE/HUB REMOVAL)	
SLIDE HAMMER (AXLE REMOVAL ONLY)	18753-G1
TACHOMETER	
FEELER GAUGE	
COMPRESSION TESTER	
ENGINE REBUILD MANUAL	
REAR AXLE REBUILD MANUAL	

PAINT


CONTACT SERVICE PARTS REPRESENTATIVE FOR COLOR SPECIFICATIONS AND PART NUMBERS


ACCESSORIES LIST

Installation Kit Illustration Number **ACCESSORIES LIST** REAR VIEW MIRROR KIT......75162 SPARK ARRESTOR KIT......25747-G0125750 RAMP KIT......28334-G01......28335 VAN BOX28361-G0128362 BED LINER KIT (40").......74035-G03......74204 BED LINER KIT (48")......74035-G04......74204 ELECTRIC DUMP KIT74164-G0274166 WINDSHIELD KIT (CLEAR, 2 BEND, REQUIRES SUN TOP KIT).......75041-G03......75043 WINDSHIELD KIT (TINTED, 2 BEND, REQUIRES SUN TOP KIT).......75041-G04......75043 WINDSHIELD KIT (CLEAR, 4 BEND, REQUIRES SUN TOP KIT)......... 75041-G05......75043 WINDSHIELD KIT (TINTED, 4 BEND, REQUIRES SUN TOP KIT)....... 75041-G06......75043 TURN SIGNAL KIT75107-G0275106 ASHTRAY KIT......75109-G02......75110 HOUR METER KIT75114-G0275119 BALL HITCH KIT......75326-G0275328 "C" HITCH KIT75327-G0275329 SUN TOP KIT.......75350-G0175351 WORK LIGHT WITH LIGHTS75354-G0175348 WORK LIGHT WITH STROBE75348 WORK LIGHT WITH LIGHTS AND STROBE......75354-G03......75348 3 SIDED SOFT ENCLOSURE......75367-G0175368 PLASTIC CAB WITH DOORS75380-G01 SIDE MIRROR KIT75400-G01 ROTATING BEACON LIGHT KIT75405-G01 CHROME HUB CAP 8".......28244 CHROME HUB CAP 6" 16042-G* 16042-G* GOLD SPOKE WHEEL COVERS......28244

ACCESSORIES ILLUSTRATED

Notes:		
votes.		-
	· · · · · · · · · · · · · · · · · · ·	
	-	
*	•	
•.		
	- Luden	
	1.00	
	787-74	

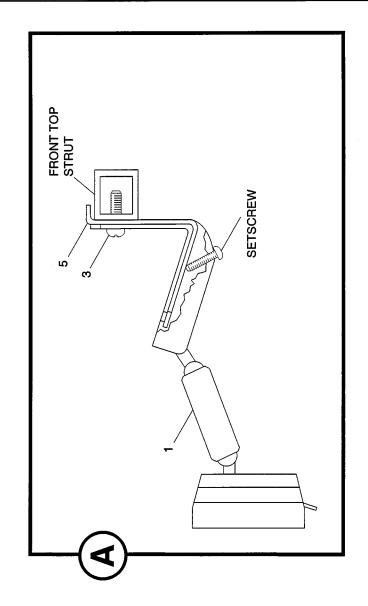

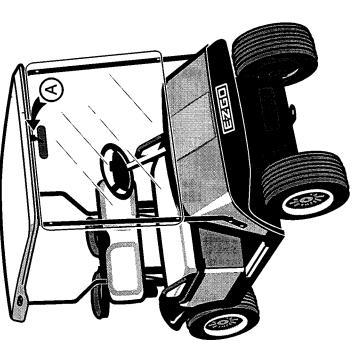

THE SYMBOL THE LETTER ENCLOSED WITHIN IT.

SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS.

RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING OF

E.Z.GO DIVISION

REPLACEMENT PARTS.

SNS		DRAWING
A TITLE BEAR VIEW MIRBOR INSTALLATION INSTRUCTION		REV BY
OR INSTA		CGT
MIRR		DRN BY
TITLE BEAR VIEW		
1 PEEEDS TO A NOTE CORRESPONDING TO		ICLOSED WITHIN IT.
7 DECEDO TO	ל חבר בחי	ACLOSED WITHIN IT.

DRAWING	NO. 75162
_	•
REV BY	16/94 REV DATE
ССТ	-
DRN BY	ORIG DATE 05

PG. 1 OF 2

REV

E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30903-0388, 1-800-241-5855

NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO. 19528-G2

READ ALL INSTRUCTIONS BEFORE PROCEEDING

- DISCARD PLASTIC MOUNTING BRACKETS AND ADHESIVE SUPPLIED WITH KIT. THESE ITEMS ARE USED IN OTHER APPLICATIONS.
- REMOVE THE FRONT TOP HARDWARE FROM THE FRONT TOP STRUT. IT IS NOT NECESSARY TO REMOVE TOP. તાં
- LOCATE AND DRILL A .147 DIA. HOLE (#26 DRILL) THROUGH CENTER OF FRONT TOP STRUT (INSIDE SURFACE ONLY). SEE DETAIL A. က
- USING SCREW, ITEM 3 FASTEN SUPPORT BRACKET, ITEM 5 TO FRONT TOP STRUT AS SHOWN IN DETAIL A.
- LOOSEN SETSCREW SUPPLIED WITH MIRROR.
- SLIDE MIRROR, ITEM 1 ONTO BRACKET AND TIGHTEN SETSCREW. DO NOT OVERTIGHTEN. DAMAGE TO MIRROR WILL OCCUR. . 9
- REINSTALL THE TOP ONTO THE FRONT TOP STRUT. TIGHTEN HARDWARE TO 3 5 FT. LBS. TORQUE.


			AP.			
DESCRIPTION	MIRROR, REAR VIEW		SCREW, STAINLESS STEEL, SELF TAP-	PING, #8 - 32 x 5/8 LG.		BRACKET, SUPPORT
ITEM QTY PART NO.	19496-G1		19527-G1			19502-G2
QTY	1		_			_
ITEM	-	7	က		4	2

THE SYMBOL REFERS TO A NOTE CORRESPONDING TO TITLE REAR VIEW MIRROR INSTALLATION INSTRUCTIONS	TITLE REAR VIEW	MIRROR INST	ALLATION INSTRUCTI	ONS	,
THE LETTER ENCLOSED WITHIN IT.	DRN BY	DRN BY CGT	REV BY	*	DRAWING
SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS.		ORIG DATE 05/16/94	REV DATE	<	MO. 751
REPLACEMENT PARTS.	E-Z-GO DIVISION OF TEXT	RON, INC., P.O. BOX	E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30903-0388, 1-800-241-5855	-800-	241-5855

TITLE REAR VIEW	MIRROF	INSTA	TITLE REAR VIEW MIRROR INSTALLATION INSTRUCTIONS	Š O	'	
EZZED TEXTRON	DRIN BY ORIG DATE	CGT 05/16/94	REV BY REV DATE	A	DRAWING NO. 75162	

PG. 2 OF 2

REV

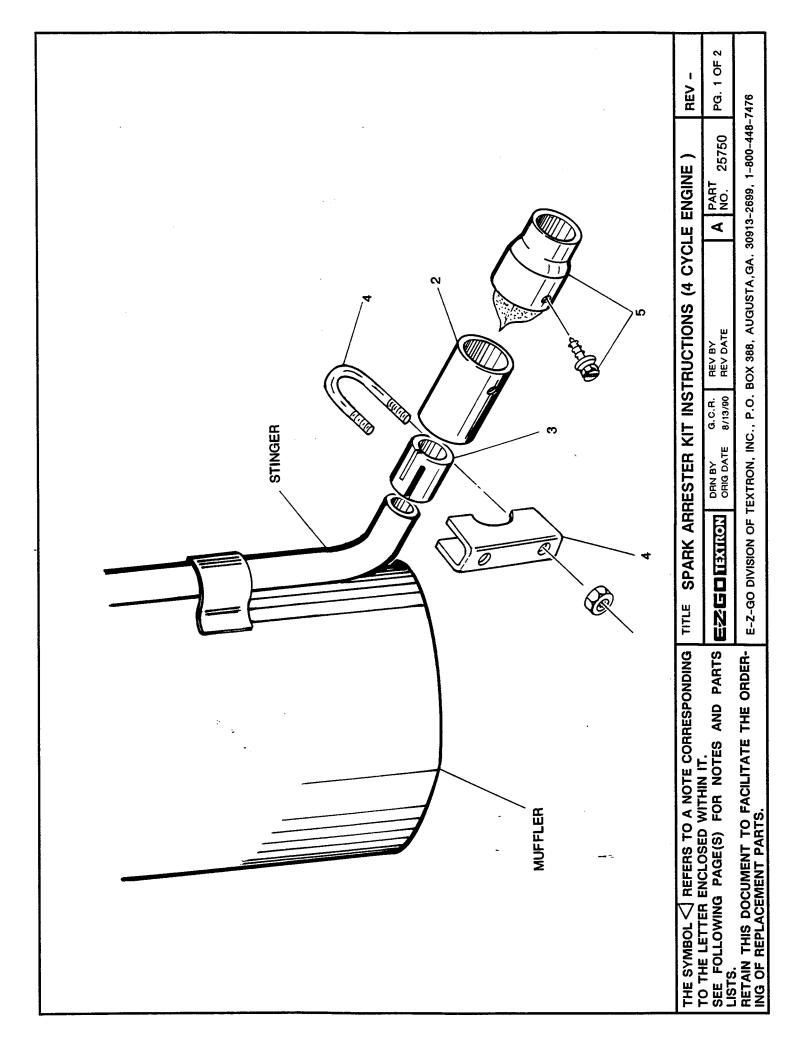

NOTES <<pre>| NOTES <</pre>|
BEFORE PROCEEDING READ AND UNDERSTAND ALL INSTRUCTIONS.
| TO RE-ORDER THIS ENTIRE FIELD KIT REQUEST PART # 25747-G01.

- A. SLIDE THE SLEEVE(3) OVER THE STINGER, THEN SLIDE ADAPTER TUBE (2) OVER SLEEVE (3). SECURE BOTH WITH THE CLAMP ITEM (4).
- B. SLIDE THE PROTRUDING SCREEN END OF THE SPARK ARRESTER (5) IN TO THE END OF THE ADAPTER TUBE (2) AND ALIGN THE HOLE IN THE SPARK ARRESTER WITH THE 1/8" DIAMETER HOLE IN THE ADAPTER TUBE.
- C. SECURE THE SPARK ARRESTER TO THE TUBE WITH THE #8 X 1/4 LG. HEX HEAD SHEET METAL SCREW INCLUDED WITH THE SPARK ARRESTER.
- D. SPARK ARRESTER MAINTENANCE: REMOVE THE SPARK ARRESTER EVERY 50 HOURS OF ENGINE OPERATION AND CLEAN THE THE SCREEN WITH A WIRE BRUSH.
- E. EXAMINE THE SCREEN AND WELDS FOR BREAKS. IF ANY BREAKS ARE APPARENT, THE SPARK ARRESTER MUST BE REPLACED.

ITEM	QTY.	ITEM QTY. PART NO.	DESCRIPTION
-	-	25747-G01	SPARK ARRESTER KIT
2	-	25746-G01	ADAPTER TUBE
က	-	25388-G1	SLEEVE
4	-	25405-G1	CLAMP TUBE
ഹ	-	25406-G1	SPARK ARRESTER


THE SYMBOL STEFERS TO A NOTE CORRESPONDING TO THE LETTER ENCLOSED WITHIN IT.


SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS.

RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING OF REPLACEMENT PARTS.

REV -	PG. 2 OF 2	
E ENGINE)	A PART 25750	
TITLE SPARK ARRESTER KIT INSTRUCTIONS (4 CYCLE ENGINE	G.C.R. REV BY 8/13/90 REV DATE	
KIT INS		
RRESTER	DRN BY ORIG DATE	
LE SPARK A	ZEO TEXTRON	
Ħ		

E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA, GA. 30913-2699, 1-800-448-7476

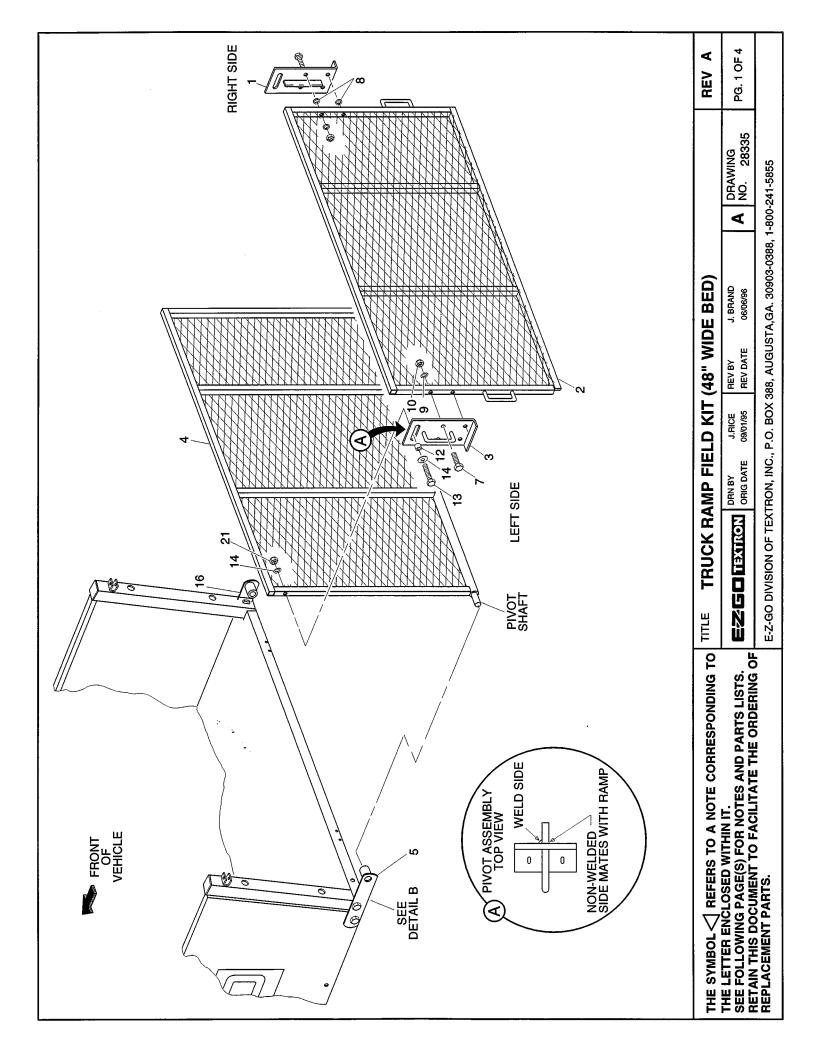

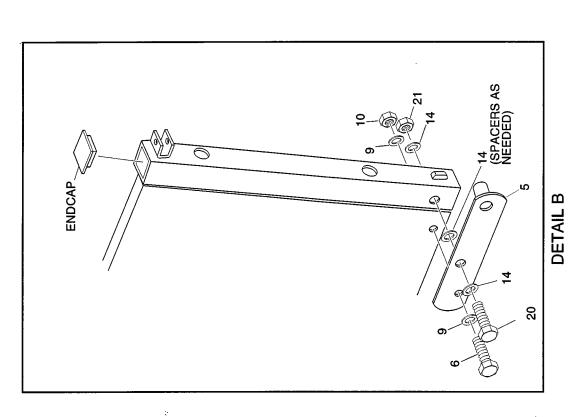

TRUCK RAMP FIELD KIT (48" WIDE BED) TITLE

PG. 2 OF 4

4 REV

THE SYMBOL (The LETTER ENCLOSED WITHIN IT.)
SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS.
RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING OF REPLACEMENT PARTS.

					,			
		DRN BY	J.RICE	REV BY	J. BRAND	<	DRAWING	
. "		ORIG DATE	09/01/95	REV DATE	96/90/90	<	NO. 28335	
5	E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388. AUGUSTA, GA, 30903-0388. 1-800-241-5855	TRON. INC	P.O. BOX 3	88. AUGUST	A.GA. 30903-0388. 1	-800-	241-5855	

NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO. 28334-G01

READ ALL INSTRUCTIONS BEFORE PROCEEDING

A. REMOVE EXISTING TAILGATE

- 1. Engage parking brake.
- 2. Remove tailgate, right and left hinges, and related hardware. Leave chains and hooks attached to truck bed.

Place passenger side support (item 16) onto right pivot shaft of the upper ramp and mount support to the right side of the truck bed using procedure in step 2 of

Ramp is held in upright (stored) position with tailgate hooks.

TRUCK BED ASSEMBLY.

1. Insert left pivot shaft of the upper ramp into the driver side support (item 5) as

shown in illustration on first page.

FINAL ASSEMBLY

ш

3. Retain all parts for possible future use.

B. TRUCKBED ASSEMBLY

- 1. Locate right and left corner posts on the truck bed. Remove lower outside bolts and rear lower panel truss head screw.
- 2. Attach driver's side ramp support (item 5) to the side of the truck bed securing and 21), secure bracket (item 5) to corner post. Extra spacers may be needed with hardware (items 6, 9 and 10). See Detail B. Using hardware (items 20, 14, between bracket and post to fill gap as shown in Detail B.
- 3. The mounting bracket for the opposite post will be added at final assembly.

C. LOWER RAMP ASSEMBLY

- 1. Place NON-WELDED side (see Detail A) of left pivot (item 3) flush against the side of the lower ramp (item 2). Align mounting holes and fasten securely with hardware (item 7, 9 and 10).
- 2. The right pivot (item 1) is to be mounted using the same procedure as the left pivot except a washer (item 8) must be added between the ramp and the pivot.

D. UPPER TO LOWER RAMP ASSEMBLY

- 1. Make certain the top surface (side with mesh) of each ramp is facing outwards.
- 2. Place one pivot spacer (item 12) inside each slot of pivot brackets and secure lower ramp to upper ramp with hardware (items 13, 14, and 21) as shown in illustration on first page.

THE SYMBOL TEFERS TO A NOTE CORRESPONDING TO TITLE THE LETTER ENCLOSED WITHIN IT.	TITLE TRUCK RAMP FIELD KIT (48" WIDE BED)	SAMP FIELI	D KIT ((48" WIDE	E BED)		BAWING
SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS. BETAIN THIS POSIMENT TO EACH ITATE THE OPPERING OF	EZG IIXIRON ORIG DATE		09/01/95	REV DATE		⋖	A NO. 28335
REPLACEMENT PARTS.	E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388. AUGUSTA, GA, 30903-0388, 1-800-241-5855	TRON. INC., P.	O. BOX 38	38. AUGUSTA	.GA. 30903-0388. 1	-800	41-5855


4


REV

PG. 3 OF 4


E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30903-0388, 1-800-241-5855


HARDWARE SHOWN ACTUAL SIZE

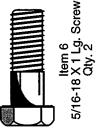

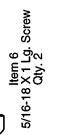



Item 8 5/16 Heavy Washer Qty. 4

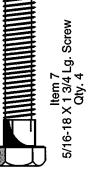

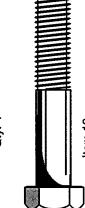

Item 9 5/16 Light Washer Qty. 8

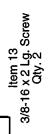

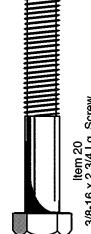

Item 10 5/16-18 Lock Nut Qty. 6

Item 20 3/8-16 x 2 3/4 Lg. Screw Qty. 2



Item 12 Pivot Spacer Qty. 2



Item 21 3/8-16 Lock Nut Qty. 4

Item 14 3/8 Washer Qty. 10

ITEM	ΩTY	PART NO.	DESCRIPTION
-	-	20252-G1	PIVOT, PASSENGER SIDE
7	_	20257-G2	RAMP, LOWER
က	-	20252-G2	PIVOT, DRIVER'S SIDE
4	_	20264-G1	RAMP, UPPER
ß	-	28331-G02	SUPPORT, RAMP, DRIVER'S SIDE
9	2	00438-G8	BOLT, 5/16-18 X 1 LG.
7	4	00439-G6	BOLT, 5/16-18 X 1 3/4 LG.
∞	4	00569-G2	WASHER, 5/16, HEAVY
6	æ	00559-G8	WASHER, 5/16, LIGHT
10	9	11098-G6	NUT, LOCK, 5/16-18
=			
12	8	20275-G1	SPACER, PIVOT
13	2	00427-G8	BOLT 3/8-16 X 2 LG.
4	10	00562-G1	WASHER, 3/8
15			
16	-	28331-G01	SUPPORT, RAMP, PASSENGER SIDE

DESCRIPTION	PIVOT, PASSENGER SIDE	RAMP, LOWER	PIVOT, DRIVER'S SIDE	RAMP, UPPER	SUPPORT, RAMP, DRIVER'S SIDE	BOLT, 5/16-18 X 1 LG.	BOLT, 5/16-18 X 1 3/4 LG.	WASHER, 5/16, HEAVY	WASHER, 5/16, LIGHT	NUT, LOCK, 5/16-18		SPACER, PIVOT	BOLT 3/8-16 X 2 LG.	WASHER, 3/8		SUPPORT, RAMP, PASSENGER SIDE				BOLT, 3/8-16 X 2 3/4 LG.	NUT, LOCK, 3/8-16	
PART NO.	20252-G1	20257-G2	20252-G2	20264-G1	28331-G02	00438-G8	00439-G6	00569-G2	00559-G8	11098-G6		20275-G1	00427-G8	00562-G1		28331-G01				00428-G6	11098-G5	
αту		_	-	_	-	2	4	4	80	9		7	2	10		-	-		•	7	4	
ITEM	-	7	က	4	2	9	7	8	6	10	=	12	13	4	15	16	17	8	19	20	21	

REFERS TO A NOTE CORRESPONDING TO TITLE THE LETTER ENČLOSED WITHIN IT. SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS. RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING OF REPLACEMENT PARTS. THE SYMBOL

5	TO TITLE TRUCK RAMP FIELD KIT (48" WIDE BED)	AMP FIE	LD KIT	(48" WID	E BED)			REV
·	EZZGO TEXTRON	DRN BY ORIG DATE	J.RICE 09/01/95	REV BY REV DATE	J. BRAND 06/06/96	٧	A DRAWING NO. 28335	PG. 4 OI

4

PG. 4 OF 4

E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30903-0388, 1-800-241-5855

NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO. 28361-G01

READ ALL INSTRUCTIONS BEFORE PROCEEDING.

TOOL LIST	QTY. REQUIRED	TOOL LIST	QTY. REQUIRED
Drill	1	Wrench, 7/16"	1
Drill bit, 3/8"	1	Wrench, 9/16"	1
Phillips screwdriver	1	Wrench, 3/8"	1
Flat screwdriver	1	Utility knife or snips	1
Tape measure	1	Framing Square	1

MOTE

Before beginning, read and understand all instructions. Check carton contents against enclosed packing list. During assembly, leave all bolts loose for later adjustment.


A small container of touch up primer (zinc clad) has been supplied with the van box hardware. Included to help prevent premature rusting of unprotected drilled holes, it should be used to coat or swab the interior of all drilled holes on both the vehicle and van box. Also, any scratches, nicks, etc. made during installation should be touched up thoroughly.

CAUTION

DUE TO THE SIZE AND WEIGHT OF PANELS, RACKS AND TAILGATE TO BE REMOVED, AND THE SIZE AND WEIGHT OF PANELS COMPRISING THE VAN BOX, IT IS RECOMMENDED THAT A HELPER BE USED TO STEADY THE PANELS DURING DISASSEMBLY AND ASSEMBLY TO PREVENT PERSONAL INJURY FROM FALLING PANELS.

A. Prepare bed for van box (See Fig. 1)

1. Remove all components from load bed until the configuration in Fig. 1 is achieved.

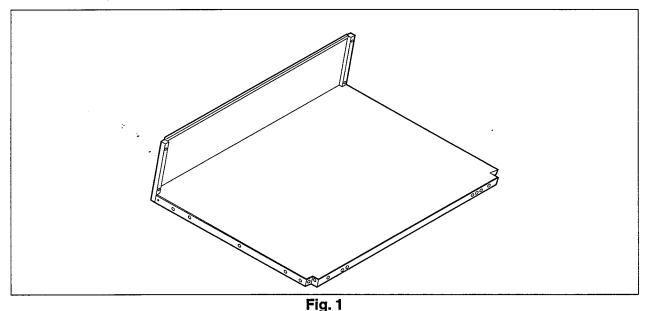

TITLE VAN BOX INST	ALLATIO	N INSTRU	JCTIONS			REV -
=>≥ TEXTRON	DRN BY ORIG DATE	J.RICE 03/20/96	REV BY REV DATE	DRAWING NO.	28362	PG. 1 OF 7

B. Assemble Van Box on Flat Bed (See Fig. 2, Fig. 3, Fig. 4 & Fig. 5)

- 1. Measure, cut, and install floor seal gasket to bottom flange to each side panel.
- 2. Place side panel on side of bed (flanges facing inward), aligning holes in panel with holes in bed. Loosely attach side panel to bed with hex bolts, washers and nuts. Repeat with panel on other side of bed.

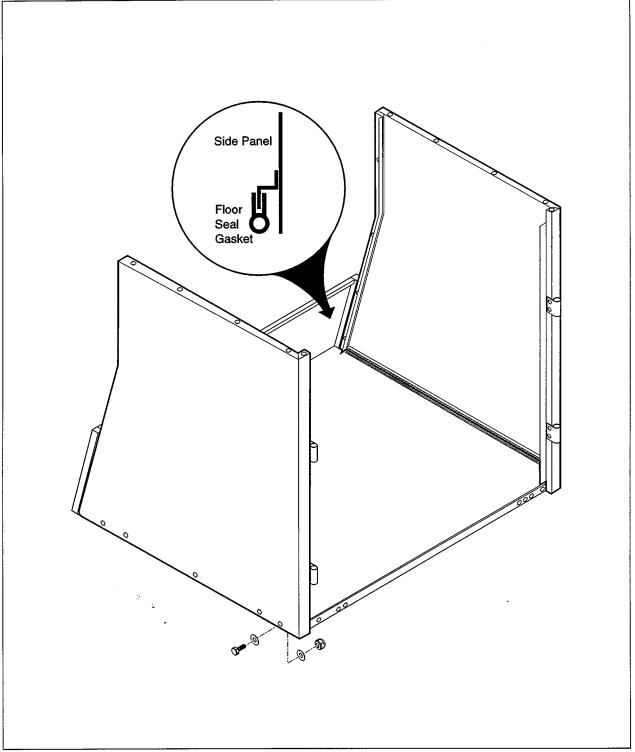


Fig. 2

TITLE VAN BOX INST	ALLATION INSTRU	JCTIONS		REV -					
EZG TEXTRON	DRN BY J.RICE ORIG DATE 03/20/96	REV BY REV DATE	DRAWING 28362	PG. 2 OF 7					
E-Z-GO DIVIS	E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30903-0388, 1-800-448-7476								

- 3. Measure, cut and install floor seal gasket to bottom flange of front panel.
- 4. Place front panel on bed between side panels. Insert flanged bolt from side panel through hole in front panel. Loosely attach front panel to side panel with washer and lock nut. Repeat for each hole on both side panels.

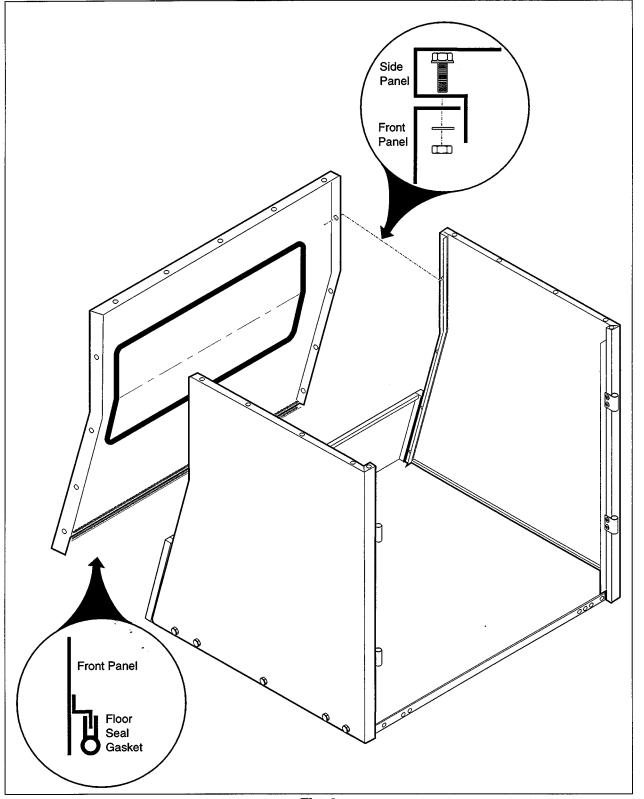


Fig. 3

ı	TITLE VAN BOX INSTA	ALLATION INSTRU	ICTIONS			REV -
	EZE TEXTRON	DRN BY J.RICE ORIG DATE 03/20/96	REV BY REV DATE	DRAWING NO.	28362	PG. 3 OF 7
I	F-7-GO DIVISI	ON OF TEXTRON, INC., P.O.	BOX 388, AUGUSTA GA, 30903	-0388 1-800-448-	7476	

- 5. Place top on assembled panels. Insert flanged bolt from top through hole in lower panel. Loosely attach top to panels with washer and lock nut. Repeat for each hole in front panel and both side panels.
- 6. Measure, cut and install rubber door trim, starting at lower left corner and work up the left side panel, across the roof, and down the right side panel.


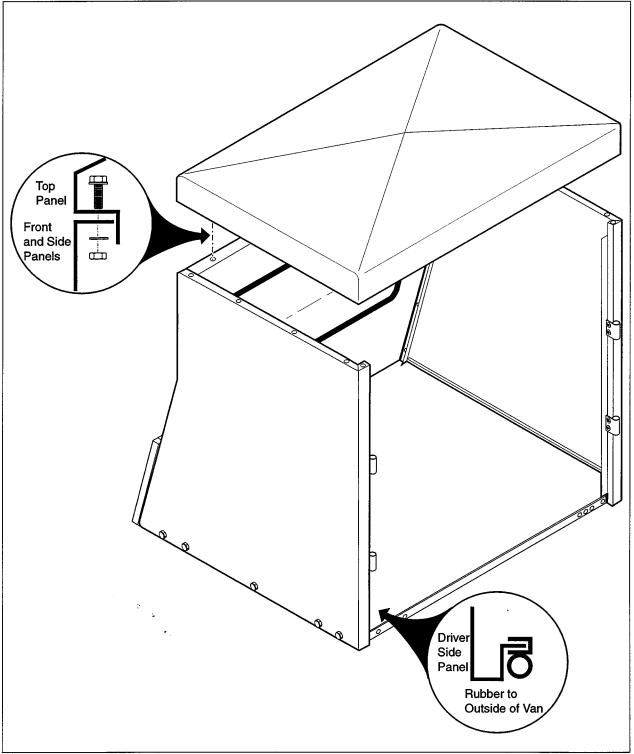


Fig. 4

TITLE VAN BOX INST	ALLATION INSTR	UCTIONS			REV -			
EZE TEXTRON	DRN BY J.RICE ORIG DATE 03/20/96	REV BY REV DATE	DRAWING NO.	28362	PG. 4 OF 7			
E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30903-0388, 1-800-448-7476								

- 7. Attach rear door to rear of van box by aligning door hinge pin with hinge on rear of side panel and sliding door hinge pin into rear hinge. Repeat on other rear door.
- 8. Adjust door vertical position by loosening lock nuts on hinge and moving hinge up or down as necessary. (Hinges may be moved up to 1/2".) Tighten nuts when doors are correctly positioned.
- 9. With doors adjusted and closed, adjust side panels to achieve a uniform gap across the top of the doors and tighten the hardware attaching front panel, sides and top.
- 10. Measure, cut and install door seal gasket on vertical edge of passenger side door and along lower edge of each door.

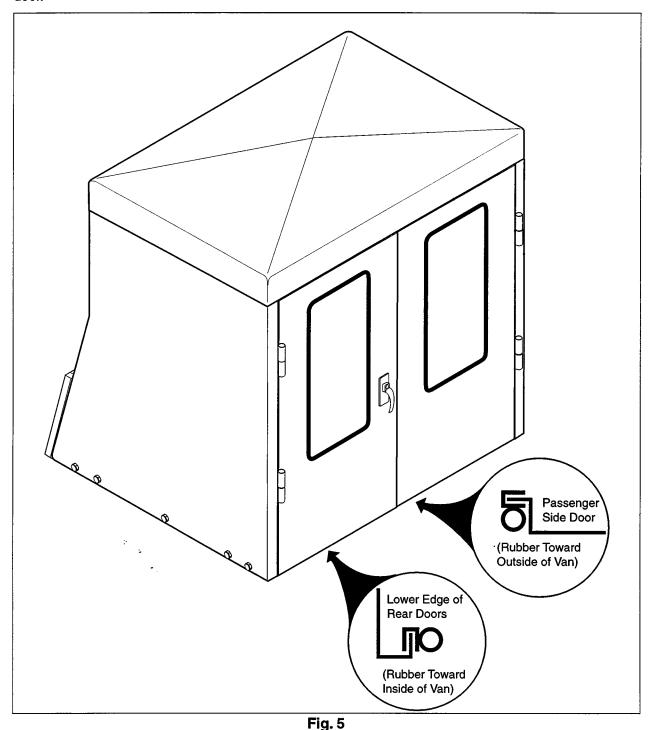

TITLE VAN BOX INSTALLATION INSTRUCTIONS

REV
DRN BY ORIG DATE 09/20/96 REV DATE

DRAWING NO. 28362 PG. 5 OF 7

E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA, GA. 30903-0388, 1-800-448-7476

- 11. **Install door handle.** Place handle on outside of driver side door and insert handle shaft through hole. Place locking ring over shaft and pin ring to shaft. Place bracket over handle shaft, as shown. Insert #10-32 X 3/4" screw through handle, door and bracket and secure with #10-32 lock nuts.
- 12. Install door lock rod assembly. Position the assembly so that the shorter of the two rods is hanging toward the floor. Insert each rod through the plastic guide at the top and bottom of the door. With the door handle in the position shown (locked), and rods fully extended, place rod assembly center section on handle shaft. Test operation of handle and rod assembly to ensure rods are retracted when the handle is turned to the horizontal position (open), and extended then the handle is in the vertical position (locked). Move center section in or out on shaft to ensure smooth, straight up and down movement of rods through the guides. Using a flat-tip screwdriver, tighten set screw in center section to secure lock rod assembly to handle shaft.
- 13. With doors closed and pushed inward to close tightly, mark the bed floor where lower lock rod contacts floor. Drill 3/8" hole in floor for rod to pass through and secure the doors.

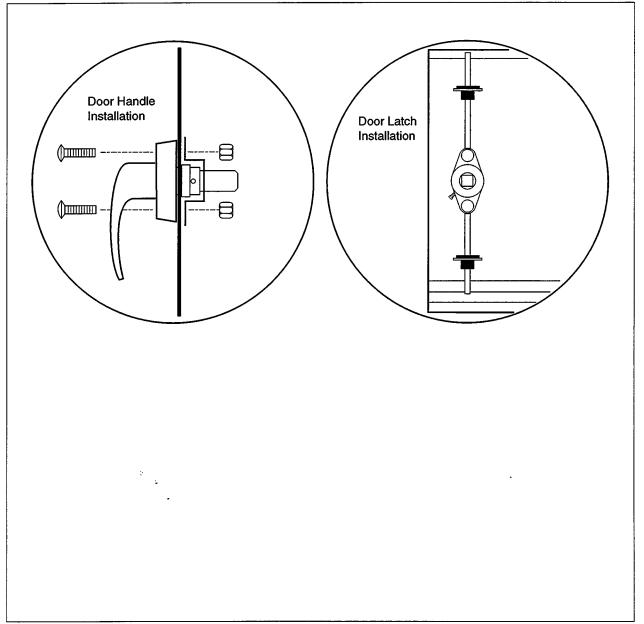


Fig. 6

TITLE VAN BOX INST	ALLATION INSTRU	ICTIONS		REV -
EZG TEXTRON	DRN BY J.RICE ORIG DATE 03/20/96	REV BY REV DATE	DRAWING 28362	PG. 6 OF 7
E-Z-GO DIVIS	ION OF TEXTRON, INC., P.C	D. BOX 388, AUGUSTA,GA	A. 30903-0388, 1-800-448-7476	

C. Replacement parts

- 1. Replacement parts for the van box may be obtained from Curtis Tractor Cab Inc., 111 Higgins St., Worchester, MA 01606. Telephone (508) 853-2200, or FAX (800) 876-9104.
- 2. The following parts are available for repair/replacement:

P/N DESCRIPTION 28361G01A......Rear Door, Driver Side 28361G01B......Rear Door, Passenger Side 28361G01C.....Side Panel, Driver Side 28361G01D.....Side Panel, Passenger Side 28361G01E......Roof 28361G01F Front Panel 1P002AReplacement Rear Door Window (Acrylic) (2) 1P002B Mounting Gasket for Rear Door Window (2) 1P002C Replacement Front Panel Window (Acrylic) 1P002D Mounting Gasket for Front Panel Window 1P002E Door Seal Gasket (196") 1P002F Floor Seal Gasket (123") 9DHOS1......Door Handle Kit (Key Locking) 9P001A Replacement Door Hinge Kit (with Hardware) (4) 9P001C Plastic Rod Guides (2) 9P001DLatch Rod Swivel Cam (with Set Screw) 6B01A 1/4-20 X 7/8" Long Hex Bolt (10) 6B01B1/4-20 Nylon Lock Nut (10) 6B01C 1/4" Washer (20)

6E01A3/8-16 X 7/8" Long Flanged Hex Bolt (23)

6E01B3/8" Washer (23)

TITLE VAN BOX INSTALLATION INSTRUCTIONS						
EZG TEXTRON	DRN BY J.RICE ORIG DATE 03/20/96	REV BY REV DATE	DRAWING NO.	28362	PG. 7 OF 7	

E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA, GA. 30903-0388, 1-800-448-7476

READ ALL INSTRUCTIONS BEFORE PROCEEDING.


TOOL LIST

QTY. REQUIRED

Plastic faced hammer......1

INSTALLING BED LINER

- 1. Adhesive will not adhere to dusty or greasy surfaces. Clean with a 50-50 mixture of rubbing alcohol and water. Allow to dry.
- 2. Cut tape (Item 4) into 12 pieces, each 6 inches long. Apply seven of these pieces to tailgate liner surface (Item 3) as shown, pressing down firmly to assure a good seal.
- 3. Remove protective paper from tape(Item 4), align holes in tailgate and install fasteners (Item 5).
- 4. Position three pieces of tape(Item 4) under bedliner (Item 1, 2) as shown, and two pieces on the headboard tube, then install the bed, using a soft-faced hammer to tap the edges as required for a good fit.
- 5. Press firmly on bottom of bedliner and front lip (Item 1, 2) to assure a good seal.

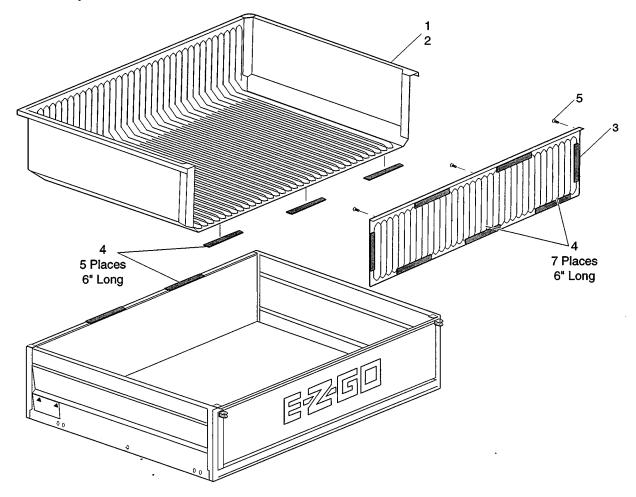

KIT CONTENTS

ITEM	QTY	PAF	RT NO.	DESCRIPT	ION			
1	1	7403	35-G01	BEDLINER	, 40 "			
2	1	7403	35-G02	BEDLINER	, 48"			
3	1	7403	36-G01	TAILGATE I	LINER			
4	2 YDS	7403	34-G02	TAPE				
5	3	7115	55-G01	RATCHET	FASTENER			
TITLE BED	TLE BED LINER INSTALLATION INSTRUCTIONS 40" & 48"							
E Z G0	TEXTRON	DRN BY ORIG DATE	J.BRAND 03/11/96	REV BY REV DATE	Α	DRAWING 74204 NO.	PG. 1 OF 1	

E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30903-0388, 1-800-448-7476

NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO. 74164-G02

READ ALL INSTRUCTIONS BEFORE PROCEEDING.

TOOL LIST	QTY. REQUIRED	TOOL LIST	QTY. REQUIRED
Flat Screwdriver	1	Phillips Screwdriver	1
Wrench, 7/16"	1	Open End Wrench, Insulate	ed, 1/2"1
Wrench, 3/8"	1	Wrench, 1/4"	1
1	1	Shop Rag	1
Needle Nose Pliers	1		



BEFORE INSTALLING THE ELECTRIC DUMP KIT, THE FOLLOWING STEPS MUST BE

- 1. Place vehicle on level floor and engage the parking brake.
- 2. Raise and secure seat.
- 3. Using an insulated wrench, disconnect the battery ground cable and cover negative battery terminal (-) with a shop rag. (See Fig. 1)



TO PREVENT PERSONAL INJURY, USE AN INSULATED WRENCH TO DISCONNECT AND RECONNECT THE BATTERY GROUND CABLE.

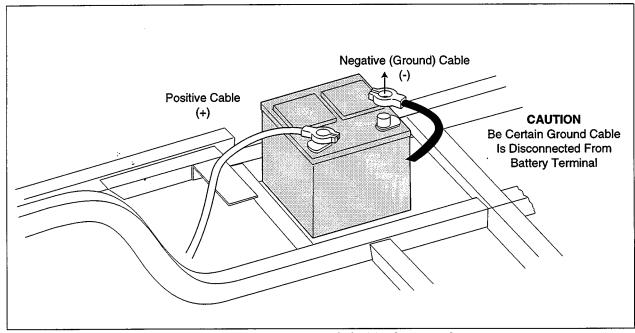


Fig. 1 Negative (Ground) Cable Connection

ELECTRIC DUMP INSTALLATION INSTRUCTIONS								
EZG TEXTRON	DRN BY ORIG DATE	J.RICE 12/15/95	REV BY REV DATE	DRAWING NO.	74166	PG. 1 OF 6		

E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30903-0388, 1-800-448-7476

4. Raise and support truck bed.

A WARNING **A**

TO PREVENT PERSONAL INJURY, ENSURE BED IS PROPERLY SUPPORTED IN RAISED POSITION BEFORE CONTINUING WITH THE FOLLOWING PROCEDURES.

5. Remove and discard the latch assembly from the front of the dump bed. (See Fig. 2)

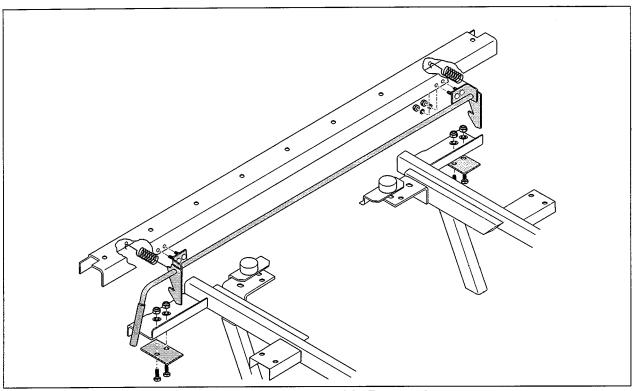


Fig. 2 Latch Assembly Removal

6. Remove and discard the bed prop assembly from the driver side rear fender. (See Fig. 3)

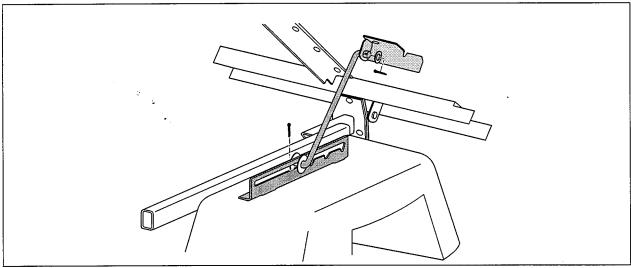


Fig. 3 Prop Assembly Removal

TITLE ELECTRIC DUM	IP INSTALLATION	INSTRUCTIONS			REV -
EZG■ TEXTRON	DRN BY J.RICE ORIG DATE 12/15/95	REV BY REV DATE	DRAWING NO.	74166	PG. 2 OF 6
E-Z-GO DIVIS	ION OF TEXTRON, INC., P.O	D. BOX 388, AUGUSTA,G.	A. 30903-0388, 1-800-44	8-7476	

A. TOGGLE SWITCH MOUNTING (See Fig. 4)

- 1. Attach circuit breaker (Item 2) to mounting bracket (Item 1) using screw (Item 3), lock washer (Item 4) and nut (Item 5).
- 2. Remove outer nut from toggle switch (Item 6) and insert the toggle lever through circuit breaker mounting bracket and into the seat wrap hole as illustrated in Fig. 4.
- 3. Place the toggle switch guard (Item 7) over the toggle switch lever and attach with outer nut. (Do not tighten)
- 4. Secure the toggle switch guard and circuit breaker mounting bracket to seat wrap with rivets (Item 8).
- 5. Adjust the toggle switch nut behind the bracket to position the tip of the toggle switch lever a distance of 1/16" or less beyond the toggle switch guard and tighten nut securely.
- 6. Attach red wire (Item 9) to circuit breaker and toggle switch as shown in Fig. 4.

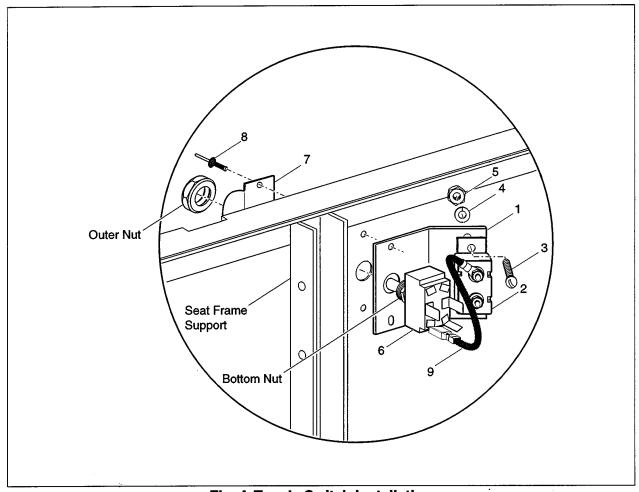


Fig. 4 Toggle Switch Installation

B. CONTROL HARNESS ROUTING (See Fig. 5)

- Route the control harness (Item 10), beginning at the toggle switch, down the seat frame support on the driver side of the vehicle as illustrated in Fig. 5. Leave enough slack in the control harness for connecting terminals to toggle switch.
- 2. Secure the control harness to the seat frame support with a nylon clamp (Item 11) as shown in Fig. 5.
- 3. Route the control harness toward the rear of the truck, on the inside of the frame rail, to the rear cross member as shown.
- 4. Secure the control harness to the frame using nylon clamps in the locations shown in Fig. 5

TITLE ELECTRIC DUI	ELECTRIC DUMP INSTALLATION INSTRUCTIONS								
=≠≥⟨□ TEXTRON	DRN BY J.RICE ORIG DATE 12/15/95	REV BY REV DATE	DRAWING NO.	74166	PG. 3 OF 6				
E-Z-GO DIVIS	E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30903-0388, 1-800-448-7476								

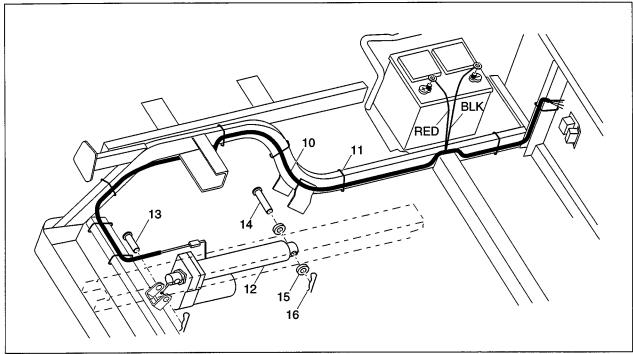


Fig. 5 Control Harness Routing

C. WIRING THE TOGGLE SWITCH (See Fig. 6)

- 1. Connect the white wire from the actuator to the toggle switch as shown.
- 2. Connect the red wire from the actuator to the toggle switch.
- 3. Connect the black (ground) wire from the battery to the toggle switch.
- 4. Connect the red wire from the battery to the circuit breaker as shown.

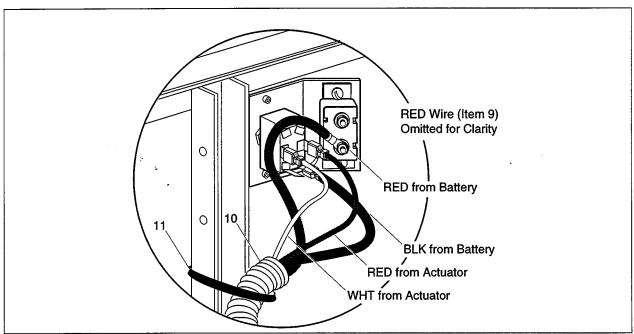


Fig. 6 Toggle Switch Wiring

TITLE ELECTRIC DUM	MP INSTALLATION	INSTRUCTIONS			REV -				
EZG TEXTRON	DRN BY J.RICE ORIG DATE 12/15/95	REV BY REV DATE	DRAWING NO.	74166	PG. 4 OF 6				
E-Z-GO DIVIS	E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA.GA, 30903-0388, 1-800-448-7476								

INSTALLING THE ELECTRIC ACTUATOR D.

- Place the electric actuator, item 1 into the cylinder mount oriented as shown, and insert clevis pin (Item 13) 1. through the cylinder mount and electric actuator. Secure with spring pin (Item 16).
- Connect the control harness to the electric actuator. 2.
- Using an insulated wrench, reconnect battery ground cable. (See Fig. 1) 3.
- Extend actuator to full length by operating toggle switch lever. 4.
- Locate the appropriate holes in the center support angle of the truckbed frame. 5.
- Place one spacer (Item 15) on each side of electric actuator and insert 3" clevis pin (Item 14) through the center 6. supports of the truckbed frame, the spacers and the electric actuator. (See Fig. 7)
- Secure clevis pin with spring pin (Item 16). 7.

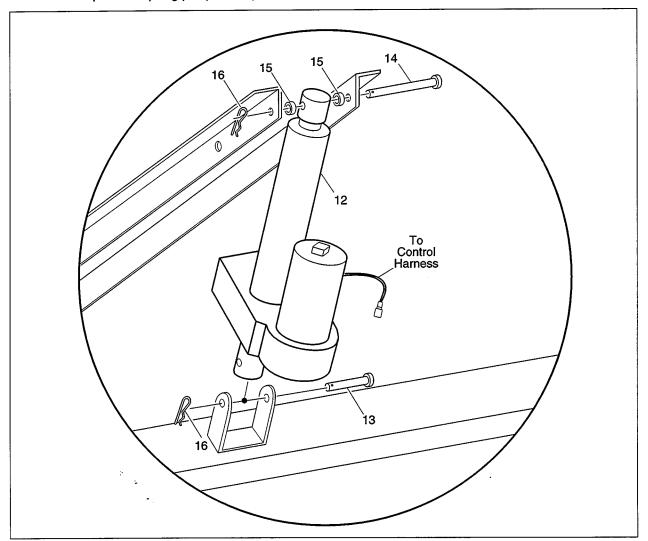


Fig. 7 Electric Actuator Installation

TITLE ELECTRIC DUMP INSTALLATION INSTRUCTIONS								
EZE TEXTRON	DRN BY ORIG DATE	J.RICE 12/15/95	REV BY REV DATE	DRAWING NO.	74166	PG. 5 OF 6		
E-Z-CO DIVISION OF TEXTRON INC. P.O. BOX 388, AUGUSTA GA. 30903-0388, 1-800-448-7476								

KIT CONTENTS

ITEM	QTY	PART NO.	DESCRIPTION
1	1	74165-G01	CIRCUIT BREAKER MOUNTING BRACKET
2	1	21320-G3	CIRCUIT BREAKER
3	2	00150-G4	SCREW, #10-24 X 1/2" LG.
4	2	00565-G5	LOCK WASHER, #10
5	2	00526-G3	NUT, #10-24
6	1	27680-G01	TOGGLE SWITCH
7	1	27447-G01	TOGGLE SWITCH GUARD
8	2	10570-G9	RIVET, 5/32" X 9/16" LG.
9	1	25976-G14	RED WIRE
10	1	74163-G01	CONTROL HARNESS
11	8	17618-G1	NYLON CLAMP
12	1	27612-G02	ELECTRIC ACTUATOR
13	1	14443-G11	CLEVIS PIN, 1/2" X 1 7/8" LG.
14	1	14443-G10	CLEVIS PIN, 1/2" X 3" LG.
15	2	27613-G01	SPACER
16	2	25233-G1	SPRING PIN

TITLE ELECTRIC DU	JMP INSTALLATION	INSTRUCTIONS			REV -
EZ G TEXTRON	DRN BY J.RICE ORIG DATE 12/15/95	REV BY REV DATE	DRAWING NO.	74166	PG. 6 OF 6
			- 		

NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO. 75041-G0*


* CONTACT SERVICE PARTS FOR AVAILABILITY.


READ ALL INSTRUCTIONS BEFORE PROCEEDING.


- 1. INSERT THE RUBBER GROMMETS, ITEM 3 INTO THE TOP AND BOTTOM HOLES ON BOTH SIDES OF THE WINDSHIELD, ITEMS 1, 2, 9, OR 10.
- INSERT THE SPACERS, ITEM 4 INTO THE RUBBER GROMMETS.

તાં

- INSERT THE PLUG BUMPERS, ITEM 5 INTO THE CENTER HOLES OF THE WINDSHIELD, ITEMS 1, 2 OR THE TOP OF WINDSHIELD, ITEMS 9 OR 10. က်
- PLACE THE WINDSHIELD AGAINST THE FRONT STRUT WITH THE SMALL TAPERED END AT THE TOP. 4.
- INSERT THE BOLTS, ITEM 6 THRU WINDSHIELD AND THE FRONT STRUT AND SECURE WITH WASHERS, ITEM 7 AND LOCK NUTS, ITEM 8. Ċ.

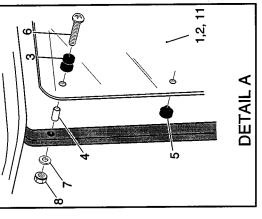

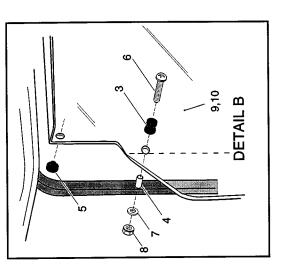

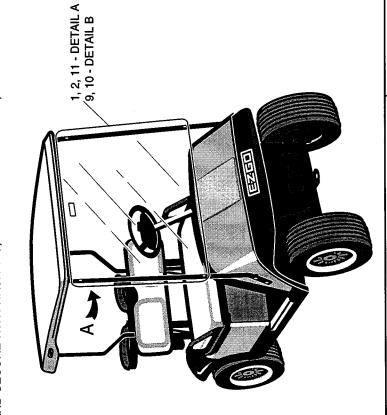

ITEM	αту	PART NO.	DESCRIPTION
-	-	75021-G01	WINDSHIELD, CLEAR, 2 BEND
7	-	75021-G02	WINDSHIELD, TINTED, 2 BEND
က	4	72147-G01	GROMMET, RUBBER
4	4	23726-G7	SPACER
S	8	75124-G01	BUMPER, PLUG
9	4	16705-G6	SCREW, 1/4-20 X 1 3/4 LG.
7	4	00660-G7	WASHER, 1/4"
ω	4	00891-G2	NUT, LOCK, 1/4-20
6	-	75203-G01	WINDSHIELD, CLEAR, 4 BEND
9	-	75203-G02	WINDSHIELD, TINTED, 4 BEND
F	-	75021-G03	WINDSHIELD, CLEAR, 2 BEND, OASIS

5	SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS. RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING OF REPLACEMENT PARTS.
OING	ISTS RING
NO	TS L 3DE
ESP	AR.
ORF	
ы П	ES A
ŽF.	Š
THE SYMBOL CREFERS TO A NO THE LETTER ENCLOSED WITHIN IT.	OB C
SS T	S) T T
HE SE	MEN TS.
띯	PAE PAE
Z N	SEE FOLLOWING PAGE(RETAIN THIS DOCUMEN REPLACEMENT PARTS.
MBC	얼굴은
S	PAN
THE SYMBOL A REFERS TO A NOTE CORRESPONDING TO THE LETTER ENCLOSED WITHIN IT.	SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS. RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING REPLACEMENT PARTS.


	A DRAWING NO. 75043	
	J.Brand 02/23/96	
NO	REV BY REV DATE	
ALLAT	L WEBB 12/17/93	
LSNI QT	DRN BY ORIG DATE	
WINDSHIELD INSTALLATION	ZE IEXTRON	
TITLE	EZC	

PG. 1 OF 2


REV D

E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30913-2699, 1-800-241-5855


NOTE: ALL HARDWARE SHOWN ACTUAL SIZE

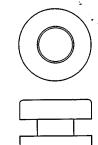

ITEM 3 RUBBER GROMMET QTY. 4

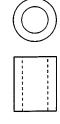


ITEM 4 SPACER QTY. 4

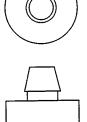

ITEM 5 PLUG BUMPER QTY. 2



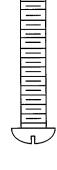

ITEM 6 1/4-20 X 1 3/4" SCREW QTY. 4



ITEM 7 1/4" WASHER QTY. 4



ITEM 8 1/4-20 NUT, LOCK QTY. 4

	THE SYMBOL REFERS TO A NOTE CORRESPONDING TO TITLE	TITLE
	THE LETTER ENCLOSED WITHIN IT. SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS. BETAIN THIS DOCIMENT TO FACILITATE THE ORDERING OF	EZ
	REPLACEMENT PARTS.	E.7.0

·	EZE GIEXTRON	DRN BY ORIG DATE	L. WEBB 12/17/93	REV BY REV DATE	J. BRAND 02/23/96	4	DRAWING NO. 75043
<u></u>	E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30913-2699, 1-800-241-5855	TRON, INC., F	P.O. BOX 3	88, AUGUST	A,GA. 30913-2699, 1	-800-	241-5855

WINDSHIELD INSTALLATION

PG. 2 OF 2

REV D

NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO. 75107-G02

READ ALL INSTRUCTIONS BEFORE PROCEEDING.

TOOL LIST	QTY. REQUIRED	TOOL LIST	QTY. REQUIRED
1/2" Insulated Wrench	1	Straight Blade Screwdriver	1
Tape Measure	1	Electrical Tape	A/R

A. DISCONNECT BATTERY (See Fig. 1)

1. Using an insulated wrench, disconnect the battery Negative (-) terminal cable.

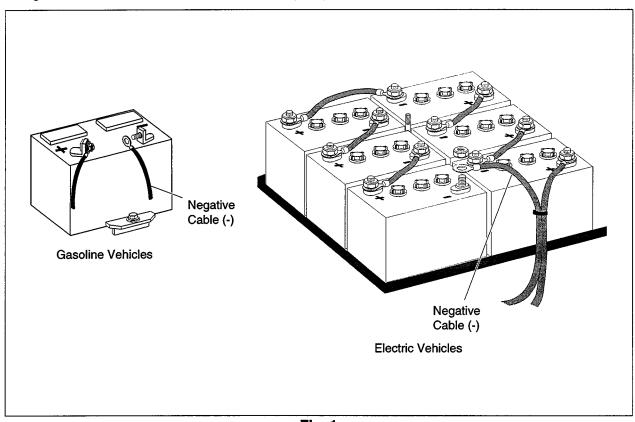


Fig. 1

B. TURN SIGNAL HARNESS CONNECTIONS (See Fig. 2)

- 1. Install turn signal flasher in flasher receptacle.
- 2. Cover lower end of switch harness with flex loom, placing upper end of flex loom at lower end of harness cover. Secure flex loom at each end with nylon clamp. Seal loom and harness joint with electrical tape.
- 3. Thread lower end of turn signal harness up through hole in lower dash to the left of the steering column.
- Connect switch harness to vehicle electrical harness. (Switch harness connector to electrical harness connector, WHITE wire from switch harness to BLACK wire from electrical harness, and BLACK wire from flasher to RED wire from electrical harness.)

TITLE TURN SIGNAL	NSTALL	ATION II	NSTRUCTIONS			REV -
EZG■ TEXTRON	DRN BY ORIG DATE	J.RICE 01/10/96	REV BY REV DATE	DRAWING NO.	75106	PG. 1 OF 4
						•

C. TURN SIGNAL SWITCH INSTALLATION (See Fig. 2)

- 1. Measure up 18 3/4" from the base of the steering column and wrap column with electrical tape sufficient to insulate switch clamp from steering column.
- 2. Place switch clamp around steering column, on electrical tape applied earlier, and attach turn signal switch to steering column. Do not tighten at this time.
- 3. Push harness back up through hole in lower dash until slack is removed from switch harness.
- 4. Attach steering column cover, adjusting switch as necessary to obtain a good fit with cover, and tighten clamp.
- 5. Remove the cover and secure the harness to the column with tape just below the switch. Replace cover.

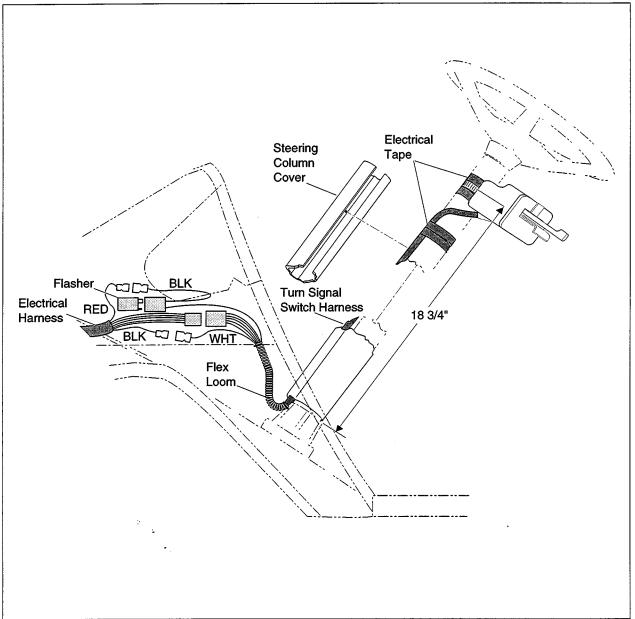


Fig. 2

TITLE TURN SIGNAL	INSTALLATION IN:	STRUCTIONS		REV -
E≠≥ □ TEXTRON	DRN BY J.RICE ORIG DATE 01/10/96	REV BY REV DATE	DRAWING NO. 75106	PG. 2 OF 4
F-7-GO DIVIS	SION OF TEXTRON INC. P.C.	BOX 388 AUGUSTA G	A 30903-0388 1-800-448-7476	

D. CONNECT TAIL LIGHTS (See Fig. 3)

- On driver side, remove RED tail light wire from BROWN wire in electrical harness and reconnect to WHITE wire provided in electrical harness.
- 2. On passenger side, remove RED tail light wire from BROWN wire in electrical harness and reconnect to YELLOW wire provided in electrical harness.

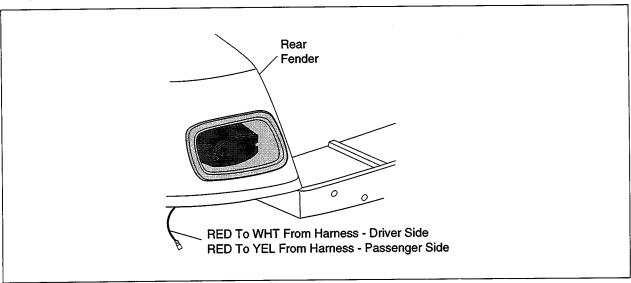


Fig. 3

NOTE: Each front turn signal and its adjacent marker light share the same connector. The turn signal lights are connected to electrical harness when marker lights are installed and connected. (See Fig. 3)

E. RECONNECT BATTERY (See Fig. 1)

1. Using an insulated wrench, reconnect the battery Negative (-) terminal cable.


F. TESTTURN SIGNAL

Check front and rear lights for operation of turn signal for left turn, right turn, and 4-way flasher.

KIT CONTENTS

ITEM	QTY	PART NO.	DESCRIPTION
1	1	17867-G1	TURN SIGNALSWITCH
2	1	20965-G3	STEERING COLUMN COVER
3	1	32307-G3	3/8" FLEX LOOM
4	2	17618-G1	NYLON CLAMP

TITLE TURN SIGNAL II	NSTALL	ATION IN	STRUCTIONS			REV -
EZG TEXTRON	DRN BY ORIG DATE	J.RICE 01/10/96	REV BY REV DATE	DRAWING NO.	75106	PG. 3 OF 4

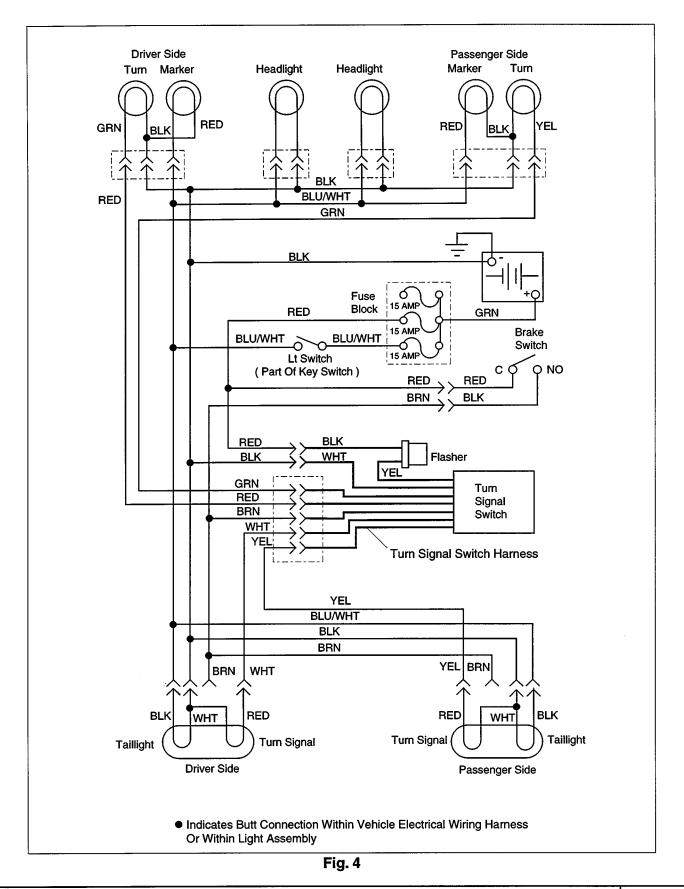


TITLE TURN SIGNAL	INSTALLATION INS	STRUCTIONS		REV
E ZE■ TEXTRON	DRN BY J.RICE ORIG DATE 01/10/96	REV BY REV DATE	DRAWING 75106	PG. 4 OF 4
E-Z-GO DIVIS	SION OF TEXTRON, INC., P.C). BOX 388, AUGUSTA,GA	A. 30903-0388, 1-800-448-7476	

NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO. 75109-G02

READ ALL INSTRUCTIONS BEFORE PROCEEDING.

- INSERT THE ASH TRAY, ITEM 1 INTO THE GASKET, ITEM 2 UNTIL THE GAS-KET HOOKS OVER THE FLANGES ON THE TOP AND BOTTOM OF THE ASH TRAY.
- 2. USING BRACKET, ITEM 3 AS A TEMPLATE, ÎNSERT THE (4) SELF DRILLING SCREWS, ITEM 4. LOCATE BRACKEŢ ÅPPROXIMATELY AS SHOWN IN ILLUSTRATION.
- 3. SNAP THE ASH TRAY INTO THE BRACKET.

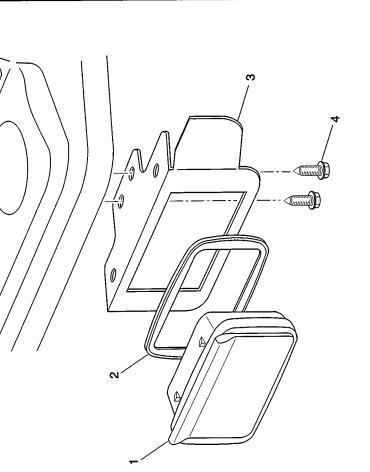

REV -		N	I I ATIC	VINSTALL ATION
	SCREW, 10-16 X 1/2" LG.	00100-G4	4	4
	BRACKET, ASH TRAY	75108-G01	-	က
	GASKET, ASH TRAY	27736-G01	-	2
	ASHTRAY	27731-G01	1	-
	DESCRIPTION	PART NO.	αтγ	ITEM QTY


THE SYMBOL A REFERS TO A NOTE CORRESPONDING TO THE LETTER ENCLOSED WITHIN IT.	SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS. RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING OF REPLACEMENT PARTS.
THE SYMBOL R	SEE FOLLOWING PAGE RETAIN THIS DOCUMEN REPLACEMENT PARTS.

ģ		DAN BY	L WEBB REV BY	REV BY	<	שאוואא
10 PF	ORIG DATE 01	ORIG DATE	01/21/94 REV DATE	REV DATE	1	NO. 75110
	E-Z-GO DIVISION OF TEXT	RON, INC., I	P.O. BOX 34	E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30913-2699, 1-800-241-5855	-800-	241-5855

ASH TRAY INSTALLATION

TITLE

PG. 1 OF 1

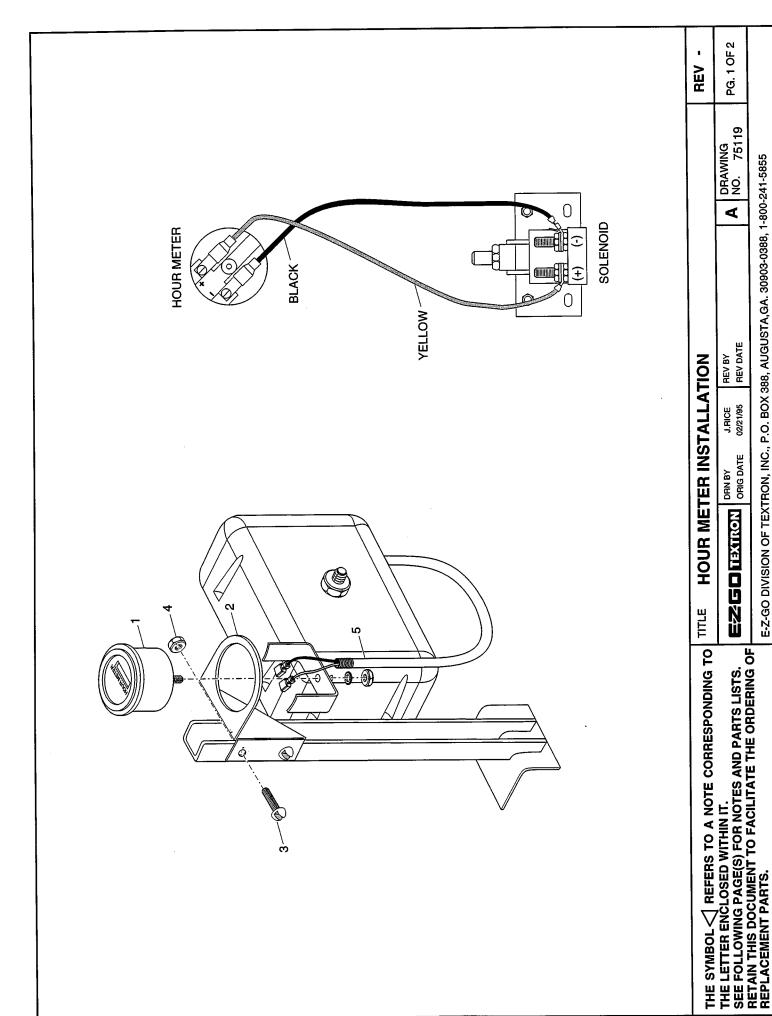

E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30903-0388, 1-800-241-5855

NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO. 75114-G02

READ ALL INSTRUCTIONS BEFORE PROCEEDING.

A. ASSEMBLE HOUR METER

- 1. Insert Hour Meter (item 1) through Bracket (item 2), positioned as shown.
- 2. Using hardware supplied with the Hour Meter, secure Hour Meter to Bracket.
- 3. Attach Harness (item 5) to Hour Meter as shown, Yellow wire to Positive (+) terminal and Black wire to Negative (-) terminal of Hour Meter.

B. ATTACH HOUR METER ASSEMBLY

 Locate predrilled holes in the driver's side seat support and secure the Hour Meter Assembly using Bolts (item 3) and Nuts (item 4) as shown.

C. CONNECT TO ELECTRONIC SPEED CONTROL

- 1. Locate the cables from the Electrical Control Panel to the batteries. Disconnect both of these cables from the batteries.
- 2. Remove the nut securing the cover on the Electrical Control Panel, and remove the cover from the Electrical Control Panel.
- 3. Remove the nut and lock washer from the left solenoid terminal and install Yellow wire from Harness to terminal and reinstall lock washer and nut.
- 4. Repeat procedure on right terminal for Black wire.
- 5. Replace cover and reinstall nut.
- 6. Reconnect Electrical Control Panel cabels to batteries as connected earlier.

ITEM	QTY	PART NO.	DESCRIPTION
-	-	21573-G1	METER, HOUR
8	-	74019-G01	BRACKET, HOUR METER
က	2	00150-G4	BOLT, #10-24 - 1/2 LG.
4	8	11098-G7	NUT, #10-24
5	_	75117-G01	HARNESS, HOUR METER

THE SYMBOL THE SYMBOL TO RICHARD TO A NOTE CORRESPONDING TO
SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS.
REI AIN THIS DOCUMENT TO TACILITATE THE CADERING OF

ח	EZZE TEXTRON	DRN BY ORIG DATE	J.RICE 02/21/95	REV BY REV DATE	A	DRAWING NO. 75119	6
5	E-Z-GO DIVISION OF TEXT	RON, INC., I	P.O. BOX 3	E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30903-0388, 1-800-241-5855	-800-	241-5855	

HOUR METER INSTALLATION

PG. 2 OF 2

REV


NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO. 75326-G02

READ ALL INSTRUCTIONS BEFORE PROCEEDING.

TOOL LIST	QTY. REQUIRED	TOOL LIST	QTY. REQUIRED
Socket, 9/16"	1	Wrench,9/16"	1
Ratchet	1	Torque Wrench	1

INSTALLING HITCH

- 1. Position hitch under rear bumper as shown and align holes in hitch with holes in bumper.
- Insert bolt through bumper and hitch from the top and place flat washer and lock washer on bolt as shown and secure with nut. Finger tighten nut at this time.
- 3. Repeat process in other three holes.
- 4. Square hitch with bumper and tighten nuts to 31 ft.lbs. torque.

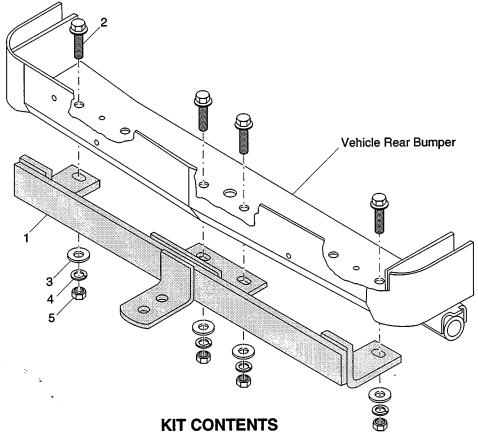

ITEM	QTY	PART NO.	DESCRIPTION	
1		75324-G01		
2	4	13437-G5		
			WASHER, 3/8"	
4	4	00566-G1	LOCK WASHER, 3/8"	
5	4	00532-G5	NUT, 3/8-16	
TITLE HITC	H INSTALLA	ATION INSTRUCT	IONS REV	-

TITLE HITCH INSTALL	ATION I	NSTRU	CTIONS			REV -
EZGO TEXTRON	DRN BY ORIG DATE	J.RICE 11/02/95	REV BY REV DATE	DRAWING NO.	75328	PG. 1 OF 1


NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO. 75327-G02

READ ALL INSTRUCTIONS BEFORE PROCEEDING.

TOOL LIST	QTY. REQUIRED	TOOL LIST	QTY. REQUIRED
Socket, 9/16"	1	Wrench,9/16"	1
Ratchet	1	Torque Wrench	1


A. INSTALLING HITCH

- 1. Position hitch under rear bumper as shown and align holes in hitch with holes in bumper.
- 2. Insert bolt through bumper and hitch from the top and place flat washer and lock washer on bolt as shown and secure with nut. Finger tighten nut at this time.
- 3. Repeat process in other three holes.
- 4. Square hitch with bumper and tighten nuts to 31 ft.lbs. torque.

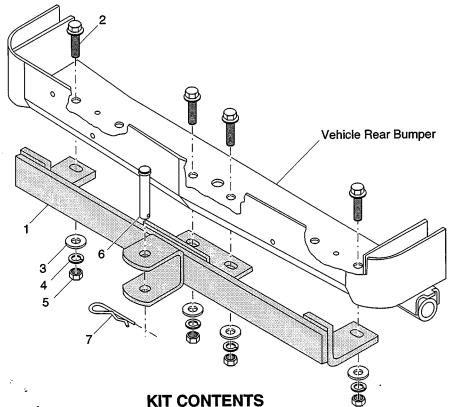

ITEM	QTY	PART NO.	DESCRIPTION	
1	1	75325-G01	HITCH	
• • • • • • • • • • • • • • • • • • • •			BOLT, 3/6-16 X 1 1/2" LG.	
			WASHER, 3/8"	
			LOCK WASHER, 3/8"	
5	4	00532-G5	NUT, 3/8-16	
		14443-G7		
7	1	19314-G1		
TITLE HITC	H INSTALL	ATION INSTRUCT	IONS	REV -

TITLE HITCH INSTALL	ATION INSTF	UCTIONS			REV -
=≠≥□ TEXTRON	DRN BY J.RICE ORIG DATE 11/02/95	REV BY REV DATE	DRAWING NO.	75329	PG. 1 OF 1

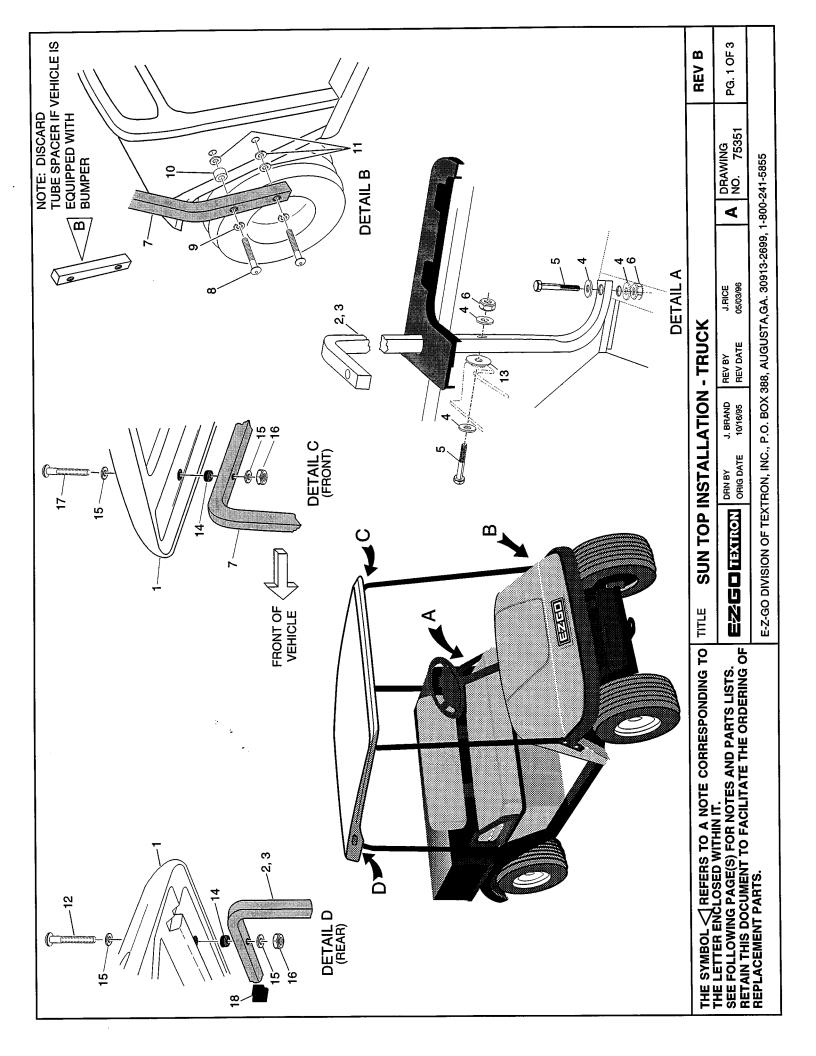

NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST 75350-G01

WITH WASHER, (ITEM 15), AND LOCK NUT, (ITEM 16). SEE ILLUSTRATIONS

FOR INSTALLATION SEQUENCE.

3. TIGHTEN ALL SUN TOP HARDWARE TO 3 - 5 FT. LBS. TORQUE. 4. TIGHTEN ALL REAR STRUT HARDWARE TO 13 - 15 FT. LBS. TORQUE. 5. TIGHTEN ALL FRONT STRUT HARDWARE TO 17 - 19 FT. LBS. TORQUE.

READ ALL INSTRUCTIONS BEFORE PROCEEDING.

A. REAR STRUTS (REFER TO DETAIL A)

- 1. PULL SEAT BOTTOM FORWARD TO GAIN ACCESS BELOW. REMOVE HOLE PLUG FROM PANELS.
- 2. INSERT TUBE END CAP (ITEM 18) IN TOP (LONG) END OF STRUT (ITEM 2
- 3. INSERT SHORT LEG OF REAR STRUT (ITEM 2) THROUGH HOLE. POSITION STRUT SO THAT LOWER (SHORT) LEG IS POINTING TOWARD THE FRONT OF THE VEHICLE, AND UPPER (LONG) LEG IS POINTING TOWARD THE CENTER OF THE VEHICLE.
- PLACE BOLT (ITEM 5) WITH WASHER (ITEM 4) THROUGH HOLE AT THE BOTTOM OF THE STRUT, AND THE HOLE IN THE FRAME. SECURE STRUT WITH WASHER (ITEM 4) AND NUT (ITEM 6).
- 5. REPEAT STEPS 2 AND 3 ON OTHER SIDE OF VEHICLE.
- PLACE BOLT (ITEM 5) WITH WASHER (ITEM 4) THROUGH SLOT IN FRAME, WASHER (ITEM 13) AND STRUT THEN SECURE WITH WASHER (ITEM 4) AND NUT (ITEM 6).
- 7. REPEAT STEP 6, ON OTHER SIDE OF VEHICLE.

B. FRONT STRUT - *NOTE: DISCARD TUBE SPACER IF VEHICLE IS EQUIPPED WITH BUMPER. (REFER TO DETAIL B)*

- 1. USING A 7/32" ALLEN WRENCH, REMOVE THE FOUR ALLEN HEAD BOLTS FROM THE FRONT COWL AND DISCARD.
- 2. AT THE TOP HOLE, INSTALL THE FRONT STRUT (ITEM 7) BETWEEN BUMPER, IF INSTALLED, AND COWL THEN SECURE WITH BOLT (ITEM 8) AND LOCK WASHER (ITEM 9) PLACING SPACER (ITEM 10) AND WASHER (ITEM 11) BETWEEN THE STRUT AND THE COWL. **DO NOT TIGHTEN HARDWARE.**
-), AT THE LOWER HOLE, PROCEED AS ABOVE, SUBSTITUTING 1 WASHER, (ITEM 11) FOR SPACER, (ITEM 10). **DO NOT TIGHTEN HARDWARE.**

C. SUN TOP (REFER TO DETAIL C & DETAIL D)

- 1. PLACE SUN TOP (ITEM 1) ONTO STRUTS.
- 2. SECURE SUN TOP LOOSELY WITH BOLT (ITEM 17 AT FRONT AND ITEM 12 AT REAR), WASHER, (ITEM 15) ABOVE THE SUN TOP, PLASTIC SPACER, (ITEM 14) BETWEEN THE STRUT AND UNDERSIDE OF SUN TOP. SECURE

QTY PAI	<u>A</u>	PART NO.	DESCRIPTION
1 27069-G01	27069-G01		TOP, SUN
1 75343-G01	75343-G01		STRUT, REAR, DRIVER SIDE
1 75343-G02	75343-G02		STRUT, REAR, PASSENGER SIDE
8 00571-G2	00571-G2	_	WASHER, 5/16"
4 00439-G6	00439-G6		BOLT, 5/16-18 X 1 3/4" LG
4 11098-G6	11098-G6		NUT, LOCK, 5/16-18
1 75045-G01	75045-G01		STRUT, FRONT
4 71056-G03	71056-G03		BOLT, 5/16-18 X 2 1/8" LG
4 00905-G8	00905-G8		WASHER, LOCK, 5/16"
2 75048-G01	75048-G01		SPACER
6 00570-G2	00570-G2		WASHER, 5/16"
2 00753-G6	00753-G6		BOLT, STAINLESS STEEL, 1/4-20 X2 1/4"
2 15121-G1	15121-G1		WASHER, 3/8" X 1 1/4"
4 75051-G01	75051-G01		SPACER, PLASTIC
8 00559-G7	00559-G7		WASHER, 1/4"
4 00891-G2	00891-G2		NUT, LOCK, 1/4-20
2 00753-G5	00753-G5		BOLT, STAINLESS STEEL,1/4-20 X 2" LG
2 19853-G1	19853-G1		CAP, TUBE, 1"


TITLE	E 21	E-7-GO
THE SYMBOL TREFERS TO A NOTE CORRESPONDING TO TITLE	SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS. RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING OF	REPLACEMENT PARTS.


	DRAWING	MO. 75351	
	<	<u> </u>	I
¥	J.RICE	96/03/96	
- TRUC	REV BY	REV DATE	
LATION	J. BRAND REV BY	10/16/95	
INSTAL	DRN BY	ORIG DATE	
SUN TOP INSTALLATION - TRUCK			
ITLE			


PG. 2 OF 3

REV B

E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30913-2699, 1-800-241-5855

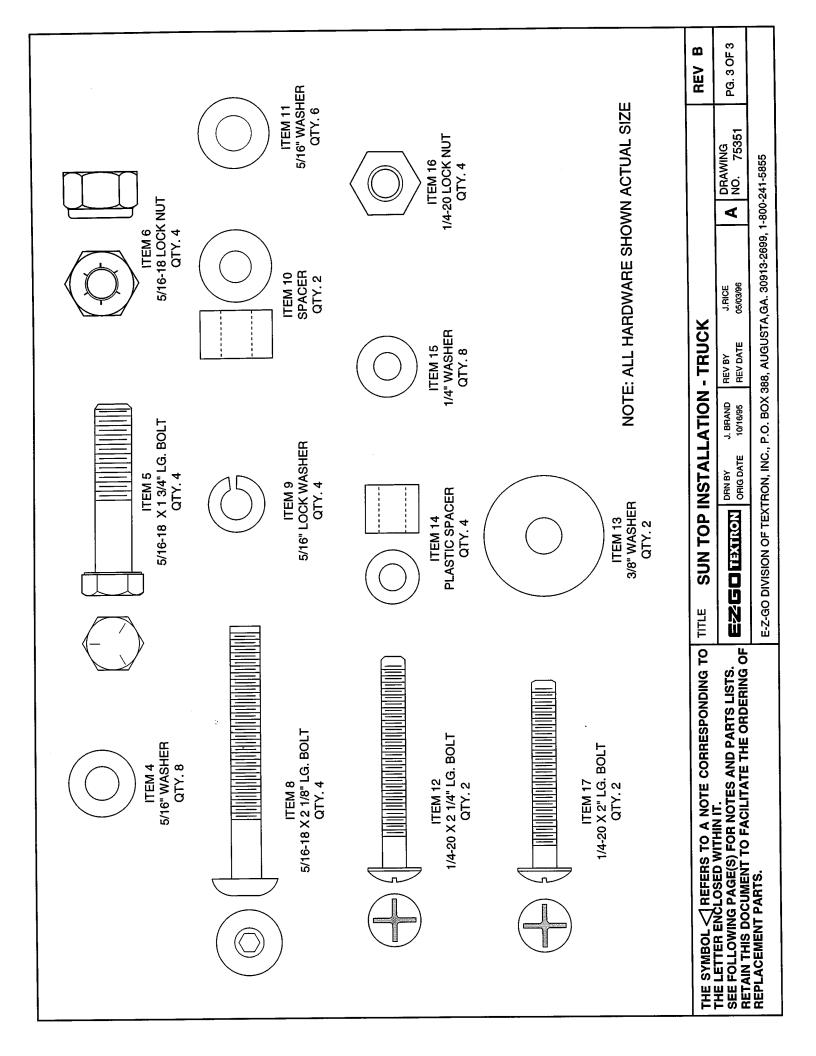

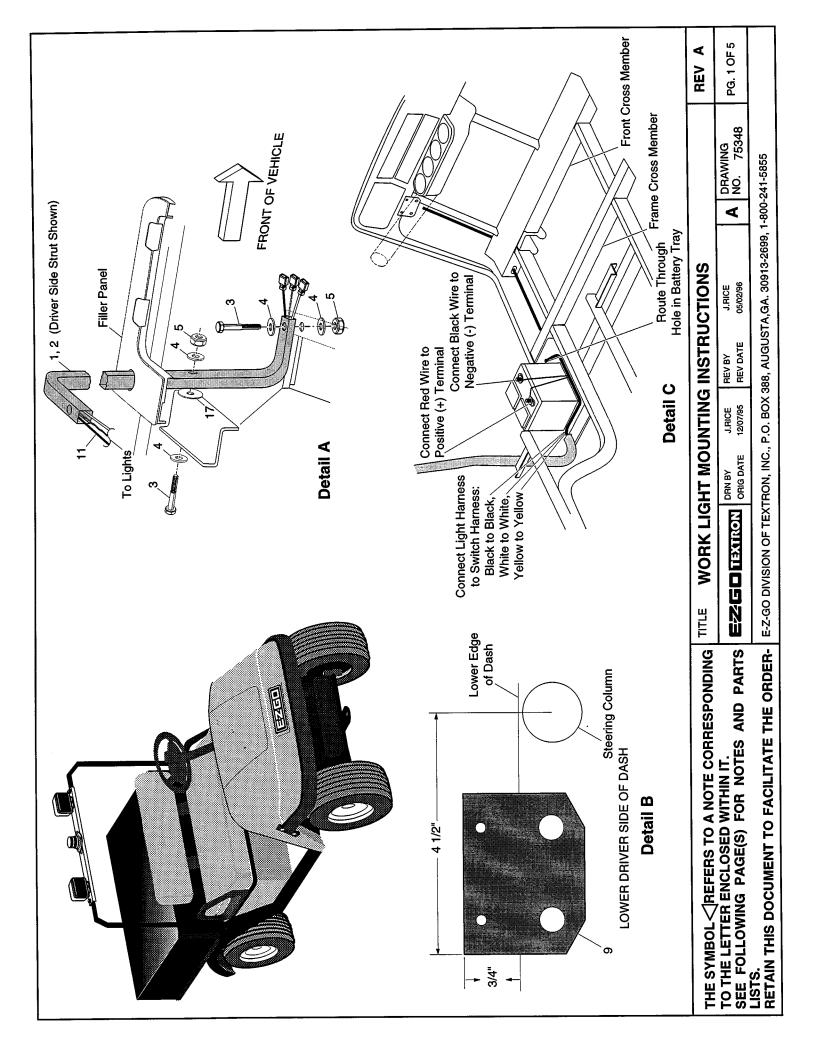

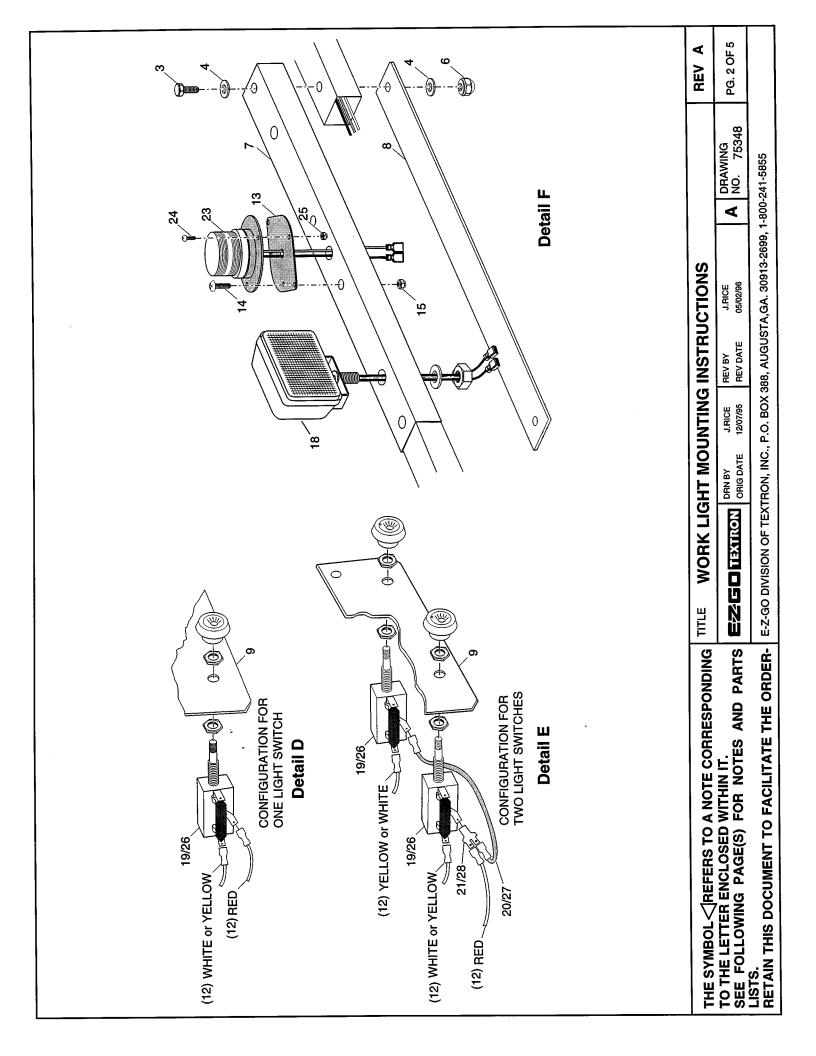

NOTE: TO ORDER EITHER OF THESE FIELD KITS, REQUEST 75354-G0*.

READ ALL INSTRUCTIONS BEFORE PROCEEDING.

A. INSTALLING THE WORK LIGHT STRUTS (See Detail A)

- (Fish the end with the three leads through the strut.) Stop pulling just before the side strut (item 2), being careful not to kink the harness as it is being inserted. 1. Using a flexible wire, fish the light harness (item 11) down through the driver first pair of connectors is pulled inside the top end of the strut.
- 2. Pull seat bottom forward to gain access to frame. Remove hole plugs from filler panels on each side of vehicle.
- through hole in filler panel and insert short leg of strut through hole in panel and rest leg on frame rail. (To be properly positioned, the short leg of strut should be pointed toward the front of the vehicle and the longer upper leg should be At driver side of vehicle, thread the end of strut with the three connectors pointed toward the center of the vehicle.)
 - Being careful not to chafe the harness inside the strut, insert bolt (item 3) with washer (item 4) through hole in lower strut leg and through hole in frame. In upper hole insert washer (item 17) between strut and frame. Secure with washer (item 4) and lock nut (item 5). (Two places each side)
- Repeat steps 3 and 4 on other side of vehicle. (Passenger side strut does not have harness.)

B. INSTALLING THE LIGHT SWITCH PLATE (See Detail B)

- 1. Position the left edge of the light switch plate (item 9) 4 1/2" left of the center of the steering column and the top edge 3/4" up from the bottom of the dash. Using the switch plate as a template, drill two 3/16" holes in the dash.
- 2. Attach the light switch plate to the dash using the rivets (item 10) provided.

C. ROUTING THE SWITCH HARNESS (See Detail C)

- from the switch harness (item 12), the yellow lead to the yellow terminal and the 1. Connect the white lead from the light harness (item 11) to the white terminal black lead to the black terminal.
- tery tray in front of the battery, through the oval hole in the frame cross member, the battery (toward the center of the vehicle), down through the hole in the bat-2. Being careful not to chafe the switch harness, route the switch harness around through the oval hole in the front cross member and up though the hole in the floor at the steering column.

 Adjust the harness as necessary to place the switch connectors at the rear of the switch plate and remove any excessive tightness or looseness in the har- ness routing.
djust ie sv ess i

4. Using the nylon clamps (item 16), secure the switch harness to the frame in three places.

ITEM	QTY	PART NO.	DESCRIPTION
_	1	75352-G01	WORK LIGHT STRUT, PASSENGER SIDE
7	-	75352-G02	WORK LIGHT STRUT, DRIVER SIDE
က	9	00685-G7	BOLT, 5/16 - 18 X 3/4" LG.
4	12	00660-G8	WASHER, 5/16"
ഹ	4	11098-G6	LOCK NUT, 5/16 - 18
9	2	00918-G3	ACORN NUT, 5/16 - 18
7	-	75353-G01	WORK LIGHT BRACE
8	-	75363-G01	COVER PLATE
6	-	75349-G01	LIGHT SWITCH PLATE
9	8	71055-G01	RIVET, 3/16" X 3/8" LG.
F	-	75346-G01	LIGHT HARNESS
12	-	75347-G01	SWITCH HARNESS
13	-	33201-G02	STROBE LIGHT MOUNT
4	8	16705-G3	SCREW, 1/4 - 20 X 3/4" LG.
15	8	14390-G4	LOCK NUT, 1/4 - 20
16	ო	17618-G1	CLAMP, NYLON
17	0	15121-G1	WASHER, 3/8" X 1 1/4"
18	2	20209-G2	WORK LIGHT (RECTANGULAR)
19	-	17317-G1	LIGHT SWITCH
20	-	20053-G1	WIRE, RED
21	-	17902-G1	TAB ADAPTER
22			-
23	_	20394-G1	STROBE LIGHT
24	ო	00379-G4	SCREW, #10 - 24 X 1/2" LG.
25	ო	11098-G7	LOCK NUT, #10 - 24
56	-	17317-G1	LIGHT SWITCH
27	_	20053-G1	WIRE, RED
28	~	17902-G1	TAB ADAPTER

THE SYMBOL < REFERS TO A NOTE CORRESPONDING TITLE WORK LIGHT MOUNTING INSTRUCTIONS	TITLE WORK LIG	HT MOUI	NTING	INSTRU	CTIONS
TO THE LETTER ENCLOSED WITHIN IT.		DRN BY	J.RICE REV BY	REV BY	J.RICE
SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS EXCLUINATION ORIGINATE		ORIG DATE	12/07/95	12/07/95 REV DATE	05/05/96
LISTS.				10110	0 00040
BETAIN THIS DOCUMENT TO FACILITATE THE ORDER! E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30913-2	E-Z-GO DIVISION OF TEXT	HON, INC., P	.O. BOX 3	88, AUGUST	A,GA. 30913-2

F-7-GO DIVISION OF TEXTBON, INC., P.O. BOX 388, AUGUSTA,GA, 30913-2699, 1-800-241-58	1-800-241-58
F-7-GO DIVISION OF TEXTBON, INC., P.O. BOX 388, AUGUSTA, GA	30913-2699,
F-Z-GO DIVISION OF TEXTBON, INC., P.O. BOX 388.	AUGUSTA,GA.
F-7-GO DIVISION OF TEXTBON, INC., P.	O. BOX 388,
F-7-GO DIVISION OF TEXTRO	ON. INC. P.
F-7-GO DIVISION	OF TEXTRO
F-7-(NOISIVIO OF
	E-Z-(

4

REV

PG. 3 OF 5

75348 DRAWING NO. 7534

4

D. CONNECTING AND INSTALLING THE LIGHT SWITCH/SWITCHES

- 1. If installing the two work lights (item 18), connect the white lead from the switch harness to the end terminal of the light switch (item 19). Connect the red lead from switch harness to the side terminal on the light switch. (See Detail D)
- harness to the end terminal of the light switch (item 26). Connect the red lead 2. If installing the strobe light (item 23), connect the yellow lead from the switch from switch harness to the side terminal on the light switch. (See Detail D)
- ness to one leg of the tab adapter. Using red wire from one of the light kits (item 20 or 27), connect one end to the other leg of the tab adapter and the other end above. Place the tab adapter from one of the light kits (item 21 or 28) onto the side terminal of either light switch. Connect the red lead from the switch har-3. If installing both light kits, connect the white and yellow leads as described to the side terminal of the other switch. (See Detail E)
- 4. Unscrew the switch knob and outer jam nut and insert the light switch(es), (item 19 and/or 26) in the light switch plate from the rear and replace nut and knob to he switch shaft.

E. INSTALLING THE RECTANGULAR WORK LAMPS (See Detail F)

- 1. Thread the leads of the work light (item 18) through the large hole on the end of Secure the work light to the work light brace with lock washer and nut provided the work light brace (item 7) and place the threaded post through the hole. with the light. Repeat the procedure at other side of work light brace.
- 2. Position work lights and tighten nut securely.
- 3. Place work light brace on top of strut and insert bolt (item 3) with washer (item 4) through hole in each end of brace and through holes in strut. Install acorn nuts (item 6) and finger tighten nut at this time.
- 4. Connect one black lead on work light to white lead on light harness and other black lead on work light to black lead on light harness. Repeat at other work light. If installing strobe lamp, proceed to Section F.
- Secure with washer (item 4) and acorn nut (item 6). Tighten hardware securely. Remove the acorn nuts, and being careful not to pinch the wiring, place the cover plate (item 8) under the struts and on the bolts previously installed.

F. INSTALLING THE STROBE LAMP (See Detail F)

1. Thread the leads of the strobe light (item 23) through the hole in the strobe light mount (item 13) and attach the strobe light to the mount using screws (item 24) and lock nuts (item 25)

- brace (item 7) and attach the strobe light mount with light installed to the work Thread the leads of the strobe light through the center hole of the work light light brace using screw (item 14) and lock nut (item 15).
- Place brace on top of strut and insert bolt (item 3) with washer (item 4) through hole in each end of brace and through holes in strut. Install acorn nuts (item 6) and tighten nuts finger tight at this time. က
- Connect the black lead from the strobe light to the black lead from the light har-Connect the red lead from the light to the yellow lead from the light harness.
- Secure with washer (item 4) and acorn nut (item 6). Tighten hardware securely. 5. Remove the acorn nuts, and being careful not to pinch the wiring, place the cover plate (item 8) under the struts and on the bolts previously installed.

G. CONNECTING HARNESS TO BATTERY (See Detail C)

- 1. Using an insulated wrench, attach black wire of switch harness (item 12) to negative (-) battery terminal clamp using existing hardware.
- 2. Attach red wire of switch harness (item 12) to positive (+) battery terminal clamp using existing hardware.


THE SYMBOL < REFERS TO A NOTE CORRESPONDING	RRESPONDING TITLE WORK LIGHT MOUNTING INSTRUCTIONS	HT MOUNTING	S INSTRUCT	SNOL		
		DRN BY J.RICE	REV BY	J.RICE	-	DRAWING
OLLOWING PAGE(S) FOR NOTES	AND PARTS EZZELLIBALKOM ORIGIDATE		12/07/95 REV DATE 05	05/02/96	•	NO. 753
LISTS. RETAIN THIS DOCUMENT TO FACILITATE THE ORDER- E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA, GA. 30913-2699, 1-800-241-5855	E-Z-GO DIVISION OF TEXT	RON, INC., P.O. BOX	388, AUGUSTA,G	A. 30913-2699, 1	-800-2	41-5855

1 77	3					
NO. 75348	•	05/02/96	REV DATE (12/07/95	ORIG DATE	
	<	J.RICE	REV BY	J.RICE	DRN BY	ו ב

⋖

REV

PG. 4 OF 5

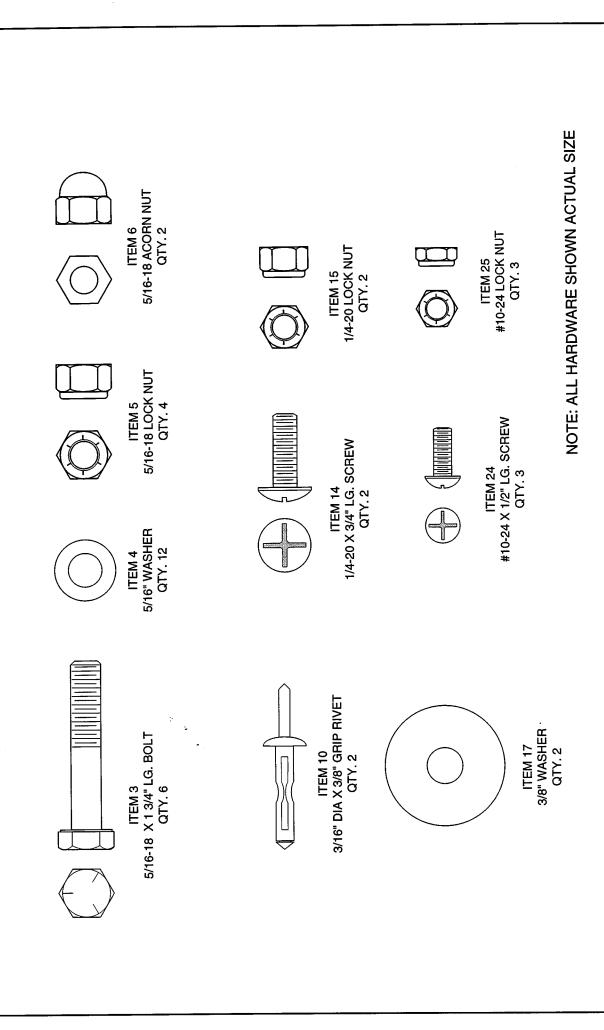

PG. 5 OF 5

DRAWING NO. 75348

4

J.RICE 05/02/96

REV BY REV DATE

J.RICE 12/07/95

DRN BY ORIG DATE

TO THE LETTER ENCLOSED WITHIN IT.

SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS

EZGDISTINON

LISTS.

THE SYMBOL < REFERS TO A NOTE CORRESPONDING | TITLE

WORK LIGHT MOUNTING INSTRUCTIONS

RETAIN THIS DOCUMENT TO FACILITATE THE ORDER- | E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30913-2699, 1-800-241-5855

REV A

NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO. 75367-G01

READ ALL INSTRUCTIONS BEFORE PROCEEDING.

A. POSITION ENCLOSURE ON SUNTOP

- 1. Place folded enclosure on Sun Top.
- 2. Unfold the enclosure and reposition as necessary to allow clear rear window of enclosure to drape between the seat back and the cargo bed. The sides should hang naturally to the floorboard sill plates.
- 3. Move enclosure forward just enough to allow front edge to fit over the front edge of the Sun Top. Pull enclosure toward rear of vehicle to smooth out wrinkles.

B. APPLY VELCRO TAPE TO FRONT STRUTS

- 1. Remove the Velcro tape (hook tape) from the front edge of side curtain.
- 2. Remove the backing tape from the hook tape and, starting at the top of the strut just over the bend, apply the tape to the full length on the side of the front strut.
- 3. Repeat the procedure to the front strut on the other side.

C. SECURE FRONT OF ENCLOSURE TO FRONT STRUT

- 1. Starting at the top of enclosure front edge, attach enclosure to front strut by pressing enclosure edge to tape on side of front strut.
- 2. Repeat procedure on other side of vehicle.


D. ATTACH STRAPPED HOOKS TO LOWER EDGE OF BODY


- Loosen straps with hook attached to allow enough strap length so hooks may be hooked over the lower edge of floorboard sill plate at each end, and at rear of seat.
- Pull strap end to tighten enclosure.
- 3. Repeat procedure on other side of vehicle.
- 4. Adjust straps as necessary to remove wrinkles from enclosure and obtain a snug fit. .

E. OPEN SIDE


- 1. To open the side of enclosure, loosen hook straps, move zipper to the top of track, loosen front edge from strut.
- 2. Starting at the bottom, roll the side curtain up to the top and secure with straps under flap on side of top.

TITLE WEATHER ENG	LOSURE	INSTALL	ATION INSTRUC	CTIONS		REV -
EZG TEXTRON	DRN BY ORIG DATE	J.RICE 12/15/95	REV BY REV DATE	DRAWING NO.	75368	PG. 1 OF 2

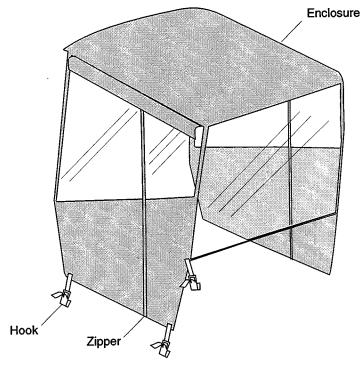


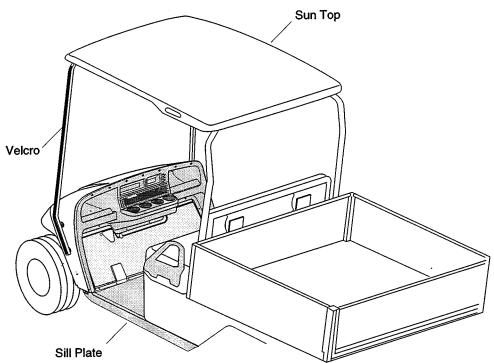


		CTIONS	REV -
J.RICE E 12/15/95	REV BY REV DATE	DRAWING 75368	PG. 2 OF 2
7			/5368

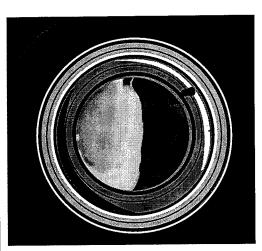

6" CHROME HUBCAP

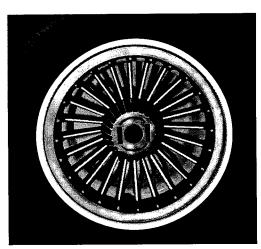

GOLD / SILVER SPOKE HUBCAP

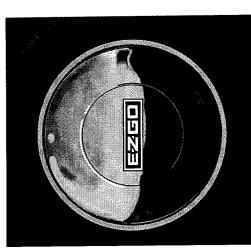

8" CHROME HUBCAP

ITEM	QTY	PART NO.	DESCRIPTION
-	-	14913-G1	8" CHROME HUBCAP
8	4	14913-G2	8" CHROME HUBCAP SET
က	_	16042-G1	6" CHROME HUBCAP
4	4	16042-G2	6" CHROME HUBCAP SET
2	-	19241-G2	GOLD SPOKE HUBCAP
9	4	19241-G4	GOLD SPOKE HUBCAP SET
7	-	19241-G1	SILVER SPOKE HUBCAP
80	4	19241-G3	SILVER SPOKE HUBCAP SET

ORRESPONDING TO TITLE	IND PARTS LISTS.	E-Z-GO
THE SYMBOL A REFERS TO A NOTE CORRESPONDING TO TITLE	SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS. RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING OF	REPLACEMENT PARTS.

DRAWING	M NO. 28244	
REV BY	REV DATE	
ССТ	02/07/95	
DRN BY	ORIG DATE	
v.	GOF	;

WHEEL COVER INSTALLATION

PG. 1 OF 1

REV -

ON OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30913-2699, 1-800-241-5855
669
13-2
309
GA.
STA,
<u>S</u>
, AU
388
õ
ö.
7.
Z
8
E
Ê
P
<u>8</u>
-Z-GO DIVISION
ō
Z-GC
<u>'</u>



a TEXTRON Company

E-Z-GO Division of Textron Inc.

P.O. Box 388 Augusta, Georgia 30903-0388 USA

Inside USA Phone: 1-800-227-7029, FAX: 1-800-752-6175

Outside USA Phone: 010-1-706-798-4311, FAX: 010-1-706-771-4601

Copyrighted Material
This manual may not be reproduced in whole or
in part without the express permission of
E-Z-GO Division of Textron Inc.
Technical Communications Department